

Operating Manual

**DLS 400**  
**Wireline Simulator**

**Consultronics**

Revision 9  
Jan 12, 1998



**TABLE OF CONTENTS**

<b>1. INTRODUCTION .....</b>	<b>1</b>
1.1 ABOUT THE DLS 400 ADSL WIRELINE SIMULATOR .....	1
1.2 ABOUT THIS MANUAL.....	2
<b>2. QUICK START .....</b>	<b>3</b>
<b>3. GETTING STARTED .....</b>	<b>4</b>
3.1 RECEIVING AND UNPACKING THE UNIT.....	4
3.2 DLS 400 FRONT AND REAR PANELS .....	4
3.3 DIGITAL CONNECTIONS .....	5
3.4 ANALOG CONNECTIONS .....	6
3.5 RJ-45 ADAPTER .....	7
3.6 LEDS .....	7
3.7 WHAT YOU NEED .....	8
3.8 CONNECTING POWER TO THE DLS 400 .....	8
3.9 DLS 400 SELF-TEST .....	8
<b>4. DLS 400 SOFTWARE .....</b>	<b>10</b>
4.1 SOFTWARE INSTALLATION.....	10
4.1.1 To Install National Instruments GPIB Software (IEEE 488 operation only).....	10
4.1.2 To Install the GPIB-PCII/IIA Card (IEEE 488 operation only) .....	10
4.1.3 How to Check if the NI card is installed properly.....	11
4.1.4 To Install the DLS&NSA400 Software .....	12
4.2 OPERATING TWO OR MORE UNITS, FROM THE 400 SERIES, CONCURRENTLY .....	12
4.3 MAIN SCREEN .....	13
4.4 SYSTEM CONFIGURATION.....	13
4.5 CONTROL SCREEN.....	14
4.6 IMPAIRMENTS CONTROL PANEL .....	15
4.7 EDITING IMPAIRMENTS SCREEN .....	16
4.8 EDIT LONGITUDINAL VOLTAGE.....	18
4.9 STANDARD SETTINGS .....	18
4.10 IMPULSE CONTROL .....	19

<b>5. DLS 400 ADSL SIMULATOR.....</b>	<b>20</b>
5.1 DLS 400 DESCRIPTION .....	20
5.2 LOOPS DESCRIPTION .....	21
5.3 IMPAIRMENTS GENERATOR .....	32
5.3.1 General .....	32
5.3.2 Grouped Impairments.....	33
5.3.3 Basic Rate Testing, ANSI T1.E1 T1.601 standard .....	33
5.3.4 HDSL Rate Testing, ANSI Technical Report on HDSL .....	33
5.3.5 HDSL2 Rate Testing, ANSI Proposed Working Draft for HDSL2 Standard (T1E1.4/98-268).....	33
5.3.6 ADSL Rate Testing, ANSI T1.413, Issue I and II .....	34
5.3.7 ADSL Rate Testing, ITU Standard for G. Lite .....	34
5.3.8 Basic Rate Testing, ETSI TS 102 080 ISDN Standard.....	34
5.3.9 HDSL Rate Testing, ETSI ETR 152 HDSL Standard .....	35
5.3.10 European ADSL rate testing, ETSI ETR 328 ADSL Standard .....	35
5.4 INDIVIDUAL IMPAIRMENTS .....	35
5.4.1 Impairment Card Organization .....	41
5.4.2 Output Stage.....	41
5.4.3 Crosstalk Generators A and B.....	42
5.4.4 Crosstalk Generator C .....	43
5.4.5 Shaped Noise Generator.....	43
5.4.6 Flat White Noise Generator .....	43
5.4.7 Impulse Generator .....	44
5.4.8 Powerline Related Impairments .....	44
5.4.9 External Noise .....	44
5.4.10 Powerline Related Impairments .....	44
5.5 FUSE CONFIGURATION.....	47
<b>6. REMOTE CONTROL.....</b>	<b>48</b>
6.1 IEEE 488 INTERFACE.....	48
6.1.1 DLS 400 IEEE 488 Address. ....	49
6.1.2 The Service Request (SRQ) Line.....	49
6.1.3 Resetting the DLS 400 .....	50
6.1.4 Message Terminators .....	50
6.1.5 Example using the IEEE 488 Interface .....	51
6.2 RS-232 SERIAL INTERFACE .....	52

---

6.2.1	Message Terminators .....	53
6.2.2	Example using the RS-232 Interface.....	53
6.3	DATA FORMATS .....	54
6.4	COMMAND SYNTAX.....	55
6.5	DEVICE DEPENDENT COMMAND SET FOR LOOPS .....	56
6.5.1	SETting:CHANnel:LOOP <Loop Name>.....	57
6.5.2	:SETting:CHANnel:TAP_A <NRf>.....	58
6.5.3	:SETting:CHANnel:LINE <NRf> .....	58
6.5.4	SETting:CHANnel:TAP_B <NRf>.....	59
6.5.5	SETting:CHANnel:DIRection FORWARD REVerse.....	59
6.5.6	SETTING:PWRLINE:LONGITUDINAL:STATE <OFF/ON> .....	60
<b>7.</b>	<b>IMPAIRMENTS COMMANDS SUMMARY .....</b>	<b>61</b>
<b>8.</b>	<b>IMPAIRMENTS COMMANDS DETAILS .....</b>	<b>63</b>
8.1	CROSSTALK GENERATOR A.....	63
8.1.1	XTalk Generator A - Type .....	63
8.1.2	Xtalk Generator A - Level.....	63
8.2	CROSSTALK GENERATOR B .....	63
8.2.1	Xtalk Generator B - Type.....	63
8.2.2	Xtalk Generator B - Level.....	64
8.2.3	Xtalk Generator B – Program .....	64
8.3	CROSSTALK GENERATOR C .....	64
8.3.1	Xtalk Generator C - Type.....	64
8.3.2	Xtalk Generator C - Level.....	65
8.3.3	Xtalk Generator C - Program .....	65
8.4	SHAPED NOISE GENERATOR .....	65
8.4.1	Shaped Noise Generator - Type .....	65
8.4.2	Shaped Noise Generator - Level .....	66
8.4.3	Shaped Noise Generator – Program.....	66
8.5	WHITE NOISE GENERATOR .....	66
8.5.1	Flat White Noise Generator - State .....	66
8.5.2	Flat White Noise Generator - Level.....	66
8.6	IMPULSES .....	67
8.6.1	Impulses - Type.....	67
8.6.2	Impulses - Width .....	67
8.6.3	Impulses - Level.....	67
8.6.4	Impulses - Rate.....	68

## ***DLS 400 Operating Manual***

8.6.5	Impulses - Single Shot.....	68
8.7	POWERLINE RELATED IMPAIRMENTS .....	68
8.7.1	Metallic Noise Sine Wave Generators .....	68
8.7.2	Longitudinal Noise Triangle Wave Generator.....	69
8.8	QUIET.....	70
8.9	OUTPUT STAGE .....	71
8.10	SENDING DOWNLOADABLE SHAPES FILES TO THE NSA 400.....	71
<b>9.</b>	<b>COMMON COMMAND SET .....</b>	<b>75</b>
9.1	STATUS REPORTING.....	80
9.1.1	Status Byte Register (STB).....	80
9.1.2	Event Status Register (ESR) .....	81
9.2	DLS 400 SYNCHRONIZATION .....	82
<b>10.</b>	<b>TROUBLE SHOOTING .....</b>	<b>83</b>
<b>11.</b>	<b>CHARACTERISTICS OF FIXED LOOPS .....</b>	<b>85</b>
11.1.1	CSA LOOP #1 .....	86
11.1.2	CSA LOOP #2 .....	88
11.1.3	CSA LOOP #4 .....	90
11.1.4	CSA LOOP #5 .....	92
11.1.5	CSA LOOP #6 .....	94
11.1.6	CSA LOOP #7 .....	96
11.1.7	CSA LOOP #8 .....	98
11.1.8	EXTENDED-CSA LOOP #9 .....	100
11.1.9	EXTENDED-CSA LOOP #10 .....	102
11.1.10	MID-CSA LOOP #0.....	104
11.1.11	MID-CSA LOOP #1 .....	106
11.1.12	MID-CSA LOOP #2 .....	108
11.1.13	MID-CSA LOOP #3 .....	110
11.1.14	MID-CSA LOOP #4 .....	112
11.1.15	MID-CSA LOOP #5 .....	114
11.1.16	MID-CSA LOOP #6 .....	116
11.1.17	ANSI LOOP #2.....	118
11.1.18	ANSI LOOP #3.....	120
11.1.19	ANSI LOOP #4.....	122
11.1.20	ANSI LOOP #5.....	124
11.1.21	ANSI LOOP #6.....	126

## ***DLS 400 Operating Manual***

11.1.22	ANSI LOOP #7 .....	128
11.1.23	ANSI LOOP #8 .....	130
11.1.24	ANSI LOOP #9 .....	132
11.1.25	ANSI LOOP #11 .....	134
11.1.26	ANSI LOOP #12 .....	136
11.1.27	ANSI LOOP #13 .....	138
11.1.28	ANSI LOOP #15 .....	140
<b>12.</b>	<b>CHARACTERISTICS OF IMPAIRMENTS .....</b>	<b>142</b>
	GRAPHS OF THE NOISE SHAPES PRODUCED IN GENERATORS A & B: .....	142
12.2	GRAPHS OF THE NOISE SHAPES PRODUCED IN GENERATOR C: .....	148
<b>13.</b>	<b>REFERENCES .....</b>	<b>153</b>
<b>14.</b>	<b>WARRANTY .....</b>	<b>154</b>
<b>15.</b>	<b>SHIPPING THE DLS 400 .....</b>	<b>156</b>
<b>16.</b>	<b>SPECIFICATIONS .....</b>	<b>157</b>
16.1	GENERAL .....	157
16.2	SIMULATED LOOPS .....	157
16.2.1	Description .....	157
16.3	IMPAIRMENTS CARD .....	158
16.3.1	White Noise Generator .....	159
16.3.2	NEXT Generators A and B .....	159
16.3.3	NEXT Generator C .....	160
16.3.4	Multi Tone Generator .....	161
16.3.5	Impulses .....	161
16.3.6	Powerline Related Metallic Noise .....	162
16.3.7	Longitudinal Noise .....	162
16.3.8	Externally Generated Signals .....	162
16.4	PHYSICAL .....	162
16.5	IEEE 488 REMOTE CONTROL: .....	163
16.6	RS-232 REMOTE CONTROL: .....	163
16.7	FUSE .....	163
16.8	INCLUDED: .....	163
16.9	OPTIONS .....	164
16.10	ELECTRICAL .....	164

***DLS 400 Operating Manual***

---

16.10.1	AC Power.....	164
16.10.2	On Simulated Wireline.....	164
16.11	ENVIRONMENTAL .....	164
16.12	MECHANICAL.....	165
16.13	OPERATING CONDITIONS .....	165
<b>17.</b>	<b>SAFETY .....</b>	<b>166</b>
17.1	INFORMATION .....	166
17.1.1	Protective Grounding (Earthing).....	166
17.1.2	Before Operating the Unit.....	166
17.1.3	Supply Power Requirements.....	167
17.1.4	Main Fuse Type.....	167
17.1.5	Connections to a Power Supply .....	167
17.1.6	Operating Environment.....	167
17.1.7	Class of Equipment .....	167
17.2	INSTRUCTIONS .....	168
17.2.1	Before Operating the Unit.....	168
17.2.2	Operating the Unit.....	168
17.3	SYMBOLS .....	169



## Table of Figures

FIGURE 1 - DLS 400 FRONT PANEL .....	4
FIGURE 2 - DLS 400 BACK PANEL.....	5
FIGURE 3 - DLS 400 INTERNAL CONNECTION PATHS.....	7
FIGURE 4 - MAIN SCREEN .....	13
FIGURE 5 - SYSTEM CONFIGURATION SCREEN .....	14
FIGURE 6 - CONTROL SCREEN.....	14
FIGURE 7 - IMPAIRMENTS CONTROL PANEL .....	15
FIGURE 8 - EDITING IMPAIRMENTS SCREEN.....	16
FIGURE 9 - EDIT LONGITUDINAL VOLTAGE .....	18
FIGURE 10 - LOAD IMPAIRMENTS COMBINATION FROM STANDARDS .....	18
FIGURE 11 - ANSI LONGITUDINAL LOAD CONFIGURATION .....	46
FIGURE 12 - ETSI LONGITUDINAL LOAD CONFIGURATION.....	46
FIGURE 13 - T1.601 NEXT .....	142
FIGURE 14 - DSL NEXT .....	143
FIGURE 15 - HDSL NEXT .....	143
FIGURE 16 - HDSL + ADSL NEXT .....	144
FIGURE 17 - T1.413 II EC ADSL UPSTREAM NEXT.....	144
FIGURE 18 - T1.413 II EC ADSL UPSTREAM FEXT (9 KFT 26 AWG).....	145
FIGURE 19 - T1.413 II FDM ADSL UPSTREAM NEXT .....	145
FIGURE 20 - ITU-T NA FDM ADSL DOWNSTREAM FEXT .....	146
FIGURE 21 - ITU-T NA ADSL UPSTREAM FEXT .....	146
FIGURE 22 - HDSL2 DOWNSTREAM NEXT (H2TUC) .....	147
FIGURE 23 - HDSL2 UPSTREAM NEXT (H2TUR) .....	147
FIGURE 24 - ADSL FEXT.....	148
FIGURE 25 - MODEL A .....	148
FIGURE 26 - MODEL B .....	149
FIGURE 27 - T1 NEXT .....	149
FIGURE 28 - INTERNATIONAL AMI .....	150
FIGURE 29 - T1.413 II T1 (AMI) NEXT.....	150
FIGURE 30 - T1.413 II EC ADSL DOWNSTREAM NEXT.....	151
FIGURE 31 - T1.413 II FDM ADSL DOWNSTREAM NEXT .....	151
FIGURE 32 - T1.413 II FDM DOWNSTREAM FEXT (9KFT 26 AWG) .....	152
FIGURE 33 - ITU-T NA FDM ADSL DOWNSTREAM NEXT.....	152





---

# 1. INTRODUCTION

---

Thank you for choosing Consultronics.

Consultronics has been in the wireline simulation business for over 20 years now. Since the days of the S2, Consultronics has designed many new units both to customers specifications and to conform to an ever-growing range of standards. By introducing the DLS 100 in 1985 we believe that we sold the world's first truly wideband wireline simulator to successfully simulate attenuation, characteristic impedance and delay.

The DLS 400 represents the latest simulator in the DLS line, and the one with the widest frequency response.

## 1.1 About the DLS 400 ADSL Wireline Simulator

The DLS 400 simulates twisted pair copper cables, sometimes called wirelines, to high frequencies. It provides over 30 different configurations of these cables. It is particularly suitable for testing Asymmetrical Digital Subscriber Loop (ADSL) transmission products, but can be used to test many other digital transmission products as well.

In addition to the loop simulations, it is possible to add up to 2 wideband impairments generators, sometimes known as "impairments cards" to the unit. This allows the user to add a wide variety of impairments to the signals at one end of the line, and test telecommunications transmission systems according to specifications recommended by both European (ETSI) and North American (ANSI) and International (ITU-T) standards bodies.

With downloadable shapes, Consultronics now offers the possibility of easily adding more crosstalk noise shapes as standards change. Impairments files will be stored on disk, and users may load these files into their noise and impairment module using Windows 95 software. New impairments are added simply by reading them into the NSA or DLS 400 as a new file.

The DLS 400 unit is controlled by software running on any Windows 95 computer. It includes both IEEE 488 and RS-232 interfaces for easy integration into a larger test system.



### **1.2 About this Manual**

This manual contains a “Quick Start” section which lets experienced users get “up-and-running” quickly. First time users should read the Getting Started section thoroughly before powering up the DLS 400. The remainder of the manual contains information about the software, the remote controls, warranty, specification and performance.

If you have any questions after reading this manual, please contact your Consultronics sales representative or our Ottawa Customer Service department at the locations listed in section 11, “Warranty”, of this manual.

Please fill out the customer feedback card, located at the front of this manual, and provide us with your comments. We use your observations and suggestions to keep our manuals, and software, up-to-date and easy to use.



---

## 2. QUICK START

---

This section is for experienced users. If you are using the DLS 400 for the first time, please read section 3, “Getting Started”.

- 1) Connect the power cord to the DLS 400 and switch the power on.
- 2) Connect either the IEEE 488 or the RS-232 cable.
- 3) Connect your “Central Office” equipment to side A of the DLS 400.
- 4) Connect your “Customer Site” equipment to side B of the DLS 400.
- 5) Start the software DLS&NSA400.EXE.
- 6) Select the desired loop, and if applicable, the length.
- 7) Select the desired impairments.
- 8) Do your testing.




## 3. GETTING STARTED

### 3.1 Receiving and Unpacking the Unit

The DLS 400 has been shipped to you in a reinforced shipping container. Retain this container for any future shipments.


Check that you received all the items as per the packing list and report any discrepancies as soon as possible.

### 3.2 DLS 400 Front and Rear Panels

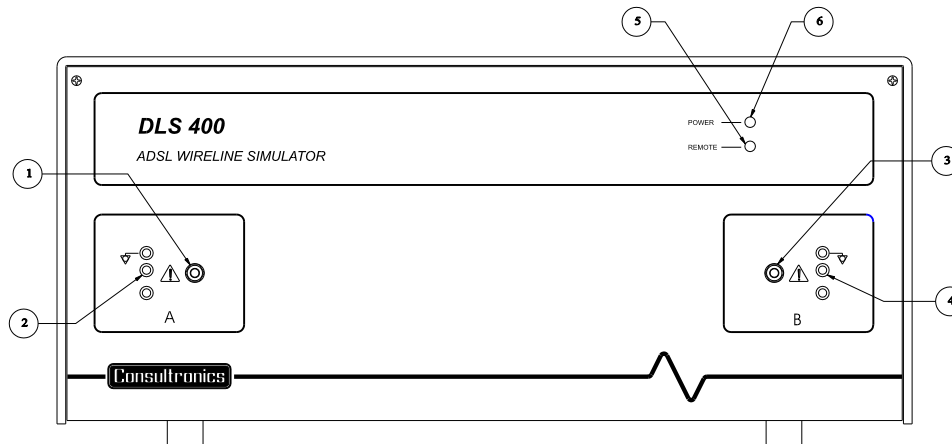

**Figure 1 - DLS 400 Front Panel**

- 1) Side A bantam jack
- 2) Side A balanced CF connector
- 3) Side B bantam jack
- 4) Side B balanced CF connector
- 5) Remote LED
- 6) Power LED

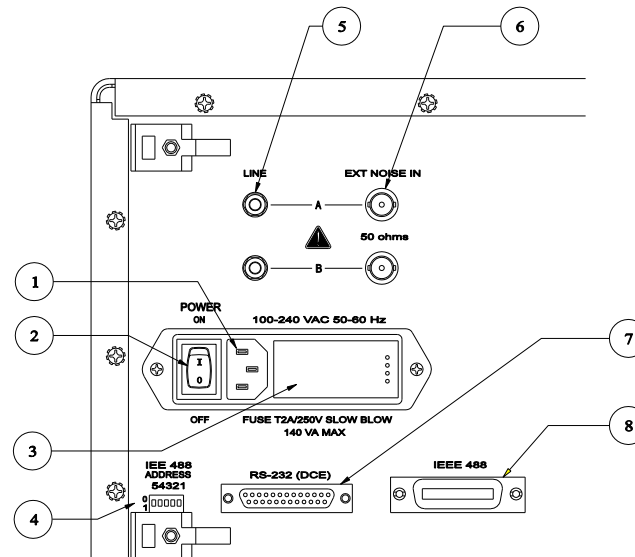

**Figure 2 - DLS 400 Back Panel**

- 1) Power Input
- 2) Power On / Off Switch
- 3) Fuse box
- 4) IEEE 488 Address DIP switch
- 5) Side A line input / output (bantam jack)
- 6) External Noise input (BNC connector)
- 7) RS-232 (DCE) serial connector
- 8) IEEE 488 connector

### 3.3 Digital Connections

The DLS 400 works with either an IEEE 488 or an RS-232 interface. Depending on your preference, do either paragraph 1 or 2.



## *Getting Started*

---

- 1) National Instruments GPIB-PCII card users only - If necessary, install the card in your computer. (See Section 4 for more details on installing the N.I. card and drivers.) Connect one end of an IEEE 488 cable to the IEEE 488 connector located on the back panel of the DLS 400. Connect the other end of the IEEE 488 connector to the IEEE 488 interface card in the computer.
- 2) Serial port users only - Connect one end of an RS-232 serial cable to the RS-232 connector located on the back panel of the DLS 400. Connect the other end to a serial port connector on the computer. The DLS 400 software works with COM1, COM2, COM3, or COM4.

### **3.4 Analog connections**

The bantam connector on the DLS 400 is a 3-wire (ring, tip, sleeve) balanced connector with a diameter of 0.173" (4.39mm). The connector is also known under other names: miniature telephone connector, mini 310 connector, bantam telco jack, etc.


The CF connector is a balanced 3-pin (ring, tip, ground) connector. It is possible to use banana plugs instead of the CF connector, but note that the distance between the pins is not the 0.75" spacing used in North America.

The DLS 400 provides a bi-directional wireline simulation.

Connect your "Central Office" equipment (or equivalent) to side "A" of the DLS 400, and connect your "Remote Device" (or equivalent) to side "B" of the wireline. You can use either the Bantam or CF connectors on the front of the unit, or the connectors on the back of the unit. Note that all the Bantam jacks and 3-pin CF connectors on each side are balanced and connected in parallel.

If any impairments card are installed in your system, you can inject many built-in impairments on to one end of the simulated line. In addition, you can inject externally-generated impairments using the "EXT NOISE IN" BNC connectors on the back of the DLS 400.



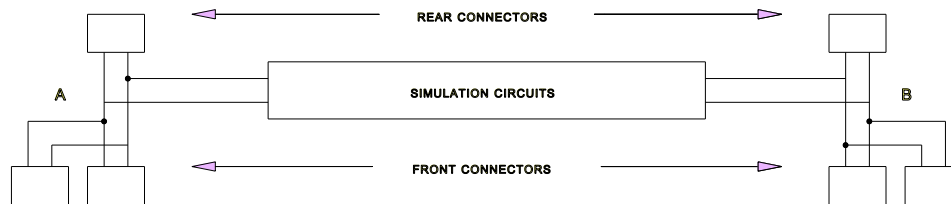

**Figure 3 - DLS 400 Internal Connection Paths**

### 3.5 RJ-45 Adapter

In some cases, twisting of the Bantam connectors has introduced unwanted noise in testing. An RJ-45 connection will resolve this problem. Two RJ-45 adapters (one for each side) are now provided with all DLS 400 units. This adapter will convert our CF connection to two RJ-45 connections.

### 3.6 LEDs

The DLS 400 has 2 LEDs which indicate the power status and the remote status.

The POWER LED turns green when the power is turned on or after a reset. Exceptionally, the power LED will turn blinking red if it fails its self-test, or yellow if it detects an internal error.

The REMOTE LED turns off after a power-up and a reset. When the DLS 400 receives the first remote message, the REMOTE LED will then turn green. If the DLS 400 detects an error in the message, the REMOTE LED will then turn red and stay red until the error flags are cleared (see the command \*ESR? in section 6.7 for more details). When the REMOTE LED is red, the DLS 400 can still communicate as normal, but the user should investigate why the error occurred. Sections 6.1.4 and 6.2.2 show examples of programs that will read the ESR register and clear the error flags.



### **3.7 What You Need**

To control the DLS 400, you'll need the following:

- DLS 400 ADSL Wireline Simulator
- DLS 400 software package
- Windows 95 compatible computer with either:
- National Instruments GPIB-PCII
- IEEE 488 cable

OR

- Serial port
- RS-232 serial cable

### **3.8 Connecting Power to the DLS 400**

Consultronics ships the DLS 400 with a 2-fuse configuration, see section 5.4, "Fuse Configuration".

Connect the power input on the back of the DLS 400 to an AC line voltage between 100 and 240VRMS, ( $\nabla 10\%$ ), 50 to 60 Hz. The DLS 400 can work with any voltage and frequency in this range, so you don't have to set any switches. The voltage selector on the rear panel has no effect.

One convenient feature of the DLS 400 is that the last configuration used is kept latched into the relays, allowing the unit to be used for wireline simulation even when the power is turned off.

### **3.9 DLS 400 Self-Test**

When you switch on the power or issue a reset, the DLS 400 does a series of self-tests. If any of the self-tests fail, the DLS 400 will flash the POWER LED red, in which case you should call the factory.

Following is a short description of some of the self-tests the DLS 400 performs:

- Checks if the checksum of the EPROM is valid.
- Checks if the non-volatile RAM and its self-contained battery are functional. The battery has an expected life of over 10 years, and, if necessary, it can be easily replaced.
- Checks if the micro-controller is functional.

After the self-tests, the DLS 400 re-establishes the loop that was in use before the unit was turned off or reset, but an impairments card, if present, resets itself, so that NO impairments are put out.



## **4. DLS 400 Software**

---

### **4.1 Software Installation**

Operation with an IEEE 488 interface requires installation of a National Instruments GPIB card and the associated GPIB software drivers. The GPIB software drivers must be installed before the installation of the DLS&NSA400 software.

If you are using an RS-232 interface, the NI card and drivers are not required.

If you already have the National Instruments card installed and working, or are using only a RS-232 interface, proceed to section 4.1.4 for information on installing the DLS&NSA400 software. Otherwise, follow the instructions below on installing the NI card and drivers.

#### **4.1.1 To Install National Instruments GPIB Software (IEEE 488 operation only)**

1. From the Windows 95 Start Menu, select “Settings” >> “Control Panel”.
2. In the control panel, select “Add/Remove Programs”.
3. Click on the “Install” button, and then “Next”.
4. Insert the first installation disk of the GPIB Software for Windows 95 (NI-488.2M software) in drive A, and select “Next”, then “Finish”.
5. The National Instruments GPIB setup will begin, and a “GPIB Setting Options” screen will appear. Select the first option (Install NI-488.2M Software for Windows 95), and follow the instructions to install the software.

#### **4.1.2 To Install the GPIB-PCII/IIA Card (IEEE 488 operation only)**

1. From the Windows 95 Start Menu choose “Settings” >> “Control Panel”, followed by “Add New Hardware”. Click on the “Next” button to start the process. At this point, Windows will ask if it should search for your new hardware, choose “No” and click on “Next”.



2. A hardware list will appear, choose “Other Devices” (towards the bottom of the list), and click on “Next”.
3. Choose National Instruments, and the appropriate card (GPIB PC-II) and click on “Next”.
4. Windows will show some arbitrary card settings for IRQ, DMA, and Input/Output Range Settings. Click on “Next” to accept these settings, and then select “Finish” on the following screen.
5. Answer “No” when asked if you wish to re-start your computer.
6. From the Start Menu, select “Settings” >> “Control Panel” >> “System”. Select the GPIB-PCII under Device Manager by clicking on the icon.
7. Click on “Resources” to view the resource settings. Write down the resource settings.
8. Re-start your computer.
9. Prepare your GPIB-PCII/IIA card for installation by configuring it for GPIB-PCII mode and 7210 mode (the default setting).
10. The manufacturer’s default resource settings for GPIB-PCII mode are:

Base I/O Address	02B8-02BF
Direct Memory Access	DMA Channel 1
Interrupt Level	IRQ 7

Compare the above settings with the settings you wrote down in step #7. If the settings are the same, you do not need to do anything to the card, but can simply insert the card into the computer slot. If the settings are different, you must move the GPIB-PCII/IIA card’s jumper and switches to match the resource settings assigned by Windows 95 before installing the card. For details, see the National Instruments book “Getting Started with your GPIB-PCII/IIA and the GPIB Software for Windows 95”, chapter 2. This book comes with your National Instruments card.

### 4.1.3 How to Check if the NI card is installed properly

Check that the PC-II card is installed correctly by running the hardware diagnostic program. From the Windows 95 Start menu, select “Programs” >> “NI-488.2M Software for Windows” >> “Diagnostic”. Click on “Test All”. If the diagnostic fails, or can’t find your GPIB card, make sure that the settings on the card match those specified in the Device Manager. If the diagnostic is successful, click “Exit” to return to Windows 95.



#### **4.1.4 To Install the DLS&NSA400 Software**

1. Ensure that GPIB Software Drivers are installed.
2. Run “SETUP.EXE” from installation disk one, and follow the instructions on the screen.

### **4.2 Operating Two or More Units, From the 400 Series, Concurrently**

You may operate two or more units, from the 400 series (DLS 400A, DLS 400E, and NSA 400), at the same time over the IEEE bus. Each unit must be launched by its own session of the control software however, and each unit must have a unique IEEE address.

- 1) Create a new software folder for each additional unit you want to control.
- 2) Copy the folder containing the DLS&NSA400 software, including all sub-directories, to the new folder.
- 3) Rename the .exe file in the new folder.
- 4) Ensure that the each unit has a unique IEEE address.



### 4.3 Main Screen

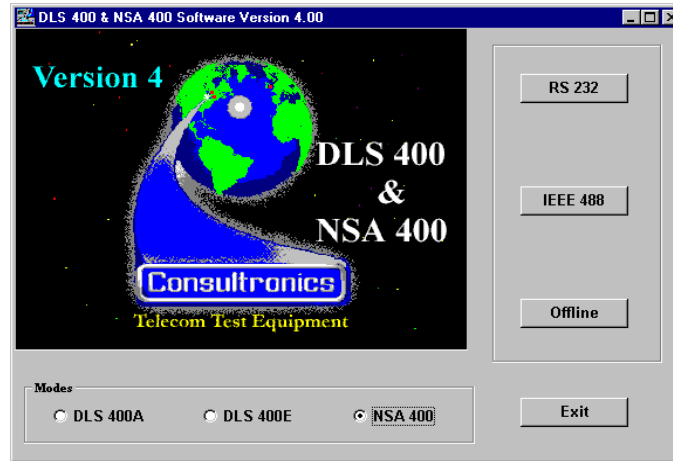


Figure 4 - Main Screen


The DLS 400 software lets you use either the IEEE 488 or the RS-232 to send commands and settings to the DLS 400. You can run the software without a DLS 400 connected, by selecting the offline mode. This mode allows you to explore the software without requiring any hardware.

### 4.4 System Configuration

To set the IEEE 488 address for your unit, select “System Configuration” from the Options menu. This setting will be saved upon exiting the software, so you need not set it each time.

Note: The selected number should match the DIP switch settings on the DLS rear panel.


You must also select the impairment cards, if any, installed in the unit. This setting will also be saved upon exiting the software.

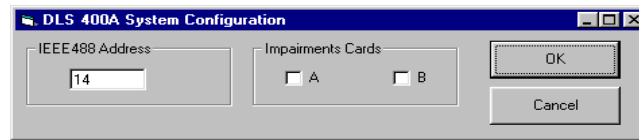

**Figure 5 - System Configuration Screen**

## 4.5 Control Screen

The control screen features a schematic representation of the loops available. As you scroll through the list of available loops, the diagram of the loop that is highlighted appears.

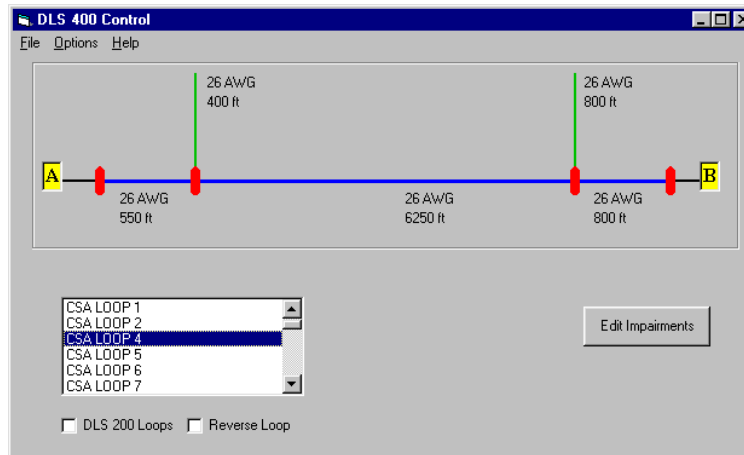

**Figure 6 - Control Screen**

From the control screen, you may access the File, Options, and Help menus. Click on the “Edit Impairments” button, to access the Impairments Control Panel.





## 4.6 Impairments Control Panel

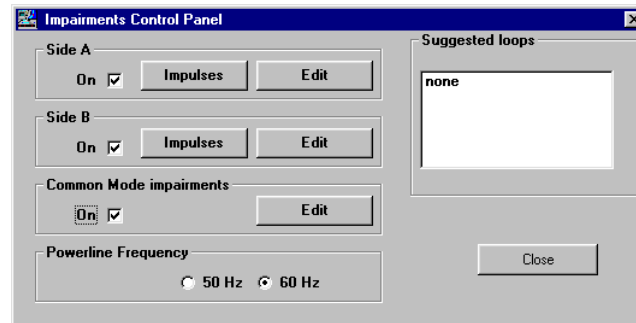


Figure 7 - Impairments Control Panel

Name	Description
Side A	<ul style="list-style-type: none"><li>Click on the “Edit” button to set the impairments for Side A. Note that the “ON” box must have be checked for the impairments to be applied to the line.</li><li>Click on the “Impulses” button to set impulses for Side A.</li></ul>
Side B	<ul style="list-style-type: none"><li>Click on the “Edit” button to set the impairments for Side B. Note that the “ON” box must have be checked for the impairments to be applied to the line.</li><li>Click on the “Impulses” button to set impulses for Side B.</li></ul>
Common Mode impairments	Click on “edit” to set the Common Mode impairments. Note that the “ON” box must be checked for the impairments to be applied to the line.
Powerline Frequency	Select between 50 Hz or 60 Hz .
Suggested Loops	When impairments are loaded from a standard, the loops called for in that standard will be listed in this box.



## 4.7 Editing Impairments Screen

The Editing Impairments screen shows only the parameters of the selected combination. To see all available parameters, load “All Impairments Combinations” from the Standard Combinations.

Parameter	Type/Shape	Level	Freq/Rate	Other
Crosstalk A	HDSL NEXT	-75.0		dBm
Crosstalk B	HDSL+ADSL	-75.0		dBm
Crosstalk C	ADSL FEXT	-85		dBm
Shaped Noise	ETSI HDSL	2.4		uV/SQROOT(Hz)
Impulse	Cook	-0.0		dB pps
White Noise	On	-140.0		dBm/Hz
Metallic 1	3 rd harmonic	Offset	180 Hz	
Metallic 2	7 th harmonic	-0.0	420 Hz	

☐ DLS200 Mode Crosstalk and White Noise

Calibration impedance: ☒ 100 ☐ 135 ohms

Close

Figure 8 - Editing Impairments Screen

Name	Description
Parameter	<div>The following parameters are available:<ul style="list-style-type: none"><li>Crosstalk noise generators (A, B, C)</li><li>Shaped Noise</li><li>Impulse</li></ul></div>



	<ul style="list-style-type: none"><li>• White Noise</li><li>• Metallic 1</li><li>• Metallic 2</li><li>• Longitudinal</li></ul>
Type/Shape	Select the type for the chosen parameter from the pull-down list.  NOTE: For the downloadable shapes files, placing your cursor over this field will bring up a callout which provides the shape name, description, the standard, and the range.
Level	Set the level of the parameter. Placing the cursor over this field bring up a callout which tells you the minimum and maximum value that you may enter. This field will not allow you to set a value that is out of range.
Freq/Rate	Set as required.
Other	Set as required.
Calibration Impedance	Shows the impedance used to calculate dBm power levels. Note that when this value is changed, the absolute power of the signal being injected is not changed, but rather its dBm reading is changed.
Powerline Frequency	Select between 50 or 60 Hz.
Impairments ON	This must be selected in order to apply your settings to the line.
DLS 200 Mode	Select this mode in order to achieve results comparable to those obtained with a DLS 200 unit. See 5.1 for more details.
Control Impulses	Click here to bring up the impulse control screen.



## 4.8 Edit Longitudinal Voltage

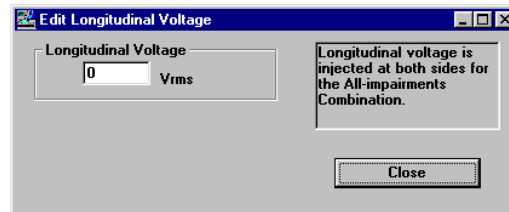


Figure 9 - Edit Longitudinal Voltage

## 4.9 Standard Settings

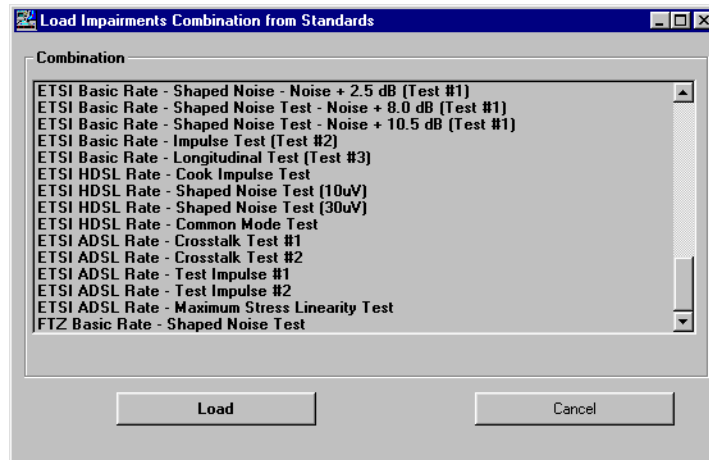


Figure 10 - Load Impairments Combination from Standards


There are over 50 combinations of impairments available, which allows setting the NSA 400 impairment parameters to perform testing according to a variety of North American and European standards:



- ANSI ADSL Rate
- ANSI HDSL Rate
- ANSI Basic Rate
- ETSI ADSL Rate
- ETSI HDSL Rate
- ETSI Basic Rate
- FTZ Basic Rate

## 4.10 Impulse Control

The Impulse Control feature will generate a total of 15 impulses at an interval of 1.1 seconds. To use the Impulse Control feature, you must select a type, level and width (if applicable) in the Editing Impairments Screen. The pps (pulse per second) value however, must be set to zero.

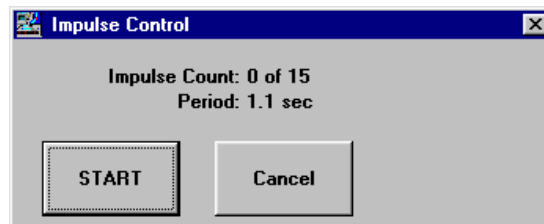



## **5. DLS 400 ADSL SIMULATOR**

---

### **5.1 DLS 400 Description**

Delivering high-speed data, voice, and video to a subscribers' site over a single pair of wires requires a large bandwidth for transmission, coupled with complex algorithms of compression, error correction, and echo cancellation. The DLS 400 provides a perfect test bed for optimizing these algorithms. Due to the large bandwidth provided by the DLS 400, it is suitable for testing ADSL, HDSL, and ISDN (BRI & PRI) transmission products. The DLS 400 is equally suited for testing transmission schemes which use DMT, CAP, 2B1Q, and any other line codes.

The DLS 400 reproduces the A.C. and D.C. characteristics of real telephony cable using networks of passive discrete components (R, L & C). It contains hundreds of segments of cable simulation which are matrixed together in various configurations and line lengths. Cable is simulated accurately up to 1.5 MHz and in some configurations up to 2.0 MHz. This makes it suitable for testing ADSL transmissions up to 7 Mbit/s. The unit provides 28 standard test loops for testing ADSL and several others can be created by the user, including bridge tap settings on either or both sides. In addition to the loops, the DLS 400 also provides optional impairments generators which can be used for testing, ISDN Basic Rate, HDSL rate or ADSL rate transmission equipment to European or North American standards.

The devices under test are connected to the DLS 400 using either the Bantam or 3-pin CF connectors, located at the front and back of the unit. All connectors on each side are connected in parallel.

The unit can be controlled via the IEEE 488 and the RS-232 serial interfaces. One simple command is all that is needed to select the loop, but other IEEE 488.2 and SCPI commands are also supported.


Impairments can be applied at one or both ends of the loop by using the impairment generator(s). A generator is always associated with either terminal A or terminal B of the DLS 400, according to where it is installed in the unit. It is possible to change a generator over from terminal A to terminal B if it is necessary to test the unit at the other end of the line.




In February 1997 Consultronics released an enhancement to the DLS 400 that affects both the loops and the impairments generator. The effect of this addition is to allow users to obtain test results using a DLS 400 that are very close to test results using a DLS 200 and DLS 200H. Before this, customers found that, for example, testing HDSL modems with a DLS 200H gave performance results that were up to 3 dB better than when the same equipment was tested using a DLS 400, with resulting confusion. The enhancement enables users to test using a “DLS 200 Compatible” mode if they wish. Of course the original “DLS 400” mode is still available so that you can obtain the same test results that you always got in the past using a DLS 400. The enhancement can be retro-fitted if desired, to all DLS 400’s.

## 5.2 Loops Description

The DLS 400 simulates 29 loops defined in various standards, plus 4 variable loops.



**BYPASS / CSA #0**

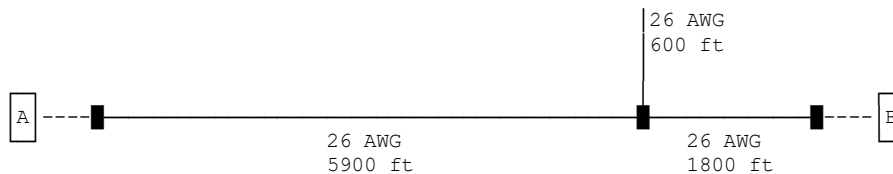


**CSA #1**




## System Description


---

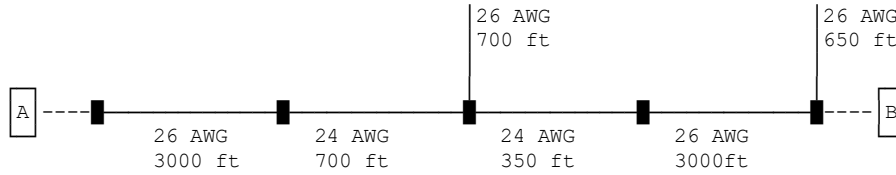


**CSA #2**

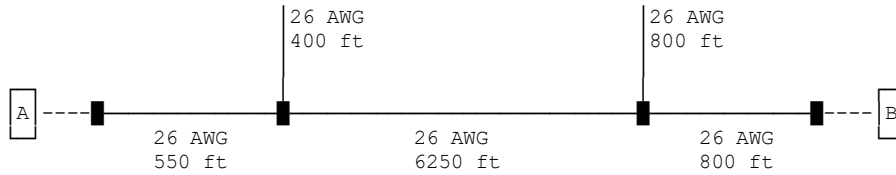

**CSA #4**

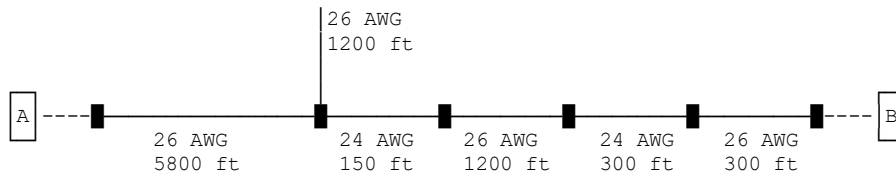


**CSA #5**



**CSA #6**




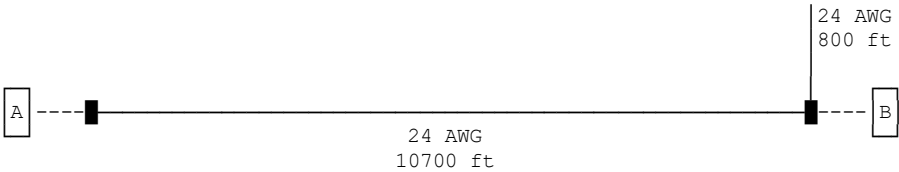

CSA #7



CSA #8

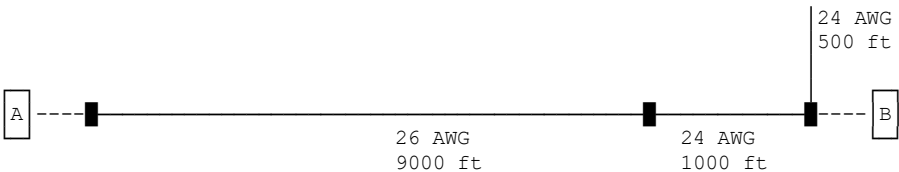

EXT-CSA #9




EXT-CSA #10




## System Description


---

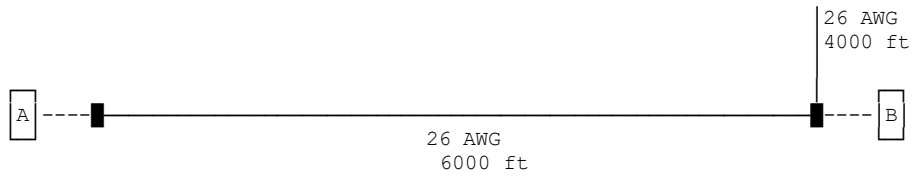


**MID-CSA #0**

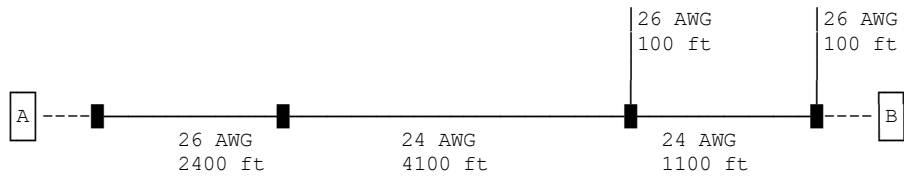

**MID-CSA #1**

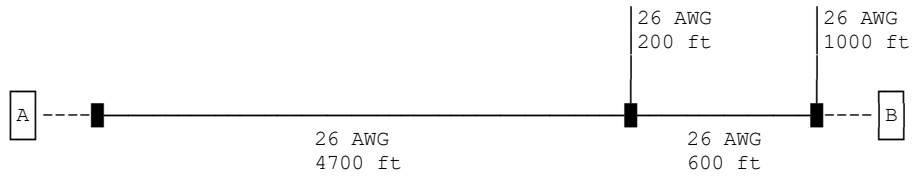

**MID-CSA #2**




**MID-CSA #3**






## System Description


---

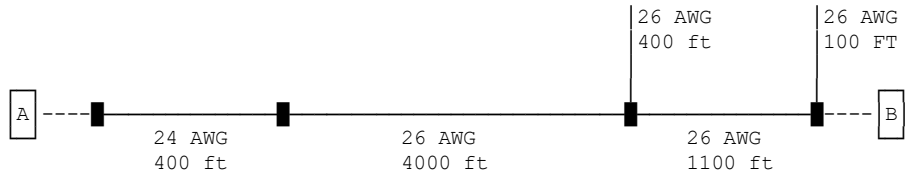


**MID-CSA #4**

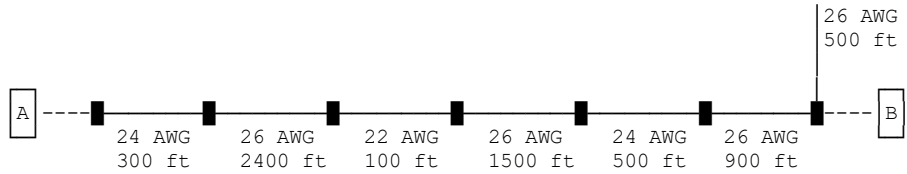

**MID-CSA #5**



**MID-CSA #6**

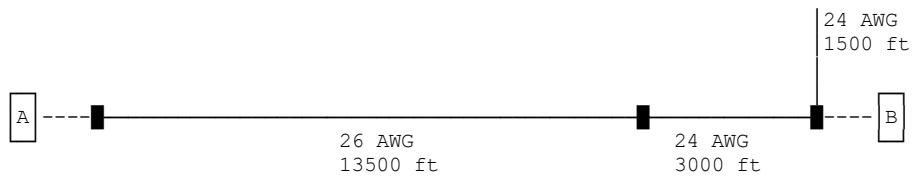







## System Description


---

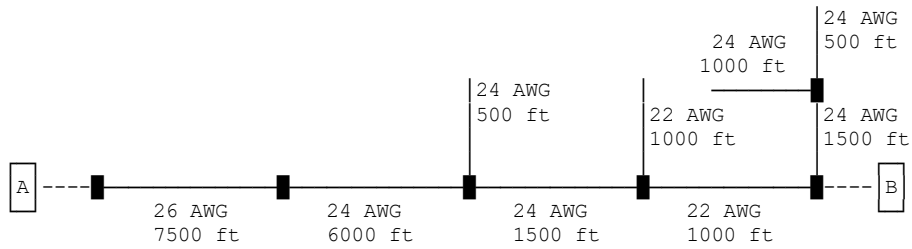


**ANSI #3**




**ANSI #4**

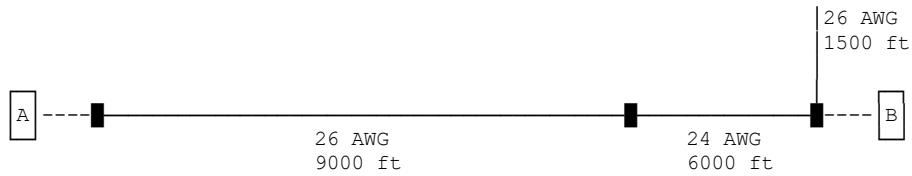


**ANSI #5**

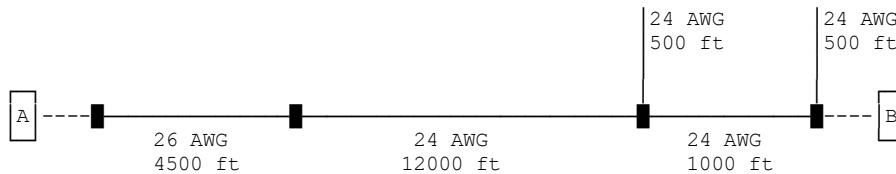


**ANSI #6**




ANSI #7

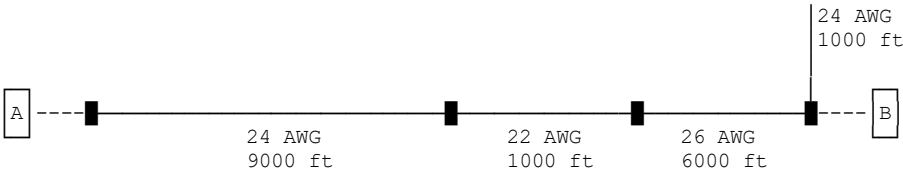

ANSI #8

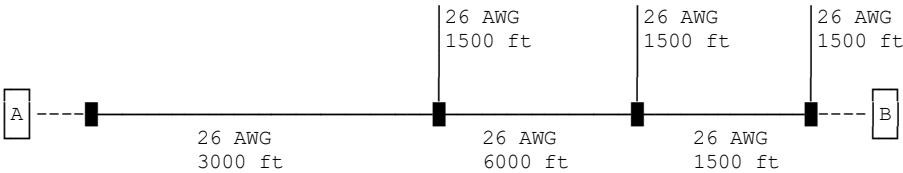

ANSI #9

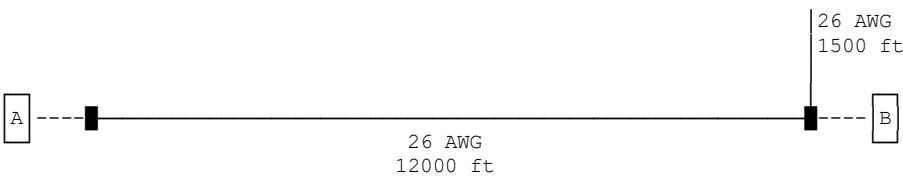




# System Description


## ANSI #11




## ANSI #12

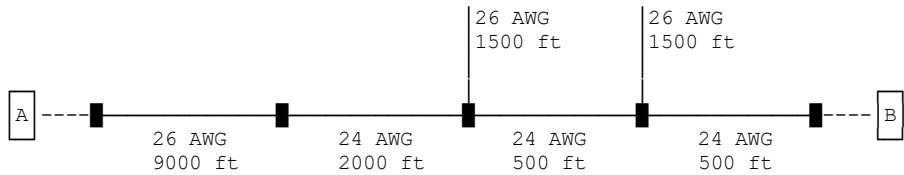


## ANSI #13



## ANSI #15




## Variable 24 AWG

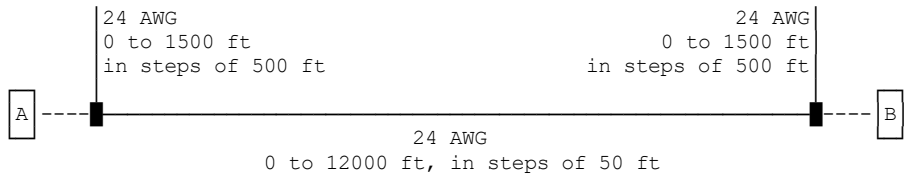






**Var 24 AWG+Tap**




**Variable 26 AWG**

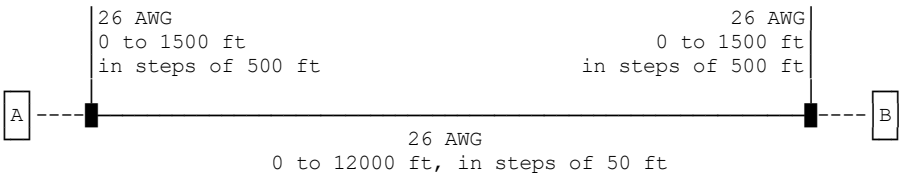

**Var 26 AWG+Tap**

Note that all these loops can be reversed under software control. The effect of doing this is to reverse the connections to terminals A and B within the DLS 400, but leave the make up of the loop unchanged.

For example, if you set CSA loop 2, with impairments on slot A, you would get this loop:

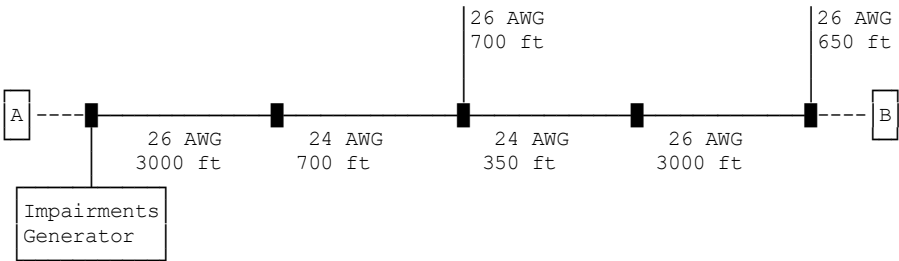




## System Description

---

If you reverse the loop, you would get:

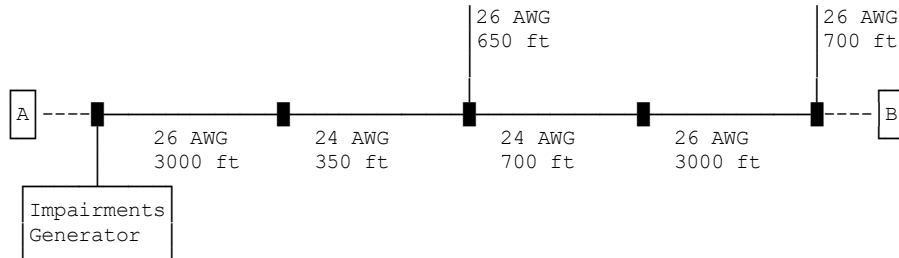


Here the loop has changed, but the position of the impairments generator has not.

## 5.3 Impairments Generator

### 5.3.1 General

The DLS 400 system can contain up to 2 noise cards. Each is used to inject noise at an end of the wireline. A card in slot A injects differential mode impairments at the input/output connector A of the DLS 400, and the card in slot B injects noise at connector B. The card in slot B is used to inject longitudinal noise on to the wireline. When there are 2 ADSL cards, the transformer is connected to the card in slot B. If there is only 1 ADSL card, that card is connected to the transformer and is used to supply the longitudinal noise. You must indicate the impairment cards loaded, by selecting Unit Configuration from the Options menu.

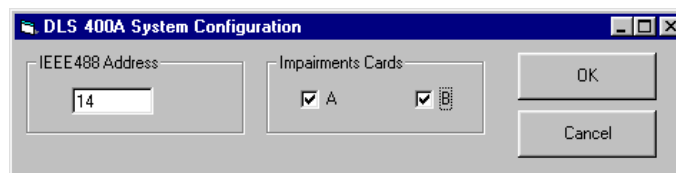



### 5.3.2 Grouped Impairments

Most impairments generated are specified by ANSI's T1E1 committee setting standards for ISDN Basic Rate, HDSL rate and ADSL rate testing of transmission devices. Some of the impairments are specified by the ETSI committee that sets standards for the same set of transmission device tests in Europe. When grouped by the relevant standards, the impairments are as follows:

#### 5.3.3 Basic Rate Testing, ANSI T1.E1 T1.601 standard

Impairment	Description
Longitudinal Noise	Up to 60 volts common mode injection at side B, 60 Hz (option 50 Hz).
Power related Metallic Noise	Odd harmonics of the fundamental up to 11 <sup>th</sup> harmonic.
Crosstalk Noise (NEXT)	Spectrum and level as specified by ANSI for basic rate DSL 2B1Q transmission.

#### 5.3.4 HDSL Rate Testing, ANSI Technical Report on HDSL

Impairment	Description
Crosstalk Noise (NEXT)	Spectrum and level as specified by ANSI for HDSL rate DSL 2B1Q transmission.
Power related Metallic Noise	Odd harmonics of the fundamental up to 11 <sup>th</sup> harmonic.

#### 5.3.5 HDSL2 Rate Testing, ANSI Proposed Working Draft for HDSL2 Standard (T1E1.4/98-268)

Impairment	Description
Crosstalk Noise (NEXT)	Spectrum and level as specified by ANSI for HDSL2 rate transmission.



### **5.3.6 ADSL Rate Testing, ANSI T1.413, Issue I and II**

Impairment	Description
Impulse Noise	Both c1 and c2 types of impulses, as specified.
Crosstalk Noise	Different types of crosstalk noise, which can be injected over varying levels and in combination. There are 3 different and independent crosstalk generators. The output level of each one is variable. They can be mixed together to form a wide variety of crosstalk combinations.

### **5.3.7 ADSL Rate Testing, ITU Standard for G. Lite**

Impairment	Description
Crosstalk Noise (NEXT)	Spectrum and level as specified by ANSI for ADSL G. Lite rate transmission.

### **5.3.8 Basic Rate Testing, ETSI TS 102 080 ISDN Standard**

Impairment	Description
Shaped Noise	Multiple tones at 160 Hz and harmonics up to 300 kHz, amplitude and phase related as specified.
Impulse Test	A bipolar pulse, of selectable pulse width, rate and level.
Longitudinal Noise	Common mode at 50 Hz (60 Hz option) at up to 20 Volts



### 5.3.9 HDSL Rate Testing, ETSI ETR 152 HDSL Standard

Impairment	Description
Shaped Noise	Multiple tones at 320 Hz and harmonics up to 1.5 MHz, amplitude and phase related as specified.
Impulse Test	The Cook pulse, of selectable rate and level.
Longitudinal Noise	Common mode at 50 Hz (60 Hz option) at up to 20 Volts

### 5.3.10 European ADSL rate testing, ETSI ETR 328 ADSL Standard

Impairment	Description
Impulse Noise	Both c1 and c2 types of impulses, as specified.
Crosstalk Tests 1 and 2	Also known as Model A and Model B crosstalk tests.
Maximum stress linearity test	White noise at -140 dBm/Hz from 1 kHz to 2 MHz

## 5.4 Individual Impairments

A list of all the individual impairments that can be generated is given below. You can use them in one of the preset combination mentioned above. Alternatively you can set them from the “All Impairments” line of the Impairments Control panel. Then you can set one or all of the possible impairments at varying levels, and in any combination. This very powerful mix of impairments can be used to provide a rich variety of test conditions.

Name	Type	Level Range	Description
T1.601	Crosstalk	-75 to -30 dBm	For spectrum, see Figure 13
DSL NEXT	Crosstalk	-75 to -30 dBm	For spectrum, see Figure 14
HDSL NEXT	Crosstalk	-75 to -30 dBm	For spectrum, see Figure 15
HDSL+ADSL	Crosstalk	-75 to -30 dBm	For spectrum, see Figure 16



## System Description

---

ADSL FEXT	Crosstalk	-85 to -35 dBm	For spectrum, see Figure 24
ADSL A	Crosstalk	-85 to -35 dBm	For spectrum, see Figure 25
ADSL B	Crosstalk	-85 to -35 dBm	For spectrum, see Figure 26
T1	Crosstalk	-85 to -35 dBm	For spectrum, see Figure 27
E1.AMI	Crosstalk	-85 to -35 dBm	For spectrum, see Figure 28
ADSL upstream NEXT (T1.413, Issue I and II)	Crosstalk	-30 to -80 dBm	For spectrum, see Figure 17
ADSL upstream FEXT (9 kft 26 AWG)	Crosstalk	-30 to -80 dBm	For spectrum, see Figure 18
ADSL upstream NEXT (ITU G. Lite)	Crosstalk	-30 to -80 dBm	For spectrum, see Figure 19
FDM ADSL downstream FEXT (13,5kft 26 AWG)	Crosstalk	-45 to -95 dBm	For spectrum, see Figure 20
ADSL upstream FEXT (13.5 kft 26 AWG)	Crosstalk	-45 to -95 dBm	For spectrum, see Figure 21
HDSL2 downstream NEXT (H2TUC)	Crosstalk	-30 to -80 dBm	For spectrum, see Figure 22
HDSL2 upstream NEXT (H2TUR)	Crosstalk	-30 to -80 dBm	For spectrum, see Figure 23
T1 (AMI) NEXT	Crosstalk	-18 to -68 dBm	For spectrum, see Figure 29
EC ADSL downstream NEXT	Crosstalk	-17 to -67 dBm	For spectrum, see Figure 30
FDM ADSL downstream NEXT	Crosstalk	-17 to -67 dBm	For spectrum, see Figure 31

## System Description



FDM ADSL downstream FEXT (9kft 26 AWG)	Crosstalk	-40 to -90 dBm	For spectrum, see Figure 32
FDM ADSL downstream NEXT	Crosstalk	-17 to -67 dBm	For spectrum, see Figure 33
ETSI BASIC	Shaped	3.2 to 100 $\mu\text{V}/\sqrt{\text{Hz}}$	ETSI Basic Rate Shaped Noise
ETSI HDSL	Shaped	3.2 to 100 $\mu\text{V}/\text{Hz}$	ETSI HDSL Rate Shaped Noise.
FTZ 1TR 200	Shaped	3.2 to 100 $\mu\text{V}/\text{Hz}$	Basic Rate Shaped Noise to FTZ specs.
Metallic 1		Offset $\pm 10$ dB	Any odd harmonic up to 11 <sup>th</sup> of 60 Hz (or 50 Hz)
Metallic 2		Offset $\pm 10$ dB	Any odd harmonic up to 11 <sup>th</sup> of 60 Hz (or 50 Hz)
Longitudinal	Common mode	0-60 V (60 Hz) 0-50 V (50 Hz)	A triangle wave common-mode
White Noise		-140 to -90 dBm/Hz	Flat white noise.

Name	Type	Level Range	Description	Rate	Width
Cook Pulse	Impulse	-20 to +6 dB	Used for HDSL rate testing. See .	0-100 pps or single shot	n/a
ADSL #1 (c1)	Impulse	0-100 mV	Used for ADSL rate testing. See .	0-100 pps or single shot	n/a



## System Description

---

ADSL #2 (c2)	Impulse	0-100 mV	Used for ADSL rate testing. See .	0-100 pps or single shot	n/a
Bipolar	Impulse	0-100 mV		0-100 pps or single shot	20-120 us
3-Level	Impulse	0-100 mV		0-100 pps or single shot	20-120 us
Unipolar	Impulse	0-100 mV		0-100 pps or single shot	20-120 us


### NOTES

- 1) Level ranges in dBm are on a 100 Ohm dBm scale. They are measures of the total power in the bandwidth DC to 1.5 MHz.
- 2) Metallic noise is specified in T1.601, using a special load, and 135 Ohm dBm scale. The levels are relative to the reference levels of the odd harmonics which are:

Frequency [Hz]	Level [dBm]
60	-47
180	-49
300	-59
420	-65
540	-70
660	-74

- 3) Cook pulse levels are relative to the reference level of 318 mV p-p, when using a 135 Ohm system.
- 4) The level range given for shaped noise is obtained using a 135  $\Sigma$  system.



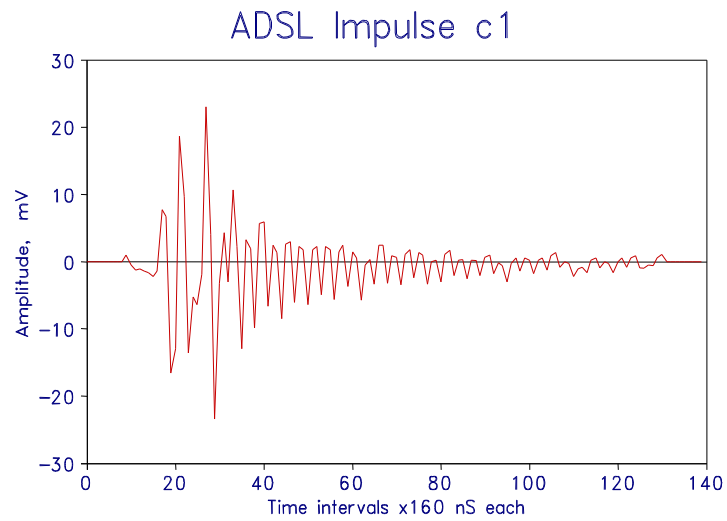





## System Description

---

ADSL Impulse c2

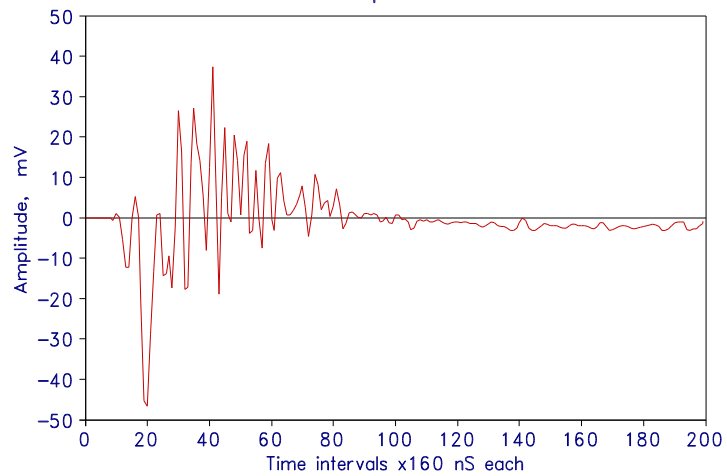


Cook Pulse

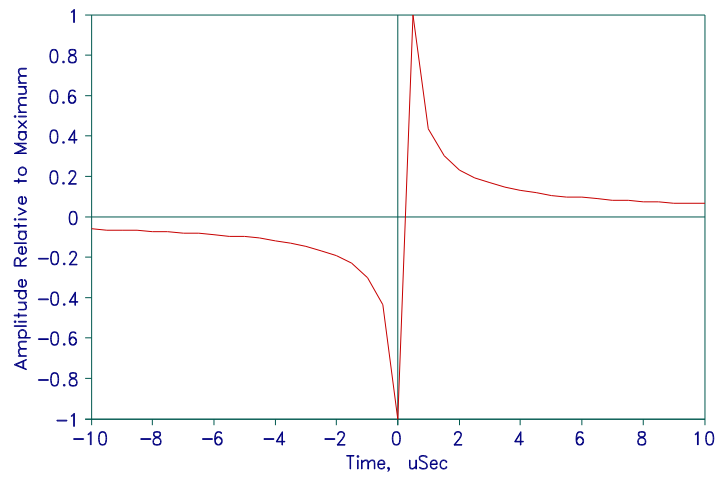



### 5.4.1 Impairment Card Organization

The Impairments card contains several generators that can simulate various impairments. The following block diagram shows these generators:

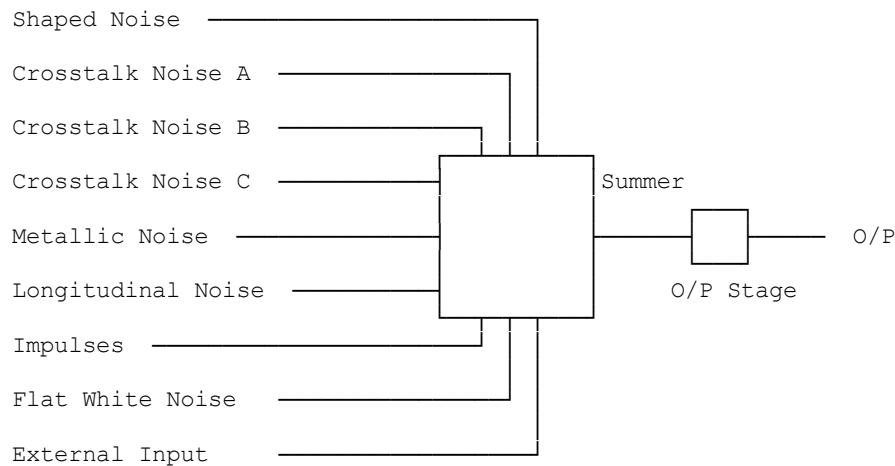

Each of the generators can generate a signal simultaneously, and they are added together in the summer section. Some generators, such as Crosstalk A, can generate several choices of crosstalk, but NOT simultaneously. A generator can produce one choice at any one time.

### 5.4.2 Output Stage

The noise generator can be completely disconnected by a relay from the output jacks even if impairments are still being generated inside the unit. This also removes the very slight loading effect of the impairments card.

NOTE: The output impedance is high, so that the NSA 400 really acts as a current source. For any impairments except longitudinal noise, the level seen on the line depends on the line impedance.



### 5.4.3 Crosstalk Generators A and B

The impairments card contains two independent low frequency crosstalk generators able to produce a variety of shaped white noises up to 600 kHz. Generator B can produce all of the signals that generator A can produce, as well as some that generator A cannot produce. In addition, generator B is more versatile than generator A.

Reference levels of noise, with dBm based on 100 ohms, are

Type	Level [dB]
T1.601	-45.0
10-disturber DSL NEXT	-56.1
10-disturber HDSL NEXT	-47.6
10-disturber ADSL NEXT	-49.9
10-disturber HDSL+ADSL	-45.6
49-disturber ADSL upstream NEXT (ANSI T1.413 Issue I and II)	-43.3
49-disturber ADSL upstream FEXT (9kft 26AWG)	-69.1
49-disturber ADSL upstream NEXT (ITU G. Lite)	-43.3
49-disturber FDM ADSL downstream FEXT (13.5kft 26AWG)	-83.9
49-disturber ADSL upstream FEXT (13.5 kft 26 AWG)	-81.8
49-disturber HDSL2 downstream NEXT (H2TUC)	-33.9
49-disturber HDSL2 upstream NEXT (H2TUR)	-36.6

The difference in levels due to different numbers of interferers are:

Number of disturbers	Level difference [dB]
49	+4.1
24	+2.3
20	+1.8
10	0.0
4	-2.4
1	-6.0



#### 5.4.4 Crosstalk Generator C

The (high frequency) crosstalk generator C produces noise with frequency components up to 2 MHz. Reference levels of noise, with dBm based on 100 ohms, are:

Type	Level [dB]
10-disturber ADSL FEXT	-69.6
ADSLA	-49.4
ADSLB	-43.0
10-disturber T1 NEXT	-47.8
10-disturber AMI	-46.0
49-disturber T1 (AMI) NEXT	-43.7
49-disturber EC ADSL downstream NEXT	-25.4
49-disturber FDM ADSL downstream NEXT	-43.5
49-disturber FDM downstream FEXT (9kft 26 AWG)	-70.5
49-disturber FDM ADSL downstream NEXT	-43.5

#### 5.4.5 Shaped Noise Generator

The shaped noise generator is a RAM-based generator which produces a variety of discrete tones:

- ◆ ETSI Basic Rate
- ◆ ETSI HDSLRate
- ◆ to FTZ TR.220 recommendations

It is also used to generate the 10 tones which are needed for ADSL Model A noise.

#### 5.4.6 Flat White Noise Generator

The flat noise generator injects a flat white noise signal, with a -3 dB point located at 2 MHz.



## *System Description*

---

### **5.4.7 Impulse Generator**

Six different type of impulses may be selected. They are: 3-level, bipolar, unipolar+, unipolar-, cook, ADSL c1, ADSL c2.

Four of them (3-level/bipolar/unipolar+/unipolar-) consist only of either 2 or 3 different levels. These type of impulses are calibrated in mV peak-to-peak. The pulse width, variable from 20 to 120 micro-seconds is only enabled when one of these type is selected.

The other three types, Cook, ADSL c1 & c2, are complex waveforms as shown in the diagrams below. Impulse rate can also be a single, “triggered” impulse or varied from 0 to 100 per second.

### **5.4.8 Powerline Related Impairments**

Two types of impairments due to the interference from AC power lines are generated by the ADSL noise generator. One of them is called “metallic” and the other one “longitudinal”.

The reference powerline frequency used in both cases can be selected as 50 or 60 Hz.

### **5.4.9 External Noise**

External noise may be injected via the BNC connector. Be aware that the level of noise applied to the line will be reduced by approximately ~30 dB. Also, the source output must be turned on for the external noise to be applied.

### **5.4.10 Powerline Related Impairments**

Two types of impairments due to the interference from AC power lines are generated by the ADSL noise card. One of them is called “metallic” and the other one “longitudinal”.

The reference powerline frequency used in both cases can be selected as 50 or 60 Hz.

#### **5.4.10.1 Metallic Noise**

Powerline metallic noise is a pair of low-level sine waves which are injected in differential mode. The frequency of the sinewaves can be set to any odd harmonic, from the fundamental up to the 11<sup>th</sup> odd harmonic (550 or 660 Hz). The ADSL noise generator

contains two generators that can be set independently. The generator will automatically disable the second tone generator if both frequencies are set equal. The relative levels of the



harmonics are always the same. The levels of both tones taken together can be varied over  $\pm 10$  dB relative to the ANSI reference levels.

The ANSI reference levels are shown in the following table:

Harmonic	Frequency [Hz]	Level [dBm]
1 <sup>st</sup>	60/50	-47
3 <sup>rd</sup>	180/150	-49
5 <sup>th</sup>	300/250	-59
7 <sup>th</sup>	420/350	-65
9 <sup>th</sup>	540/450	-70
11 <sup>th</sup>	660/550	-74

#### 5.4.10.2 Longitudinal Noise


Longitudinal noise is a triangular waveform which is injected in common mode on the wireline using a transformer. Associated with the longitudinal noise, some longitudinal loads should also be used. The ETSI TS 102 080 ISDN Standard (formerly ETR80) requires that both pairs of loads (located on both sides of the transformer) are set any time the longitudinal voltage is generated (max voltage is  $25 V_{RMS}$ ). Otherwise only ONE pair is installed.

When one load is installed, it should be at the CO side, where no longitudinal voltage will appear. The level of longitudinal noise which appears at the customer site end of the line is 0 to  $50 V_{RMS}$  in 1V steps when the powerline frequency is 50 Hz, and 0 to 60 V when the powerline frequency is 60 Hz.




## System Description

---

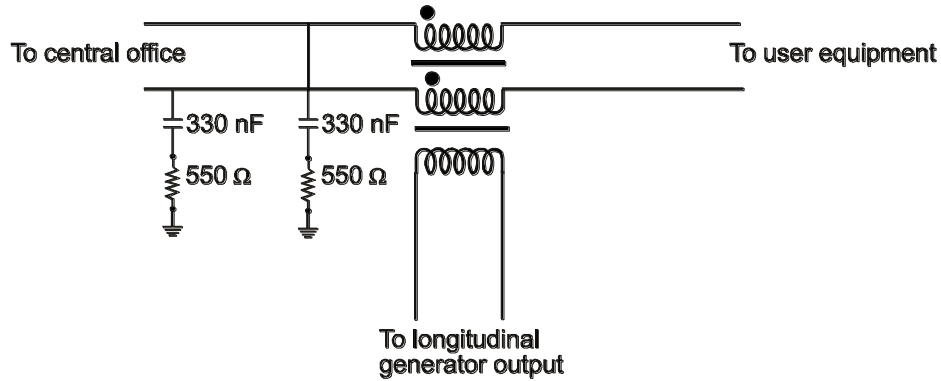

**Figure 11 - ANSI Longitudinal Load Configuration**

If both loads are installed, equal and opposite-phase voltages appear at the end of the lines. They are half the voltage that would appear at one end of the line, if only one load is in place.

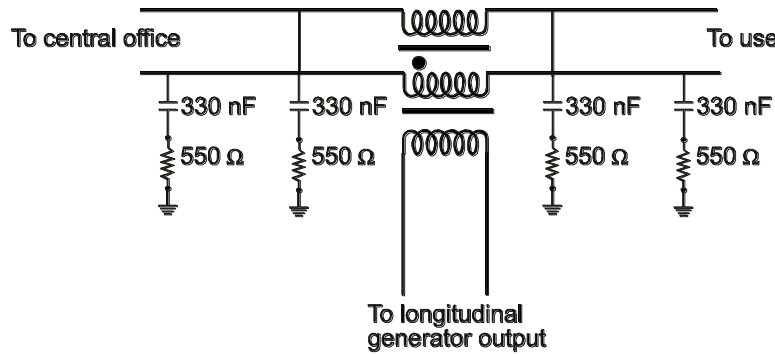

**Figure 12 - ETSI Longitudinal Load Configuration**





### **WARNING**

Inserting the longitudinal mode transformer in the loop provides additional loop attenuation which is not present when the transformer is switched out of the loop. The effective attenuation depends on the bandwidth of the signal passing through the loop, but is in the region of 1 to 4 dB. This alone accounts for some reduction in margin. When using longitudinal mode you can determine how much reduction in margin is due to the transformer by switching it in circuit, impressing 0 Volts of longitudinal mode voltage on the line, and running a test like this. Then you can run with longitudinal voltage as well, to determine additional degradation due to the longitudinal voltage.

#### **5.4.10.3 DLS 200 Compatible Mode**

All 3 crosstalk generators, and the white noise generator are based on noise produced by Pseudo Random Binary Sequences. This base noise is then used to create the appropriate crosstalk and white noises. Some customers, expressed a desire for the noises generated by the DLS 400 to produce exactly the same effects as noises that come from a DLS 200H. To do this we introduced a DLS 200 compatible noise, in which the base noise is modified from the original DLS 400 base noise.

## **5.5 Fuse Configuration**

In North America only one of the AC supply lines is live, and needs to be fused. However in some other countries both AC supply lines are live, and may need to be fused. The DLS 400 is shipped with a 2- fuse configuration.



## **6. REMOTE CONTROL**

---

The DLS 400 is controlled via the IEEE 488 (also known as the GPIB bus), or the RS-232 (serial) interface, allowing the integration of the DLS 400 into a larger test system. The DLS 400 remote control is designed with several standards in mind:

- The GPIB physical interface follows IEEE 488.1. The functions implemented are outlined in Section 6.1 “IEEE 488 Interface”. The Common Commands follow IEEE 488.2.
- The Device Dependent Commands (see Section 6.5) are based upon the Standard Commands for Programmable Interfaces (SCPI). However, we had to create some device dependent commands since none of the pre-defined SCPI commands apply to the DLS 400.
- The serial port physical interface follows the EIA RS-232 standard.

The IEEE 488 and the serial interfaces are always enabled, and can be used alternatively. The DLS 400 directs its output to the last interface from which it received data. Both interfaces use the same command set and produce the same results. Section 6.1 and 6.2 describe features specific to one particular interface, and the rest of this section describes the commands that are common to both interfaces.

### **6.1 IEEE 488 Interface**

This section contains information specific to the IEEE 488 interface. Section 6.2 contains the information specific to the RS-232 interface.

The IEEE 488.1 Interface functions supported by the DLS 400 are as follows :

SH1	Source handshake - full capability
AH1	Acceptor handshake - full capability
T5	Basic talker - serial poll, untalk on MLA
L3	Basic listener - unlisten on MTA
SR1	Service request - full
DC1	Device clear - full
C4	Respond to SRQ
E1	Open Collector drivers
RL1	Remote Local - full




These represent the minimum required to implement the IEEE 488.2 standard. Note that the IEEE 488 interface is also known as the GPIB or HP-IB interface.

### 6.1.1 DLS 400 IEEE 488 Address.

The DLS 400 can use any valid IEEE 488 address (from 0 to 30). You can change the address by using the DIP switch on the back of the unit.

The following figure shows the default switch setting (address 14):

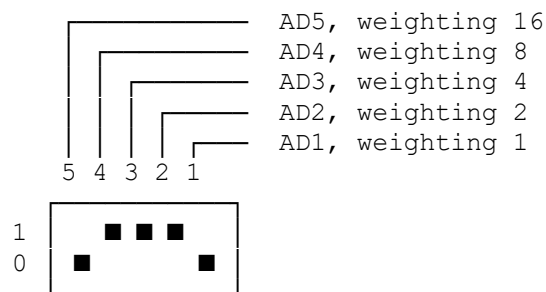

### 6.1.2 The Service Request (SRQ) Line

The SRQ line, as defined by the IEEE 488.1 standard, is raised when the DLS 400 is requesting service. Here are some examples of services that could raise SRQ:

- a message is available in the output buffer
- an error occurred
- all pending operations are completed
- the power was just turned on

In order to use the SRQ line, all relevant enable bits must be set.

For example:



- the SRQ line can be raised automatically when there is a message available by enabling the MAV bit (bit 4) in the Status Byte Register with the command \*SRE 16.
- the SRQ line can be raised automatically when there is an error by enabling the ESB bit (bit 5) in the Status Byte Register with \*SRE 32 and by enabling the error bits in the Standard Event Status Register with \*ESE 60 (bit 2, 3, 4 and 5).

**NOTE: The Factory default is to clear all enable registers on power up. See \*PSC, \*ESE and \*SRE commands for more details in section 6.7.**

We recommend that you set the DLS 400 to raise the SRQ line when there is a message available and when there is an error.

### **6.1.3 Resetting the DLS 400**

To reset the DLS 400, use the “Device Clear” command as defined in the IEEE 488.1 standard. This has the same effect as the power-up reset.

Shunt JP2 on the controller card determines whether the “Interface Clear” line resets the whole unit or just the IEEE 488 interface. Setting JP2 in the IFC position (pin 1 and 2) resets only the interface when IFC is received. In the “RESET” position (pin 2 and 3), IFC resets the entire unit. The factory default is to set JP2 in the IFC position, pin 1 and 2.

### **6.1.4 Message Terminators**

Messages to the DLS 400 must be terminated with either a Line Feed character (ASCII <LF>, decimal 10, hex 0A), an IEEE 488.1 EOI signal or both. Messages from the DLS 400 are always terminated with a Line Feed character and the IEEE 488.1 EOI signal.

Note that some languages, such as BASIC, may automatically append a carriage return and a line feed at the end of messages. The carriage return character is not a valid terminator,



and will invalidate the last command. To avoid this problem, you can append a semi-colon after a string (after the quotes) when printing to the IEEE 488 port. Another solution is to append a semi-colon at the end of the command itself (inside the quotes), so that the carriage return can be interpreted as a second command, and be simply discarded by the DLS 400. For example:

<code>PRINT #1,".set:channel:length 1000"+CHR\$(10);</code>	Preferred solution
or	
<code>PRINT #1,".set:channel:length 1000;"</code>	Other solution

### 6.1.5 Example using the IEEE 488 Interface

To select the ANSI #3 loop, do the following:

- transmit `".SET:CHAN:LOOP ANSI_#3"`
- check that the REMOTE LED is green

To send and receive messages with error checking follow these steps:

- set all relevant enable bits (only done once)
- send the message
- wait for SRQ
- read the Status Byte
- if MAV (bit 4) is set then read the response
- if ESB (bit 5) is set then read the Standard Event Status Register and take all the relevant actions.

For example, to get the identification message with the IEEE 488 interface, do the following:

- transmit `"*SRE 48"` enable MAV and ESB (needed only once)
- transmit `"*ESE 60"` enable all the error bits (needed only once)



- If desired, all the enable registers can be restored on power up with the \*PSC command.

This section contains information specific to the RS-232 interface. Section 6.1 contains the information specific to the IEEE 488 interface.

The RS-232 standard is equivalent to the European V.24/V.28 standards. In this manual we use the term RS-232 to refer to both of these two standards. Generally, the computer literature will use the words “serial”, “COM1” and “COM2” to refer to the RS-232 interface. Note that the DLS 400 cannot use the parallel port of a computer (the female connector).

Do NOT use a null modem with a computer that has a standard COM port configured as a DTE.

The DLS 400 stops transmitting data when the RTS line is low, and restarts when the RTS line is high. The DLS 400 lowers the CTS and the DSR lines when it cannot accept data, and raises them when it can. Note that the RTS line is not the usual “Request To Send” as defined by the RS-232 standard. If desired, the user can leave the RTS line set, and use only the CTS line.



### 6.2.1 Message Terminators

Message sent to the DLS 400 through the serial interface **MUST** be terminated with the line feed character (decimal 10, hex 0A, LF). To ensure that no characters are left in the receive buffer of the DLS 400 from a previous incomplete command, you can send the line feed character by itself before sending new commands.

Messages from the DLS 400 are always terminated with a Line Feed character.

Note that some languages, such as BASIC, may automatically append a carriage return and a line feed at the end of messages. The carriage return character is not a valid terminator, and will invalidate the last command. To avoid this problem, you can append a semi-colon after a string (after the quotes) when printing to the IEEE 488 port. Another solution is to append a semi-colon at the end of the command itself (inside the quotes), so that the carriage return can be interpreted as a second command, and be simply discarded by the DLS 400. For example:

PRINT #1,";set:channel:length 1000"+CHR\$(10);                      Preferred solution

or

PRINT #1,";set:channel:length 1000;"                      Other solution

### 6.2.2 Example using the RS-232 Interface

To select the ANSI #3 loop, do the following:

- transmit “:SET:CHAN:LOOP ANSI\_#3”
- check that the REMOTE LED is green

To send and receive messages with error checking follow these steps:

- set all relevant enable bits (only done once)
- send the message
- read the answer until you receive LF (decimal 10, hex 0A)
- check if an error occurred with the command \*ESR?



For example, to get the identification message with the RS-232 interface, do the following:

transmit “*ESE 60”	enable all the error bits (needed only once)
transmit “*IDN?”	query the identification message
read the answer	the messages are always terminated with LF
transmit “*ESR?”	check if an error occurred
read the answer	if not 0, see section 6.8.2 for description of the error(s)

### **6.3 Data formats**

This remaining sections applies to both the IEEE 488 and RS-232 interfaces.

The DLS 400 adheres to the IEEE 488.2 principle of Forgiving Listening and Precise Talking.

The data formats supported by the DLS 400 are:

- Talking:
- a) <NR1> Numeric Response Data - Integer
  - b) Arbitrary ASCII Response Data

<NR1> is an implicit point representation of an integer.

Arbitrary ASCII Response Data is a generic character string without any delimiting characters. It is usually used to send data in response to a query, such as with the \*IDN? command (see section 6.7, “IEEE 488.2 Common Command Set”).

Listening:      <NRf> Decimal Numeric Program Data

<NRf> is the Flexible Numeric Representation defined in the IEEE.2 standard which can represent just about any number.





The DLS 400 can accept data in the <Nrf> format, which means that numbers can be made of a combination of digits, signs, decimal point, exponent, multiplier, unit and spaces. For example, any of the following is a valid representation for 12000 feet: 12kft, 12.0 kft, 12000, .12e2k, 1.2 e4 ft, +12000. If a unit (i.e. ft, m, bps, etc.) is appended to a number, that unit must be valid and not abbreviated. Note that the period separates the decimal part of a number.

## **6.4 Command Syntax**

The DLS 400 adheres to the IEEE 488.2 format for command syntax. As with the Data Format, the principle is forgiving listening and precise talking.

Commands may take one of two forms, either a Common Command or a Device Dependent Command. The format of each is detailed in subsequent sections (6.7 and 6.5 respectively). Each type may be preceded by one or more spaces, and each must have one or more spaces between its mnemonic and the data associated with it.

Common commands are preceded by the character “\*”. Device Dependent commands are preceded by a colon, with a colon separating each level of the command. Commands may be either in upper or lower case. Multiple commands may be concatenated by separating each command by semi-colons.

The following are some examples :

\*RST

\*RST;\*WAI::SET:CHANNEL:LOOP ANSI\_#2

\*ESE 45; \*SRE 16

IEEE 488 messages to the DLS 400 may be terminated with either a Line Feed character (ASCII <LF>, decimal 10, hex 0A), an IEEE 488 EOI signal or both. RS-232 messages must be terminated with a line feed character. Messages from the DLS 400 are always terminated with a Line Feed character, and also with the EOI signal if using the IEEE 488 interface.

As defined in the SCPI specifications, a Device Dependent Command may be sent in its short form or long form, in upper or lower case. The following commands are therefore identical in operation:



- 1) :SET:CHANNEL:LOOP ANSI\_#2
- 2) :SET:CHAN:LOOP ANSI\_#2
- 3) :SET:chan:LoOp ANSI\_#2

Queries of the system follow the same format as the commands, except that the data normally associated with a command is replaced by a question mark “?”. Following receipt of such a command, the DLS 400 will place the appropriate response in the output queue, where it can be read by the controller. Examples are:

- 1) \*IDN?
- 2) \*ESE?;\*SRE?
- 3) :SET:CHAN:LOOP?

When a command does not begin with a colon, the DLS 400 assumes that the command is at the same level as the previous command. For example, to set a variable loop, one does NOT need to specify “:SET:CHANNEL” each time, such as in:

```
:SET:CHAN:LOOP VARIABLE_26_AWG;TAP_A 500;LINE 10k;TAP_B 500  
LINE 5kft
```

This shorter form is valid because LOOP, TAP\_A, LINE and TAP\_B are at the same level.

## 6.5 Device Dependent Command Set for Loops

As recommended by the SCPI consortium and to simplify programming of the various Consultronics simulators, the DLS 400 uses the following tree structure:

:SETting

:CHANnel

:LOOP <Loop Name>

:TAP\_A <NRf>

:LINE <NRf>

:TAP\_B <NRf>

:DIRECTION FORWARD | REVERSE

:BYPASS NO | YES

Each section of the command may be sent in the full or the truncated form (indicated in upper case). The command itself may be sent in upper or lower case form.

The DLS 400 will round any number to the nearest number permitted by the resolution of the parameter.

Sections 6.3 and 6.4 give more information on the data format and the command syntax.

### 6.5.1 SETting:CHANnel:LOOP <Loop Name>

This command selects which loop the DLS 400 will simulate. <LOOP Name> can be any of the following loops:

BYPASS	CSA_#0	MID-CSA_#0	ANSI_#2
	CSA_#1	MID-CSA_#1	ANSI_#3
VARIABLE_24_AWG	CSA_#2	MID-CSA_#2	ANSI_#4
VAR_24_AWG+TAP	CSA_#4	MID-CSA_#3	ANSI_#5
VARIABLE_26_AWG	CSA_#5	MID-CSA_#4	ANSI_#6
VAR_26_AWG+TAP	CSA_#6	MID-CSA_#5	ANSI_#7
	CSA_#7	MID-CSA_#6	ANSI_#8
	CSA_#8		ANSI_#9
	EXT-CSA_#9		ANSI_#11
	EXT-CSA_#10		ANSI_#12
			ANSI_#13
			ANSI_#15

In addition, any CSA, EXT-CSA and ANSI loop except CSA loop 0 have a DLS 200 compatible mode. This is chosen by adding D2 immediately after the loop number.

For example, to select ANSI loop number 2, send:

**:SET:CHAN:LOOP ANSI\_#2**

and to select the DLS 200 compatible ANSI loop number 2, send:

**:SET:CHAN:LOOP ANSI\_#2D2**

To query the loop currently simulated by the DLS 400 send:



**:SET:CHAN:LOOP?**

The command will return the simulated loop. For example, if the selected loop is ANSI #4, the returned message will be:

**NSI\_#4**

**6.5.2 :SETting:CHANnel:TAP\_A <NRf>**

Select the length of the tap on side A, where <NRf> is the length ranging from 0 to 1500 ft, in step of 500 ft. For example, to set the length to 1.5 kft, send:

**:SET:CHAN:TAP\_A 1.5 kft**

The units of the length are optional, but they must be “ft” if present. For more details on the numeric format supported by the DLS 400, see section 6.3.

To query the length currently simulated by the DLS 400 send:

**:SET:CHAN:TAP\_A?**

The command will return an integer number ranging from 0 to 1500 followed by the units. For example, if the length is 1.5 kft, the returned message will be:

**500 FT**

**6.5.3 :SETting:CHANnel:LINE <NRf>**

Select the length of the line, where <NRf> is the length ranging from 0 up to the maximum shown in the following table. The length is variable in step of 50 ft.

<b>Selected Loop</b>	<b>Maximum Length</b>
Variable_24_AWG	18 kft
Var_24_AWG+Tap	12 kft
Variable_26_AWG	15 kft
Var_26_AWG+Tap	12 kft

For example, to set the length to 1500 ft, send:

**:SET:CHAN:LINE 1500 ft**



The units of the length are optional, but they must be “ft” if present. For more details on the numeric format supported by the DLS 400, see section 6.3.

To query the length currently simulated by the DLS 400 send:

**:SET:CHAN:LINE?**

The command will return an integer number current length followed by the units. For example, if the length is 1.5 kft, the returned message will be:

**1500 FT**

#### **6.5.4 SETting:CHANnel:TAP\_B <NRf>**

Select the length of the tap on side B, where <NRf> is the length ranging from 0 to 1500 ft, in step of 500 ft. For example, to set the length to 1.5 kft, send:

**:SET:CHAN:TAP\_B 1.5 kft**

The units of the length are optional, but they must be “ft” if present. For more details on the numeric format supported by the DLS 400, see section 6.3.

To query the length currently simulated by the DLS 400 send:

**:SET:CHAN:TAP\_B?**

The command will return an integer number ranging from 0 to 1500 followed by the units. For example, if the length is 1.5 kft, the returned message will be:

**1500 FT**

#### **6.5.5 SETting:CHANnel:DIRection FORward|REVerse**

Select the direction of the signal through the wireline. For example, to select the reverse direction, send:



**:SET:CHAN:DIR REVERSE**

To query the current direction of the signal in the wireline, send:

**:SET:CHAN:DIR?**

The command will return either “FORWARD” or “REVERSE”.

(See diagrams at end of Section 5, System Description, for an example of this feature.)

**6.5.6 SETTING:PWRLINE:LONGITUDINAL:STATE <OFF/ON>**

This command controls whether the secondary windings of the longitudinal transformer are in or out of the loop. Putting the winding in the loop can effectively add several hundred feet to the loop, so unless longitudinal mode is actively required, the state should be OFF.



---

## 7. Impairments Commands Summary

---

When setting impairments, the DLS 400 uses the following general format:

:Source?:AAAA:BBBB CCCC

All commands should refer to a specific slot. Use “:sourceA” to set parameters on the noise card located in slot A, and “:sourceB” for the other slot. The rest of the command can be summarized like this:

SourceA:xtalkA:type < choice >

:level <numeric value> [dBm]

:xtalkB:type < choice >

:level <numeric value> [dBm]

:xtalkC:type < choice >

:level<numeric value> [dBm]

:shaped :type < choice >

:level <numeric value> [ $\mu$ V/ Hz]

:level <numeric value> dBm/Hz

:level <numeric value> dBm

:white:level <numeric value> [dBm/Hz]

:impulse:type < choice >

:width <numeric value> [ $\mu$  Sec]

:level <numeric value> [dB]

:level <numeric value> mV



## *Impairments Commands Summary*

---

:rate <numeric value> [pps]

:trigger

:pwrline :freq <choice> [Hz]

:metallic :harmonic1 < choice >

harmonic2 < choice >

:offset <numeric value> [dB]

:longitudinal :level <numeric value> [Vrms]

:Noise:Distribution <D4Mode|D2Mode>

:load1 <boolean>

:load2 <boolean>

:output <boolean>

:quiet





## 8. Impairments Commands Details

---

### 8.1 Crosstalk Generator A

#### 8.1.1 XTalk Generator A - Type

:source?:xtalkA :type <choice>

Range: OFF

T1.601  
DSLNEXT  
HDSL  
HDSL+ADSL

#### 8.1.2 Xtalk Generator A - Level

:source?:xtalkA :level <numeric value> [dBm]

Range: -75.0 to -30.0 dBm in 0.1  
dB steps

Xtalk Generator A – Program

:sourceA:xtalkA:Program:Data

:Start                tells the system to start a new data set  
:Name                must be in quotes, and is a maximum of 16 characters.  
                      (Type will, by default, be ‘external’ unless a name is programmed)  
:Minimum  
and Maximum        as per your level range

### 8.2 Crosstalk Generator B

#### 8.2.1 Xtalk Generator B - Type

:source?:xtalkB:type <numeric value>

Range: OFF

T1.601  
DSLNEXT



HDSL  
HDSL+ADSL  
ADSLNEXT

### 8.2.2 Xtalk Generator B - Level

:source?:xtalkB :level <numeric value> [dBm]

Range: -75.0 to -30.0 dBm in 0.1  
dB steps

### 8.2.3 Xtalk Generator B – Program

:sourceA:xtalkB:Program:Data

:Start tells the system to start a new data set

:Name must be in quotes, and is a maximum of 16 characters.  
(Type will, by default, be ‘external’ unless a name is programmed)

:Minimum  
and Maximum as per your level range

## 8.3 Crosstalk Generator C

### 8.3.1 Xtalk Generator C - Type

:source?:xtalkC:type <choice>

Range: OFF

ADSLFEXT  
ADSLA  
ADSLB  
T1  
AMI



### 8.3.2 Xtalk Generator C - Level

:source?:xtalkC :level <numeric value> [dBm]                      Range: -85.0 to -35.0 dBm in 0.1 dB steps

When selecting ADSLA in the high frequency crosstalk generator, make sure to select also the 10-tone type for the shaped noise generator, since ADSL Model A noise is made up of both Crosstalk noise and Shaped noise. The levels of shaped noise and ADSL model A noise that must be sent are different. The 10 tone noise must be set 36.2 dB less than the model A noise. So, to set model A noise to -55.4 dBm, you should send

```
:source?:xtalkC :type ADSLA
:source?:xtalkC :level -55.4 [dBm]
:source?:shaped:type 10-tone
:source?:shaped:level -91.6 [dBm]
```

### 8.3.3 Xtalk Generator C - Program

:sourceA:xtalkC:Program:Data

:Start                      tells the system to start a new data set  
:Name                      must be in quotes, and is a maximum of 16 characters.  
                              (Type will, by default, be 'external' unless a name is programmed)  
:Minimum  
and Maximum              as per your level range

## 8.4 Shaped Noise Generator

### 8.4.1 Shaped Noise Generator - Type

:source?:shaped :type <choice>                      Range:    OFF  
   BASIC\_RATE  
   HDSL  
   FTZ  
   10-tone



### 8.4.2 Shaped Noise Generator - Level

:source?:shaped :level <numeric value> [ $\mu$ V/ Hzuv/sqrt(Hz)]

Range: 3.2 to 100.0 in 0.1  $\mu$ V/ Hz steps

**OR**

:source?:shaped :level <numeric value> dBm/Hz      Range: -101.3 to -71.3 in 0.1 dB/Hz steps

Level value could be issued using any of the three units ( $\mu$ V/ Hz or dBm/Hz or dBm). Level is typically in  $\mu$ V/ Hz when type selected is either BASIC\_RATE, HDSL or FTZ. Level is typically in dBm when the type selected is 10-tone and is usually set to -70.0 dBm. Note that the units are NOT optional when setting the level in dBm/Hz or in dBm.

### 8.4.3 Shaped Noise Generator – Program

:sourceA:Shaped:Program:Data

:Start                    tells the system to start a new data set  
:Name                    must be in quotes, and is a maximum of 16 characters.  
                              (Type will, by default, be ‘external’ unless a name is programmed)  
:Size

## 8.5 White Noise Generator

### 8.5.1 Flat White Noise Generator - State

:source?:white :state <boolean> [dBm/Hz]      Range: OFF, ON

### 8.5.2 Flat White Noise Generator - Level

:source?:white :level <numeric value> [dBm/Hz]      Range: -140.0 to -90.0 in steps of 0.1 dB



## 8.6 Impulses

### 8.6.1 Impulses - Type

:source?:impulse :type <choice>

Range: off

3-level  
bipolar  
unipolar+  
unipolar-  
cook  
adsl-c1  
adsl-c2

### 8.6.2 Impulses - Width

:source?:impulse :width <numeric value> [:s] Range: 20 to 120 :s in 1 :s steps

Only applies to 3-level, bipolar and unipolar impulses

### 8.6.3 Impulses - Level

:source?:impulse :level <numeric value> [mV]

Range: 0.0 to 100.0 mV peak in  
0.1 mV steps

This syntax must be used only for non-complex impulses.

OR

:source?:impulse :level <numeric value> [dB]

Range: -20.0 to +6.0 dB in 0.1 dB  
steps

This syntax must be used ONLY for complex pulses.



### 8.6.4 Impulses - Rate

:source?:impulse :rate <numeric value> [pps]

Range: 0 to 100 pulses per seconds  
in 1 pps steps

### 8.6.5 Impulses - Single Shot

:source?:impulse :trigger

Range: none

The single shot command generates a single impulse as soon as the command is received.

## 8.7 Powerline Related Impairments

### Frequency

:source?: pwrline :freq <choice> [Hz]

Choice: 50, 60 Hz

### 8.7.1 Metallic Noise Sine Wave Generators

#### 8.7.1.1 Harmonic #1 Frequency

:source?: pwrline: metallic: harmonic1 <choice>

Choice: 0 to 6

where

- 0 = off
- 1 = fundamental (50/60 Hz)
- 2 = 2<sup>nd</sup> odd harmonic (150/180 Hz)
- 3 = 3<sup>rd</sup> odd harmonic (250/300 Hz)
- 4 = 4<sup>th</sup> odd harmonic (350/420 Hz)
- 5 = 5<sup>th</sup> odd harmonic (450/540 Hz)
- 6 = 6<sup>th</sup> odd harmonic (550/660 Hz)



### **8.7.1.2 Harmonic #2 Frequency**

:source?: pwrline: metallic: harmonic2 <choice>                      Range: 0 to 6

Note that the second frequency is disabled if both frequencies are equal.

### **8.7.1.3 Level Offset**

:Source?: pwrline :metallic: offset <numeric value> [dB]

Range: -10.0 to +10.0 dB in 0.1 dB steps

To turn off a tone entirely, use the tone frequency command.

## **8.7.2 Longitudinal Noise Triangle Wave Generator**

:source?:pwrline :longitudinal :level<numeric value> [Vrms]

Range: 0 to 60 Vrms in 1V steps when  
powerline frequency is 60 Hz.

Range: 0 to 50 Vrms in 1V steps when  
powerline frequency is 50 Hz.

Associated with the longitudinal noise, the longitudinal loads should also be controlled. The ETSI standard requires that both loads (located on both side of the transformer) be inserted any time the longitudinal voltage is generated. For ANSI standards, only ONE load should be inserted.

#### **Longitudinal Loads**

:source?:load1 <boolean>                      Range: OFF, ON

:source?:load2 <boolean>                      Range: OFF, ON

Also associated with the longitudinal impairment is the command which sets the secondaries of the longitudinal transformer in or out of circuit. See section 6.5.6



### **8.8 Quiet**

This command turns off all impairments but leaves the output stage connected on tip and ring:.

source?: Quiet Range: none

This command does a “soft” reset of the card and is equivalent to the following commands:

:source?:pwrline:freq 60 Hz

:metallic :harmonic1 0

:harmonic2 0

:offset 0.0 dB

:longitudinal :level 0 Vrms

:impulse:type OFF

:width 50 us

:level 0.0 mV

:rate 0 pps

:shaped :type OFF

:level 3.2 uv/sqrt(Hz)

:xtalkA :type OFF

:level -75.0 dBm

:xtalkB :type OFF

:level -75.0 dBm

:xtalkC :type OFF

:level -85.0 dBm

:white :level -140.0 dBm/Hz

:state off





## *Impairments Commands Details*

---

:load1 OFF

:load2 OFF

### **8.9 Output Stage**

Connects and disconnects the impairments generator

source? :output <boolean>                      Range: OFF, ON

### **8.10 Sending Downloadable Shapes files to the NSA 400**

For each downloadable shape, the file on disk is an ASCII text file. Three types of files are available and are differentiated by their extension: .LO1, .LO2 and .HI. The .LO1 files may be downloaded to either crosstalk generator A and B. The .LO2 files may only be downloaded to crosstalk generator B, while the .HI files may only be downloaded to crosstalk generator C. Keywords are used, and each starts with “\_” and ends with “:”. Note that these parameters are stored in volatile RAM, which means that if the unit is turned off, or if another crosstalk noise is selected (including “OFF”), the entire programming sequence needs to be re-sent.

The following example describes how to send the file “HDSL2 Dn NEXT (H2TUC).Lo1 Rev 00” to the simulator. An entire captured programming sequence is also shown.

\_Name: HDSL2 Dn NEXT (H2TUC).Lo1 Rev 00

This identifies the loaded xtalk shape. This is generally the same name as the filename.



## Impairments Commands Details

---

### \_Description:

Name: HDSL2 Dn NEXT (H2TUC).Lo1 Rev00  
Type: HDSL 2 downstream NEXT (H2TUC)  
Std: ANSI T1E1.4 HDSL 2 Recommendation  
Range: -30 to -80 dBm  
Cal: 135 ohm  
49 dist: -33.9 dBm  
39 dist: -34.5 dBm  
24 dist: -35.6 dBm  
10 dist: -37.9 dBm

Free form description.

Skip to the next section.

### \_ Category:

*For future use.*

\_Max: -30

Send :sourcea:xtalka:program:maximum <\_Max>  
e.g. :sourcea:xtalka:program:maximum -30

\_Min: -80

Send :sourcea:xtalka:program:minimum <\_Min>  
e.g. :sourcea:xtalka:program:minimum -80



## *Impairments Commands Details*

---

\_Compatibility:

FLASHLO: 10

CONTROLLER: 16

The keywords FLASHLO and CONTROLLER are used in this section.

The symbol “.” precedes the minimum requirement. Any revision equal to **or** greater than the value which follows this symbol, will be considered compatible.

In this example, the file can only be downloaded if the FLASHLO rev is equal to or higher than 10 AND if the controller rev is 16 or higher.

Get the FLASHLO rev by issuing the command:  
**:sourcea:test:revision:flashlo**

Get the CONTROLLER rev by issuing the command:  
**\*IDN?**



## *Impairments Commands Details*

---

\_Coefficients:

Send **:sourcea:xtalka:program:start**. The “start” command may be issued at any time, but must be done **before** issuing any “data” commands.

Send **:sourcea:xtalka:program:data xx,yy,zz,...** for dB Offset and the prg filter data in **1** command – this information will be contained in the first 2 lines under \_Coefficients.

Throughout this process, numbers should be translated from decimal (or binary) to hexadecimal format. No suffixes are required (e.g. 81h should be sent as 81). Anything following a semi-colon should be discarded, as well as any “db” or “dw” statement. The db statement indicates that the number is a byte, dw indicates that it is a word. A hexadecimal value is followed by a “h”, a binary value is followed by a “b”, and a decimal does not have any suffix. Any blank line should be discarded.

```
db 081h,010h          ;dB Offset Hi/Lo
db 001h,01Dh,021h,036h ;prg filter data[0..3]: 3.5 dB/
166 kHz
```

Send **:sourcea:xtalka:program:data xx,yy,zz,...** for the mux setting and FIR parameters in **1** command. This information will be contained in the next 8 lines.

```
db 00000000b          ;b3 = selxt1/ b4=selxt2/ b5= selxt3
db 00101000b          ;Base+0 - FIR Configuration
db 59                 ;Base+1 - FIR Length
db 01101000b          ;Base+3 - FIR Input format
db 00100001b          ;Base+4 - FIR Output timing
db 11001100b          ;Base+5 - FIR Output format
db 00000010b          ;Base+6 - FIR Symmetry (ODD)
db 01101000b          ;Base+7 - FIR Mix Factor
```

---

## 9. Common Command Set

---

As specified in the IEEE 488.2 standard, a number of common commands are required to set up and control of the standard functions of remote-controlled devices. They can be used with both the IEEE 488 and the RS-232 interfaces. These common commands are as follows:

**\*CLS                      Clear Status Command**


Type:                      Status command

Function:                Clears the Event Status Register (ESR). Clearing the Event Status Register will also clear ESB, the bit 5 of the Status Byte Register (STB). It has no effect on the output queue (bit 4 of the STB).

**\*ESE <NRF>            Event Status Enable**

Type:                      Status command

Function:                Sets the Event Status Enable Register (ESER) using an integer value from 0 to 255, representing a sum of the bits in the following bit map:

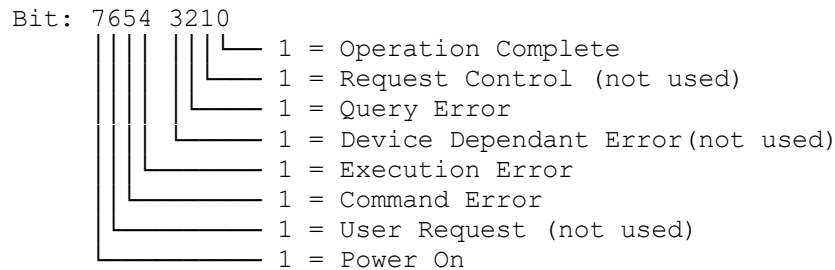

Bit 7 to 0 have a respective value of 128, 64, 32, 16, 8, 4, 2 and 1. For example if bit 3 and 5 are set then the integer value is 40 (8+32).

The ESER masks which bits will be enabled in the Event Status Register (ESR). See section 6.8.2 for more detail.

On power-on, the register is cleared if the Power-on Status Clear bit is 1, or restored if the bit is 0 (see \*PSC for more details).



## Common Command Set

---

**\*ESE?**                    **Event Status Enable Query**  
Type:                    Status command  
Function:                An integer value between 0 and 255 representing the value of the Event Status Enable Register (ESER) is placed in the output queue. The possible values are described in the \*ESE command section, and in more detail in section 6.8.2.

**\*ESR? Event Status Register Query**  
Type:                    Status command  
Function:                An integer value between 0 and 255 representing the value of the Event Status Register (ESR) is placed in the output queue. Once the value is placed in the output queue, the register is cleared. The command will turn the REMOTE LED green if the LED was red. The possible values are described in the \*ESE command section, and in more detail in section 6.8.2.

**\*IDN?**                    **Identification Query**  
Type:                    System command  
Function:                Returns the ID of the unit. Upon receiving this command the DLS 400 will put the following string into the output queue:

CONSULTRONICS LTD,DLS 400,<SN>,<Ver>

where:

<SN>                    is the serial number of the unit  
<Ver>                  is the revision level of the control firmware (always 2 digits)

**\*OPC**                    **Operation Complete**  
Type:                    Synchronization command  
Function:                Indicates to the controller when the current operation is complete. This command will cause the DLS 400 to set bit 0 in the Event Status Register (ESR) when all pending operations are completed. The bit is read with the \*ESR? command, which also clear the bit. Communication can proceed as normal after this command, but be prepared to receive SRQ at any time. See section 6.9 “DLS 400 Synchronization” for more details.

---

**\*OPC? Operation Complete Query**

Type: Synchronization command  
Function: Indicates when the current operation is complete. This will cause the DLS 400 to put an ASCII 1 (decimal 49, hex 31) in the output queue when the current operation is complete. Communication can proceed as normal after this command, but be prepared to receive the “1” at any time. See the section 6.9 “DLS 400 Synchronization” for more details.

**\*PSC <NRf> Power-on Status Clear**

Type: Status and event command  
Function: Indicates if the unit should clear the Service Request Enable Register and the Standard Event Status Register at power-on. If 1 (or higher) then all the enable registers are cleared at power-on, if 0 then all the enable registers are restored from the non-volatile RAM at power-on. The factory default is 1 (clear all the enable registers). Any change to the “Power-on Status” is saved in non-volatile RAM, and is always restored on power up.

**\*PSC? Power-on Status Clear Query**

Type: Status and event command  
Function: Return the Power-on Status Clear value. If 1 then all the enable registers are cleared at power-on, if 0 then all the enable registers are restored from the non-volatile RAM at power-on. The factory default is 1 (clear all the enable registers).

**\*RST Reset**

Type: Internal command  
Function: IEEE 488.2 level 3 reset. This command will initialize the DLS 400 with the bypass loop, and cancel any pending \*OPC operation. It will not affect the output buffer or other system settings of the unit. Note that this is NOT equivalent to the power-up reset and the IEEE 488 “Device Clear”.




## Common Command Set

---

### **\*SRE <NRf>      Service Request Enable**

Type:              Status command

Function:          Sets the Service Request Enable Register (SRER). An integer value indicates which service is enabled, with the following bit map:

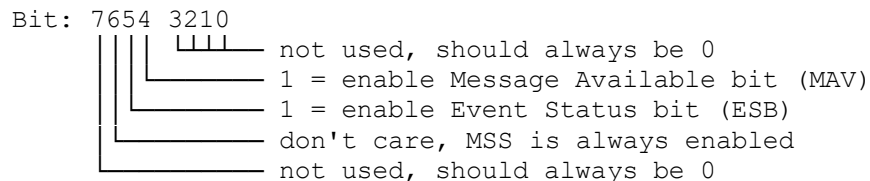

Bit 7 to 0 have a respective value of 128, 64, 32, 16, 8, 4, 2 and 1. For example if bit 4 and 5 are set then the integer value is 48 (16+32).

Note that if both MAV and ESB are disabled, then the bits MSS and RQS and the line SRQ are never going to be raised (see section 6.8.1 for more details).

On power-on, this register is cleared if the Power-on Status Clear bit is 1, or restored if the bit is 0 (see \*PSC for more details).

### **\*SRE?              Service Request Enable Query**

Type:              Status command

Function:          An integer value representing the value of the Service Request Enable Register is placed in the output queue. The possible values are listed in the \*SRE command section.

### **\*STB?              Status Byte Query**

Type:              Status command

Function:          The value of the Status Byte Register is put into the output queue. Contrary to the “\*ESR?” command, this register is not cleared by reading it. The register will be zero only when all its related structures are cleared, namely the Event Status Register (ESR) and the output queue.



Bit: 7 6 5 4 3 2 1 0

- not used, should always be 0
- MAV: Message Available bit
- ESB: Event Status Bit
- MSS: Master Summary Status bit
- not used, should always be 0

Bit 7 to 0 have a respective value of 128, 64, 32, 16, 8, 4, 2 and 1. For example if bit 4 and 5 are set then the integer value is 48 (16+32).

Note that bit 6 is MSS, which does not necessarily have the same value as RQS (see section 6.8.1 for more details).

**\*TST?**                      **Self-Test Query**  
 Type:                      Internal command  
 Function:                Returns the results of the self-test done at power up. The number returned has the following bit map:

Bit: 7 6 5 4 3 2 1 0

- 0 = passed micro-controller test
- 0 = passed non-volatile RAM test
- 0 = passed dip switch test
- 0 = passed EPROM test
- 0 = not used, always 0
- 0 = not used, always 0
- 0 = not used, always 0

Bit 7 to 0 have a respective value of 128, 64, 32, 16, 8, 4, 2 and 1. For example if bit 3 and 5 are set then the integer value is 40 (8+32).

**\*WAI**                      **Wait to continue**  
 Type:                      Synchronization command  
 Function:                Used to delay execution of commands. The DLS 400 will ensure that all commands received before “\*WAI” are completed before processing any new commands. This means that all further communication with the DLS 400 will be frozen until all pending operations are completed. See section 6.9 “DLS 400 Synchronization” for more details.

### 9.1 Status Reporting

There are two registers that record and report the system status, the Status Byte Register (STB), and the Event Status Register (ESR).

For both registers there are three basic commands: one to read the register, one to set the enabling bits, and one to read the enabling bits.

	Status Byte Register	Event Status Register
Read Register	*STB?	*ESR?
Set Enabling Bits	*SRE <NRf>	*ESE <NRf>
Read Enabling Bits	*SRE?	*ESE?

Where <NRf> is the new value of the register.

#### 9.1.1 Status Byte Register (STB)

The bits of this register are mapped as follows :

##### bit 4: MAV (Message Available Bit)

Indicates that the Output Queue is not empty. If MAV goes high and is enabled then MSS goes high.

##### bit 5: ESB (Event Status Bit)

It indicates that at least one bit of the Event Status Register is non zero and enabled. If ESB goes high and is enabled then MSS goes high.

##### bit 6: MSS/RQS (Master Summary Status/Request Service)

MSS is raised when either MAV or ESB are raised and enabled. When the status of MSS changes, the whole Status Byte Register is copied into the Status Byte of the GPIB controller, where bit 6 is called RQS. When RQS goes high so does the SRQ line, and in response to an IEEE 488.1 Serial Poll command, both are cleared.

RQS and SRQ are defined by the IEEE 488.1 standard and are hardware related. MSS summarizes all the status bits of the DLS 60, as defined by the IEEE 488.2 standard.

**bits 7, 3, 2, 1, and 0: those bits are not used by the DLS 400.**

---

### 9.1.2 Event Status Register (ESR)

The Event Status Register monitors events within the system and reports on those enabled. It records transitory events as well. The DLS 400 implements only the IEEE 488.2 Standard Event Status Register (ESR). It is defined as:

- bit 0**    Operation Complete. This bit is set in response to the \*OPC command when the current operation is complete.
- bit 1**    Request Control. The DLS 400 does not have the ability to control the IEEE bus, and so this bit is always 0.
- bit 2**    Query Error. There was an attempt to read an empty output queue or there was an output queue overflow. (maximum output queue capacity is 75 bytes).
- bit 3**    Device Dependent Error. This error bit is set when the DLS 400 receive a command to set the length of a fixed loop. Only variable loops can have their length changed.
- bit 4**    Execution Error. The data associated with a command was out of range.
- bit 5**    Command Error. Either a syntax error (order of command words) or a semantic error (spelling of command words) has occurred. A GET (Group Execute Trigger) or \*TRG command will also set this bit.
- bit 6**    User Request. Indicates that the user has activated a Device Defined control through the front panel. Not used, so this bit is always 0.
- bit 7**    Power on. This bit is set when the DLS 400 is turn on. Sending \*ESR? clears the bit and stays clear until the power is turned on again.

The setting of the Event Status Register can be read with the Event Status Register query command (\*ESR?). This will put the value of the register in the output queue, AND will clear the register.

### 9.2 DLS 400 Synchronization

The program controlling the DLS 400 can use three different commands to synchronize with the DLS 400: \*OPC, \*OPC? and \*WAI. Following are the main differences:

	Set Operation Complete bit when Done	Return “1” when operation complete	Raise SRQ when operation complete	Block comm. with the DLS 400	Required Enable Bit (s)
*OPC	Yes	No	Yes (1)	No	Operation Complete, ESB
*OPC?	No	Yes	Yes (2)	No	MAV
*WAI	No	No	No	Yes	None

- 1) if “Operation Complete” and ESB are enabled
- 2) if MAV is enabled


The main difference between OPC and WAI is that WAI will block any further communication with the DLS 400 until all pending operations are completed.

The main difference between \*OPC and \*OPC? is that \*OPC sets the “Operation Complete” bit, and \*OPC? will return an ASCII “1” when all pending operations are completed.

Make sure that all the required enable bits are set.

When using \*OPC or \*OPC?, the program controlling the DLS 400 can determine when the operation is completed by waiting for SRQ, or by reading the status byte with the serial poll or with \*STB? (if corresponding bits are enabled).

If the program uses the \*OPC? command and then sends more queries, the program must be ready to receive the “1” concatenated to other responses at any time. When using \*WAI, the communication time out should be set long enough to avoid losing data (the DLS 400 needs approximately 2 seconds to set a loop).



---

## 10. TROUBLE SHOOTING

---

**1) The power LED flashes red:**

At power up, the DLS 400 performs a self-test. If this self-test fails, the power LED flashes red. If this happens, consult the factory.

**2) The power LED is yellow:**

If the DLS 400 detects an internal error, it does a full system initialisation and turns the power LED yellow. If this happens, consult the factory.

**3) The remote LED is off:**


This is normal after a power-up and a reset.

**4) The remote LED is red:**

The DLS 400 received an invalid command from the control computer. See section 3.5 for more details.

**5) The DLS400 program gives a communication error:**

- Check that the GPIB and VISA drivers are installed.



## ***Troubleshooting***

---

If using the serial interface:

- Check that no device (such as a mouse) is connected to the same serial (COM) port as the DLS 400.

If using the IEEE 488 interface:


- Check that no device has the same IEEE 488 address as the DLS 400.
- Check that the IEEE 488 address of the DLS 400 corresponds to the address set in the program. See section 6.1.00b0)).0.1 for more details.

For both interfaces:

- Check the cabling.
- Check that all the cards in the system are firmly seated in their sockets. Using anti-static precautions, open the lid and push down on all the cards.

### **1) The DLS 400 does not raise SRQ after a query:**

- You must enable all the relevant bits before using SRQ. For example, to raise SRQ when there is a message available (MAV) send the command “\*SRE 16”. See sections 6.1.1 and 6.7 for more details.
- If the remote LED is red, you may have sent an invalid command. See sections 3.5 and 6.7 for more details.
- Queries must be terminated with a question mark.




## 11. CHARACTERISTICS OF FIXED LOOPS

The DLS 400 is designed to simulate various cable configurations that are found in North America between the telephone company premises and a customer site. These are often known as “Local Loops”. We have chosen loops that consist of twisted pair wiring only. Further, we have selected loops that are specified, or seem likely to be specified, by ANSI’s T1 committee for the testing of ADSL transmissions. In addition we have added 4 user configurable loops.

The simulation is for differential mode (metallic) signals. Simulation characteristics include attenuation, impedance, and delay on the loop. The design goal was to achieve excellent simulation up to 1.5 MHz, and we think that this has been achieved. In fact, although the attenuation is too great at 2 MHz, we are confident that the DLS 400 is good enough for testing beyond this frequency.

The following graphs characterize the 28 of the 29 standard loops within the DLS 400. (We have not characterized the “Bypass” loop.) We have not attempted to provide curves for the variable loops since there are far too many of them.

Each page shows the attenuation and input impedance presented by ideal cable made up in the appropriate configuration. For the attenuation graph, we have shown the ideal curve in each case and spot frequencies measured on a DLS 400. You should be aware that at attenuations of 60 to 70 dB and more, there is some crosstalk from input to output. If you take a network analyzer and measure attenuations greater than this, you may see some waviness in the response on some loops. As an example, a network analyzer response of ANSI Loop 5 is shown here.

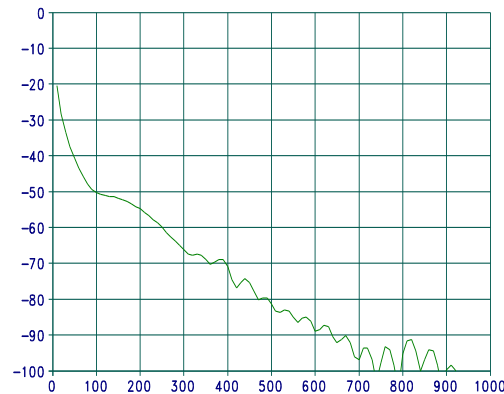

Impedance is complex, so each impedance graph plots real and imaginary part of the input impedance of the cable. The bold curves are the characteristics of the ideal cable. Superimposed on the bold curves are measured results of a prototype DLS 400.

Sometimes the curves are so close that you cannot see the difference, showing an extremely good simulation. We do not think that any differences in the 2 curves will materially affect your results, but we publish them so that you know they exist, and can take whatever actions you believe are appropriate.

11.1.1 CSA LOOP #1


Attenuation

Curve =

Calculated Attenuation of Ideal Cable

+ =



Attenuation Measured on DLS 400

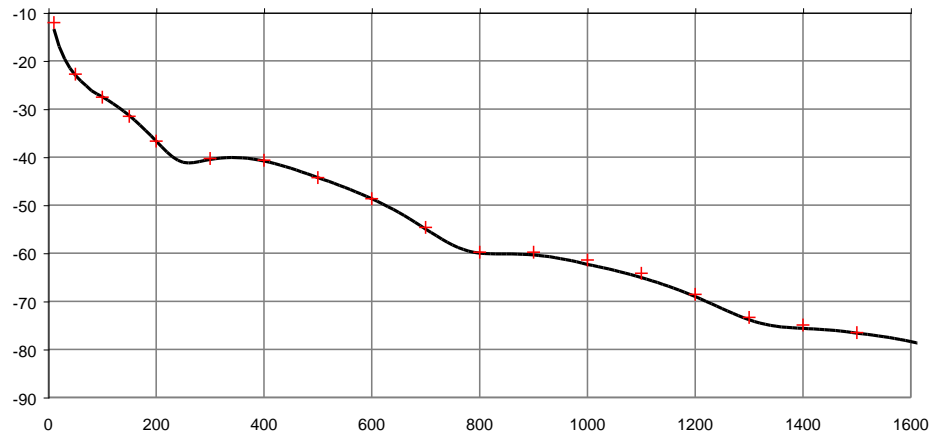



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

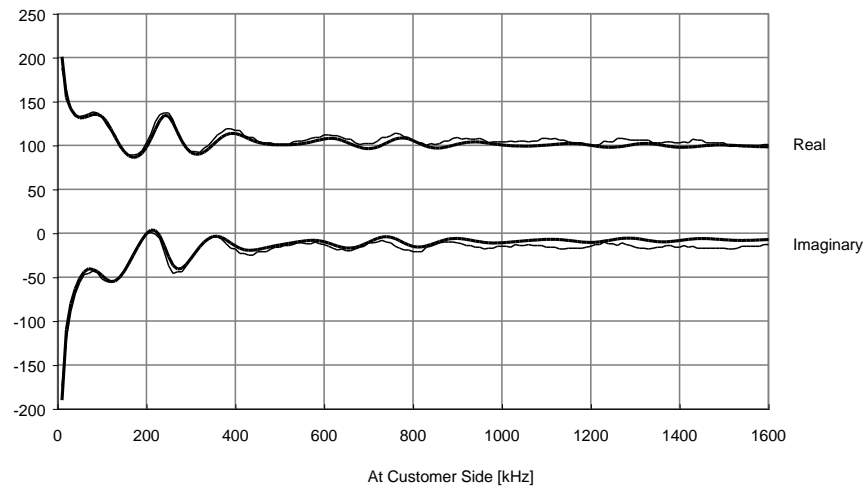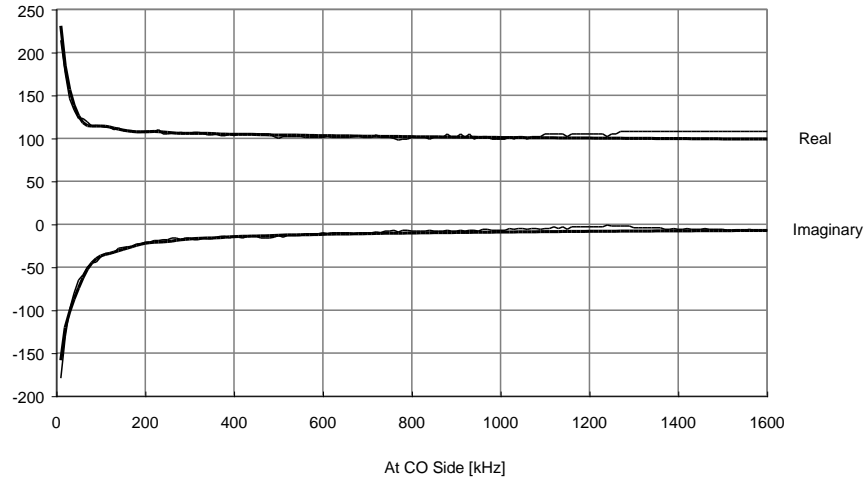


### 11.1.2 CSA LOOP #2

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

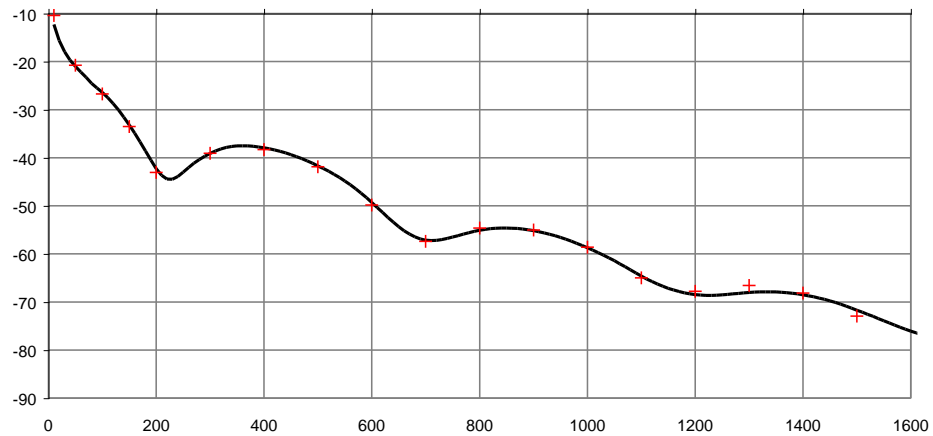



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

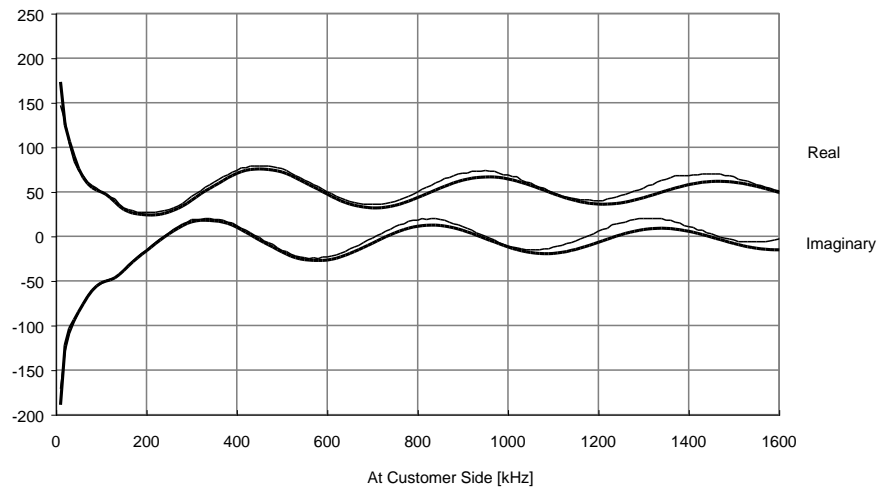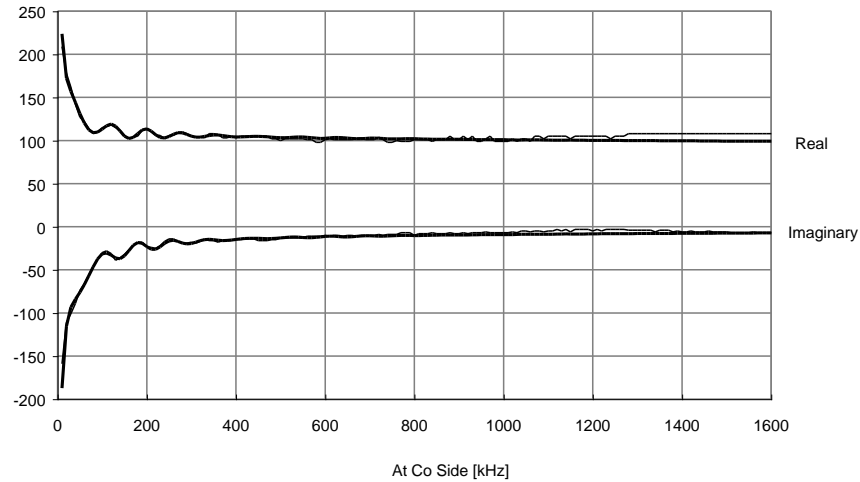

### 11.1.3 CSA LOOP #4



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

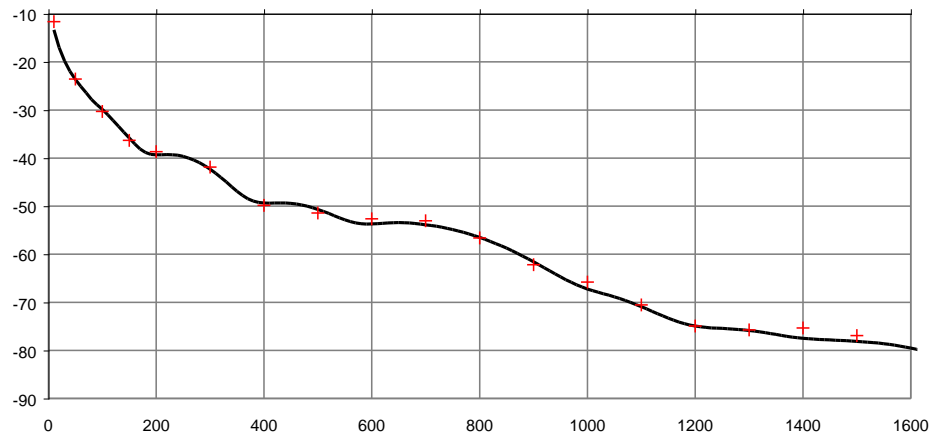

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

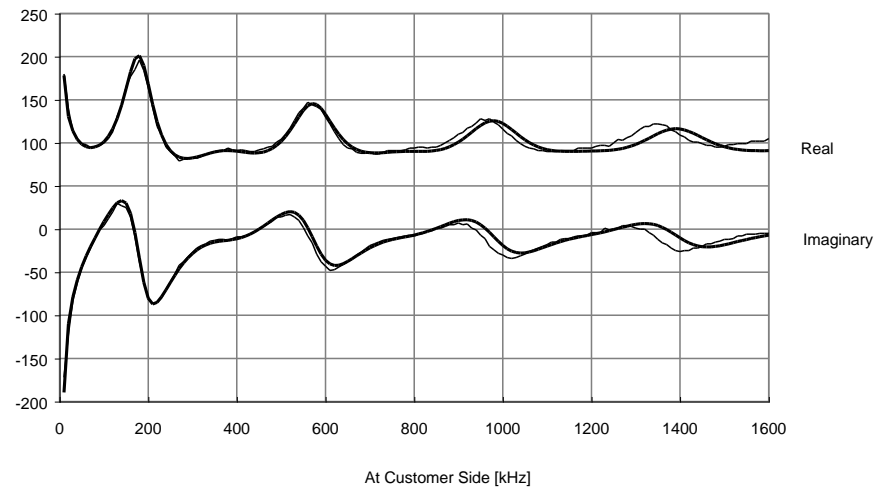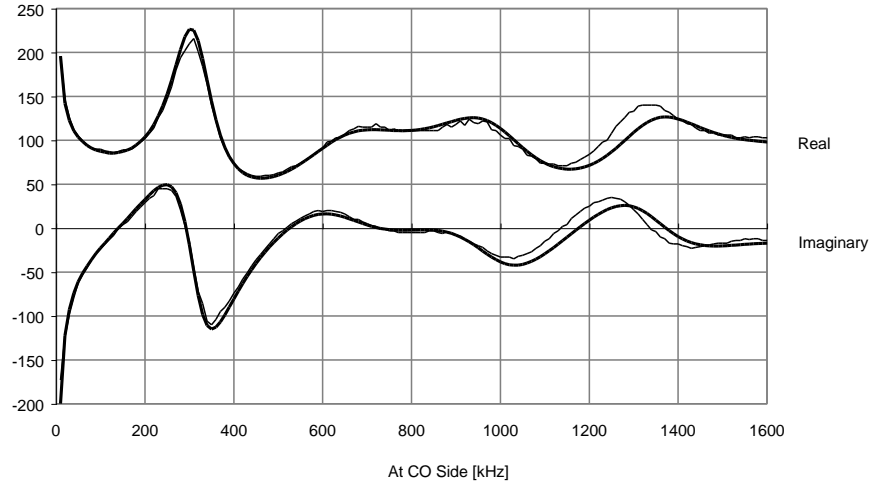

### 11.1.4 CSA LOOP #5



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

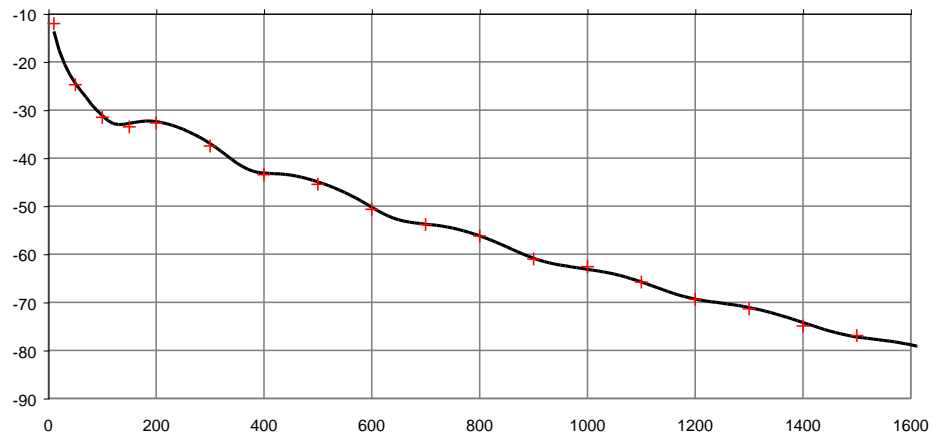

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

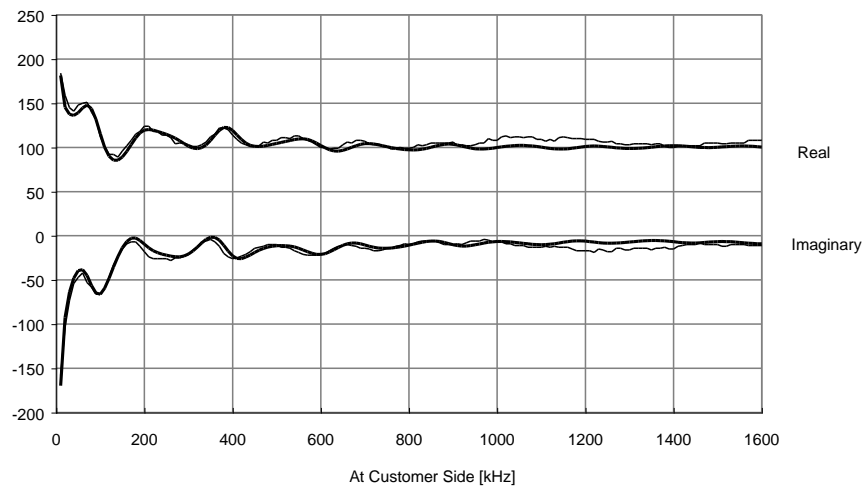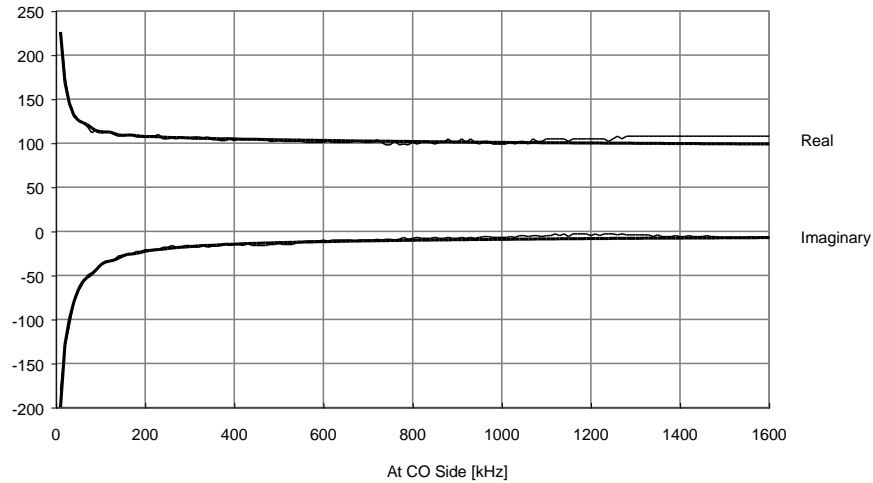

### 11.1.5 CSA LOOP #6

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

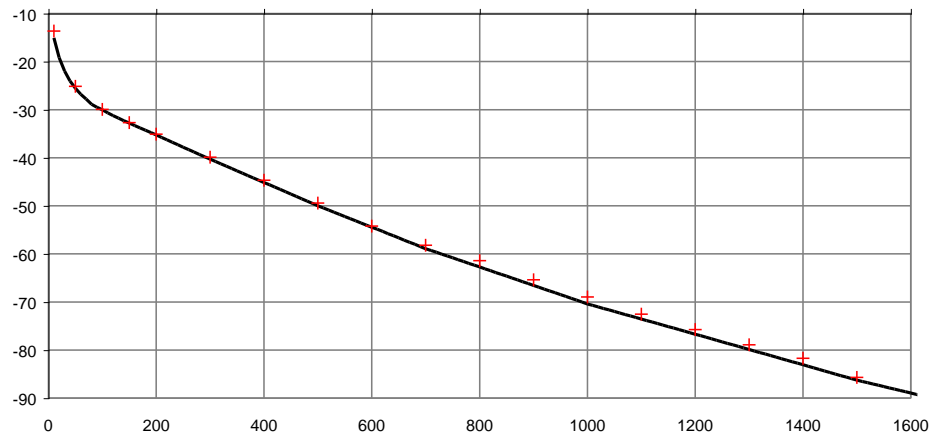



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

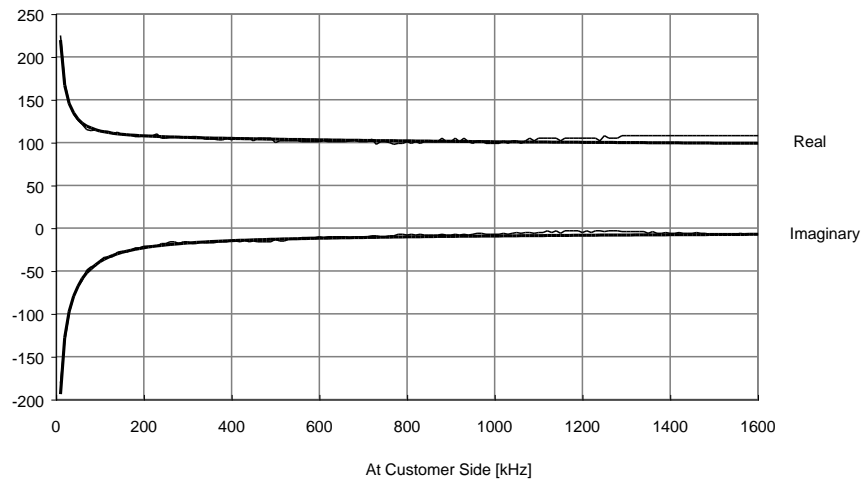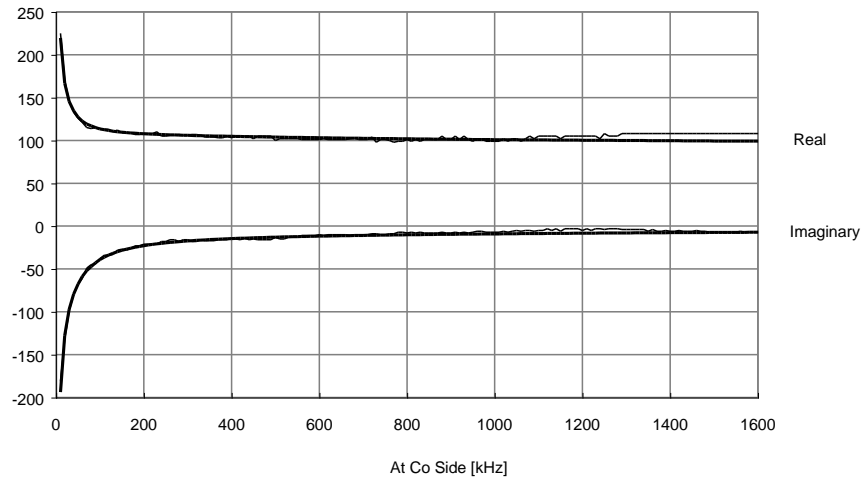


### 11.1.6 CSA LOOP #7

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

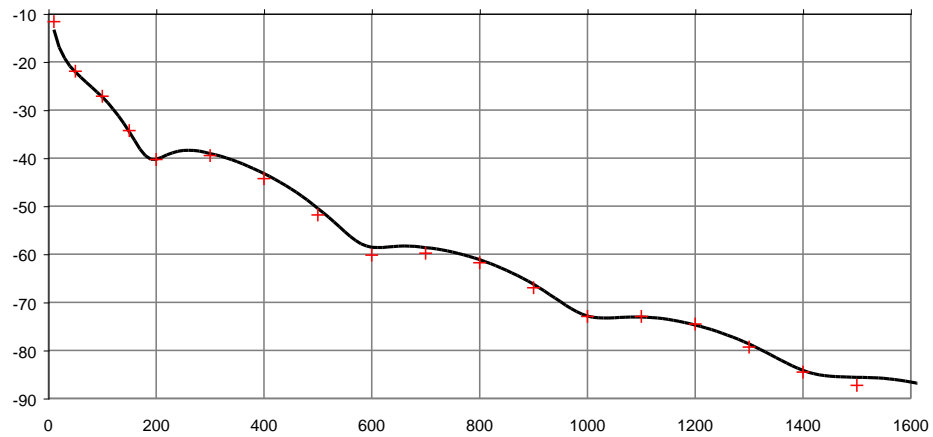



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

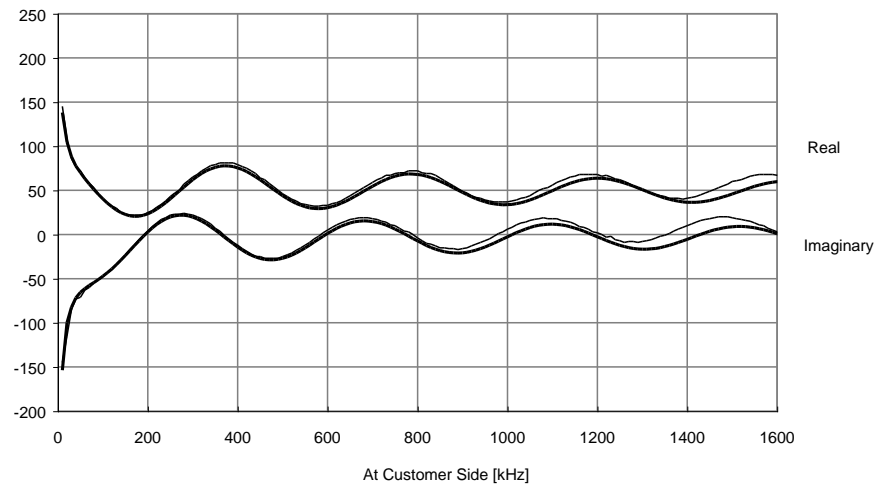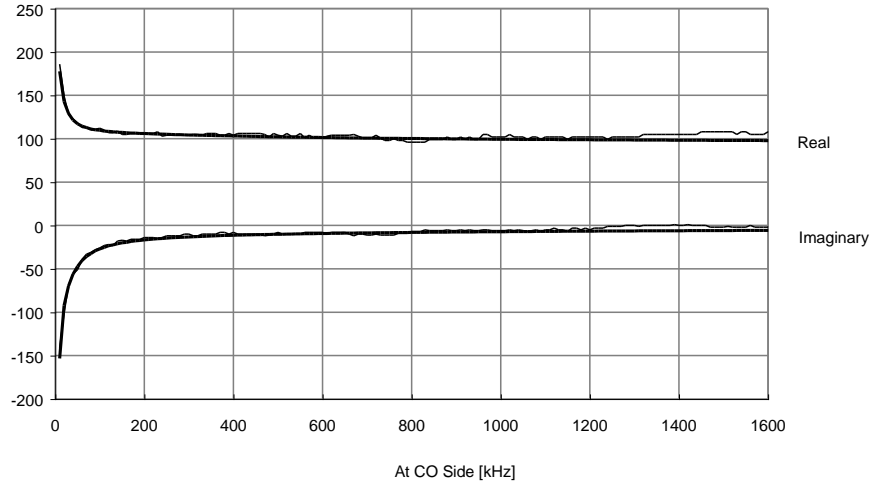

### 11.1.7 CSA LOOP #8



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

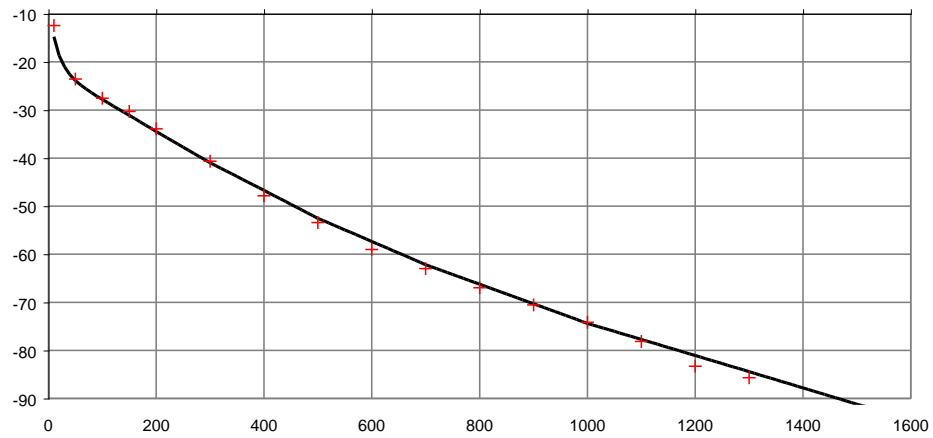

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

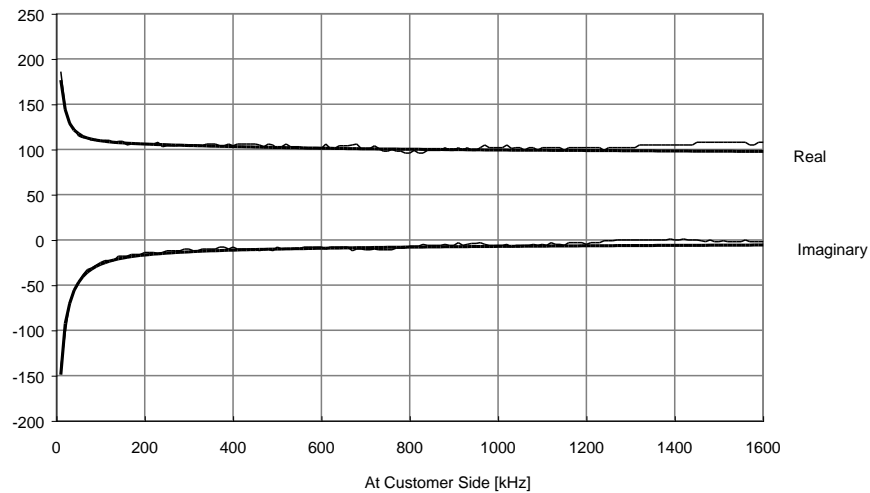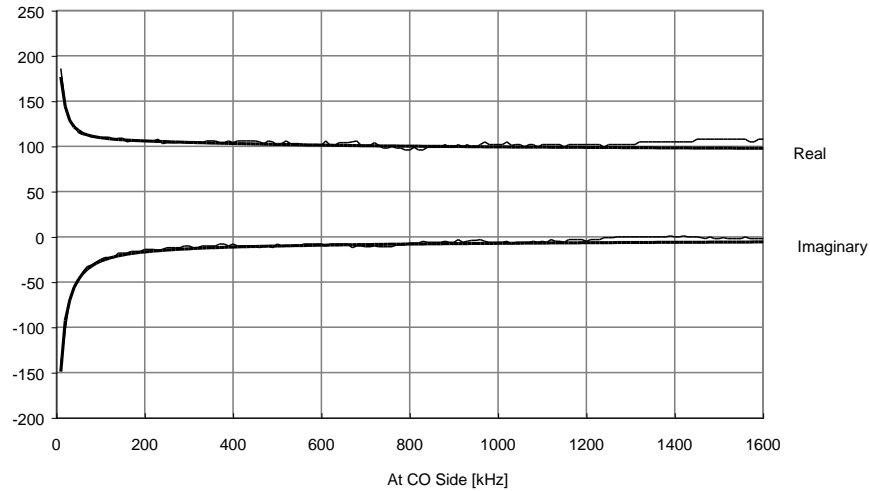


### 11.1.8 EXTENDED-CSA LOOP #9

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

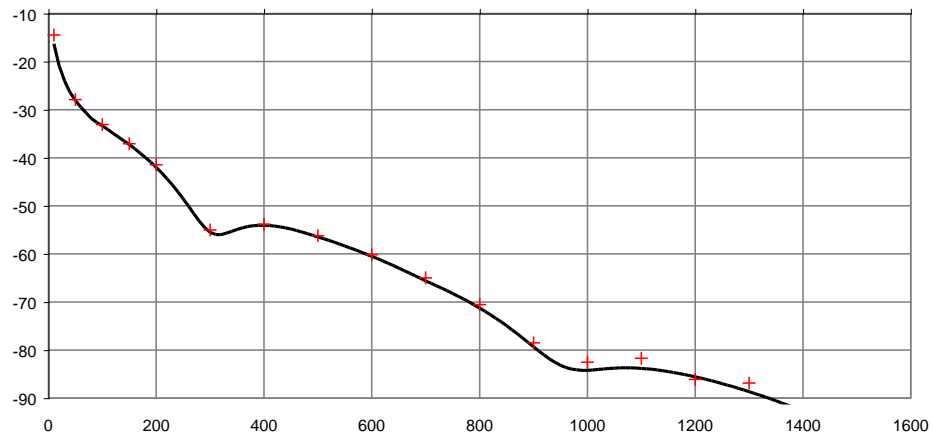



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

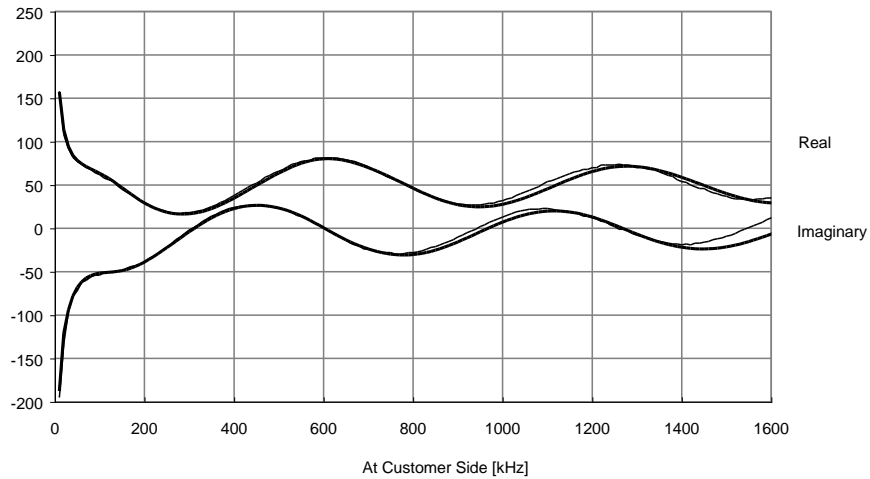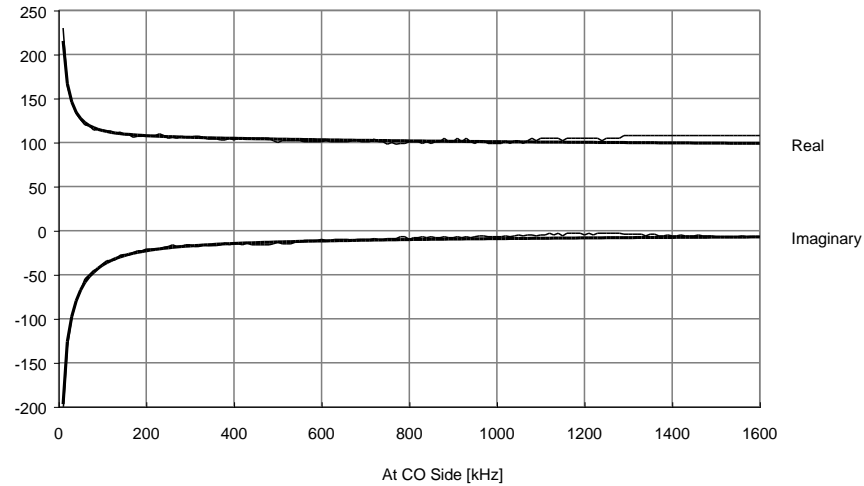


### 11.1.9 EXTENDED-CSA LOOP #10

#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400


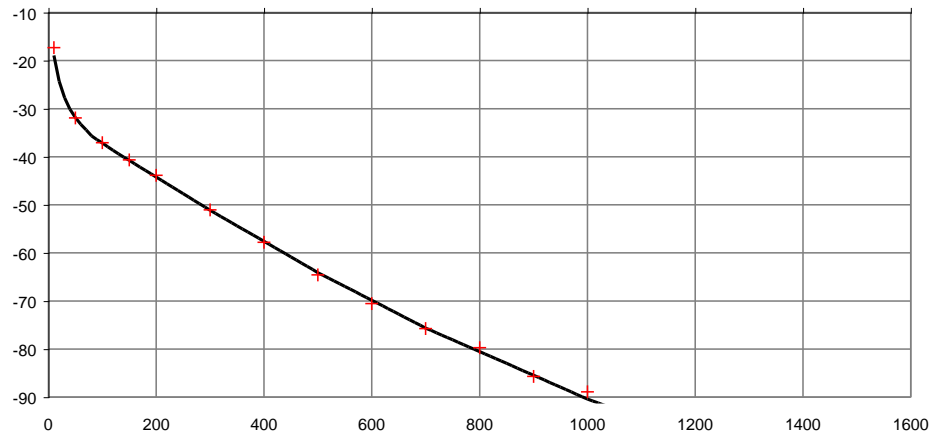






## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

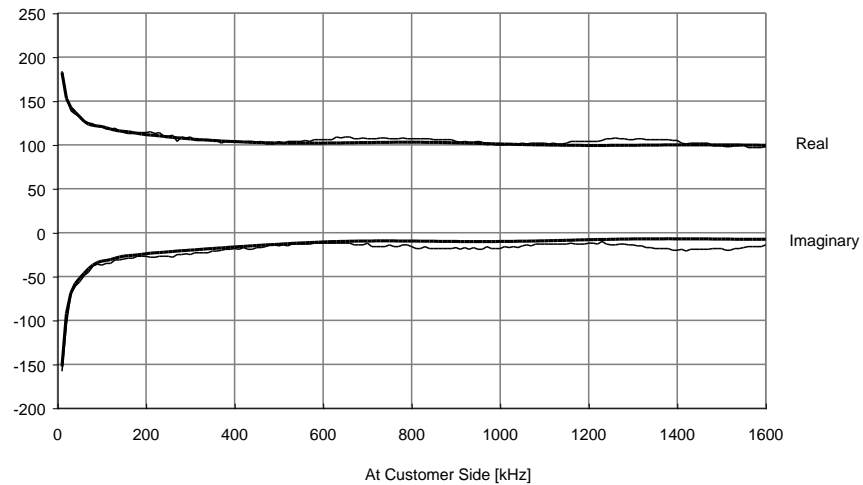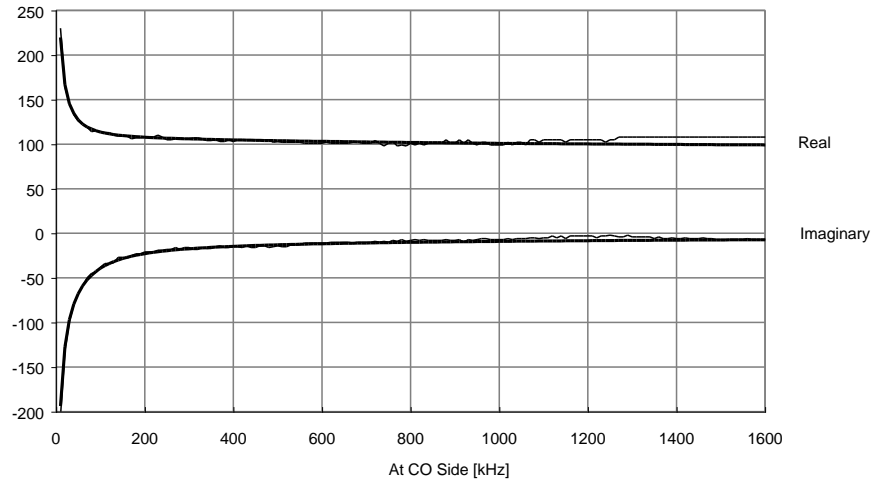

### 11.1.10 MID-CSA LOOP #0



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

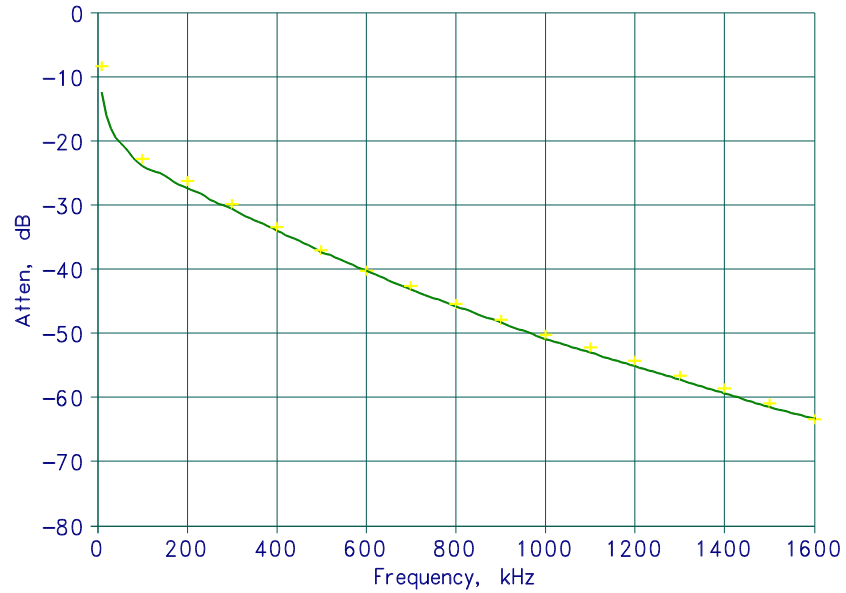

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

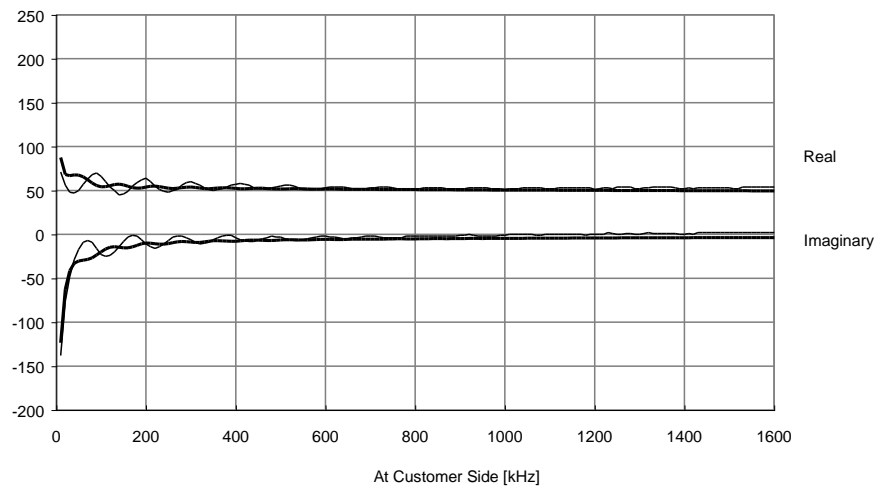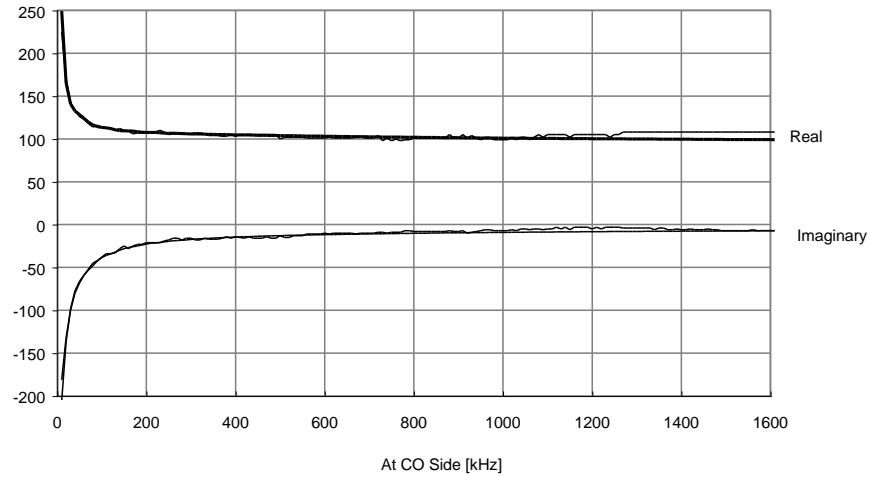


### 11.1.11 MID-CSA LOOP #1

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

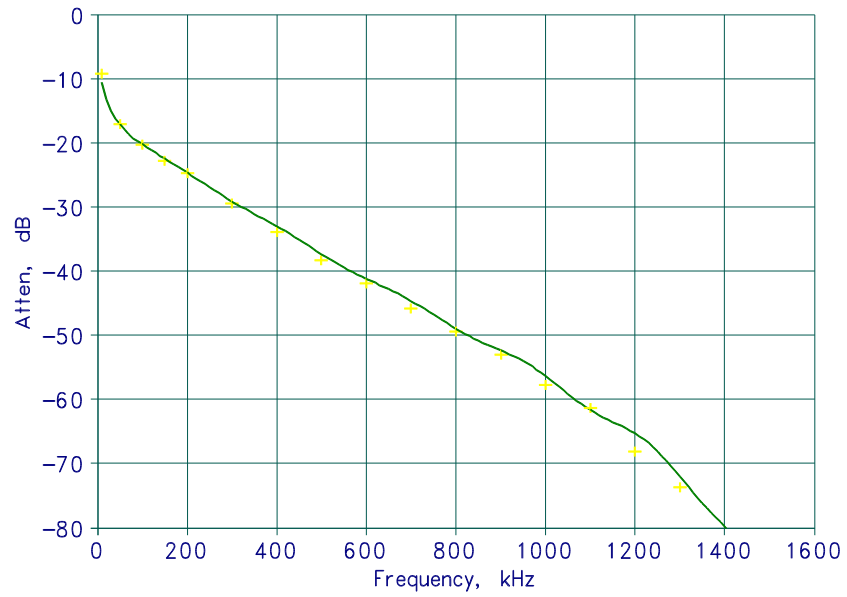



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

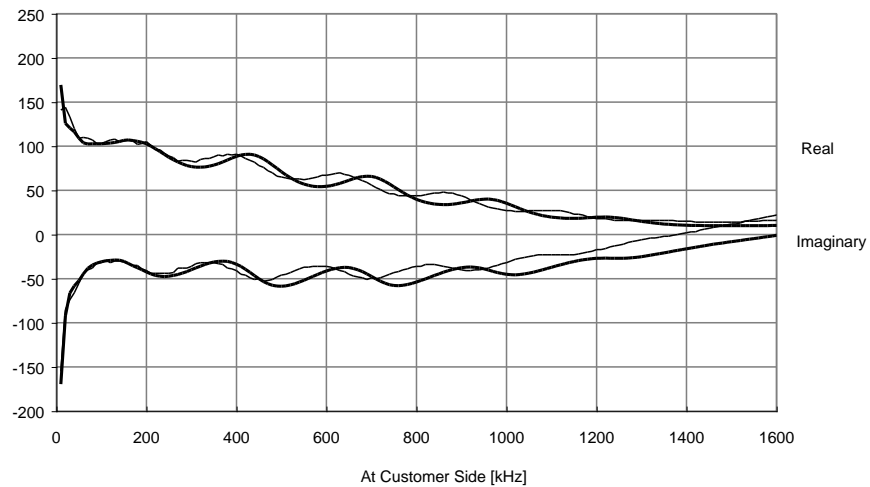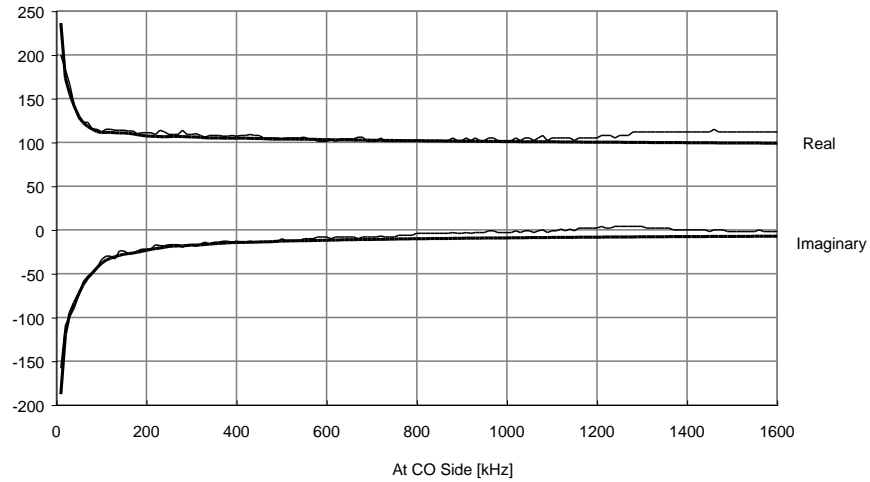


### 11.1.12 MID-CSA LOOP #2

#### Attenuation


Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

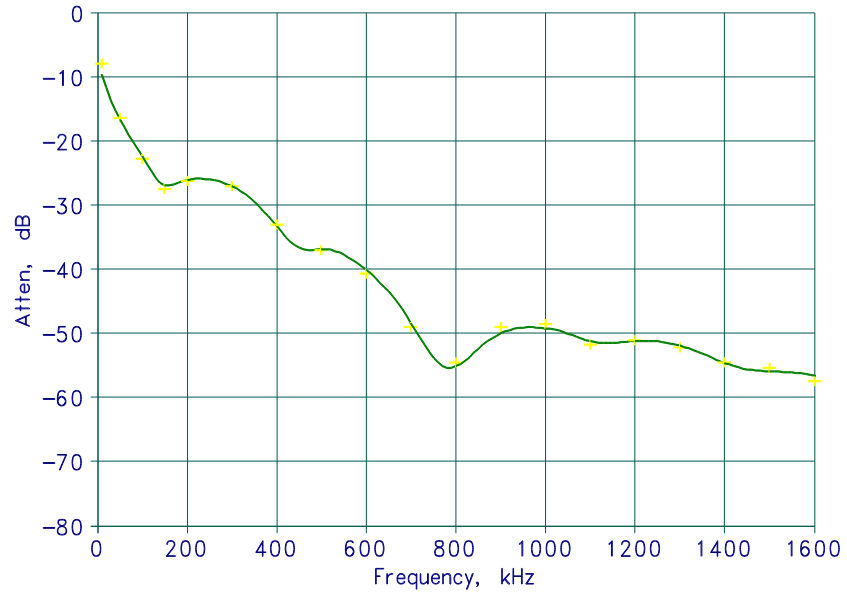



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

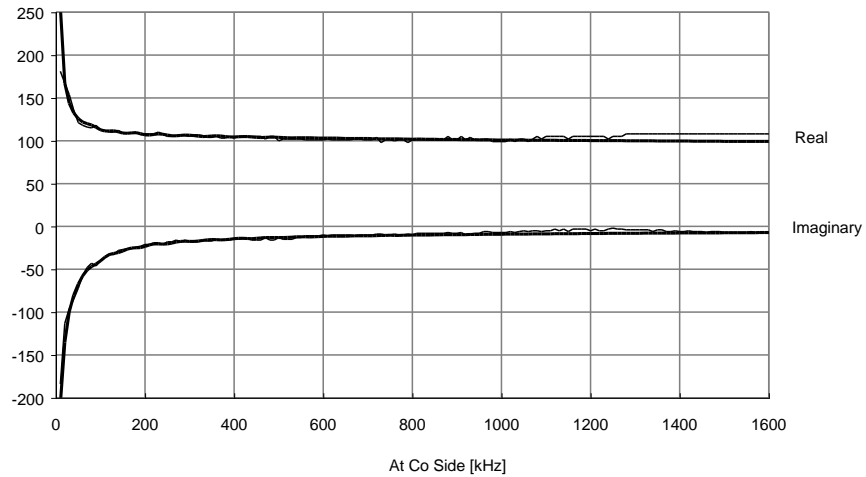

### 11.1.13 MID-CSA LOOP #3

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

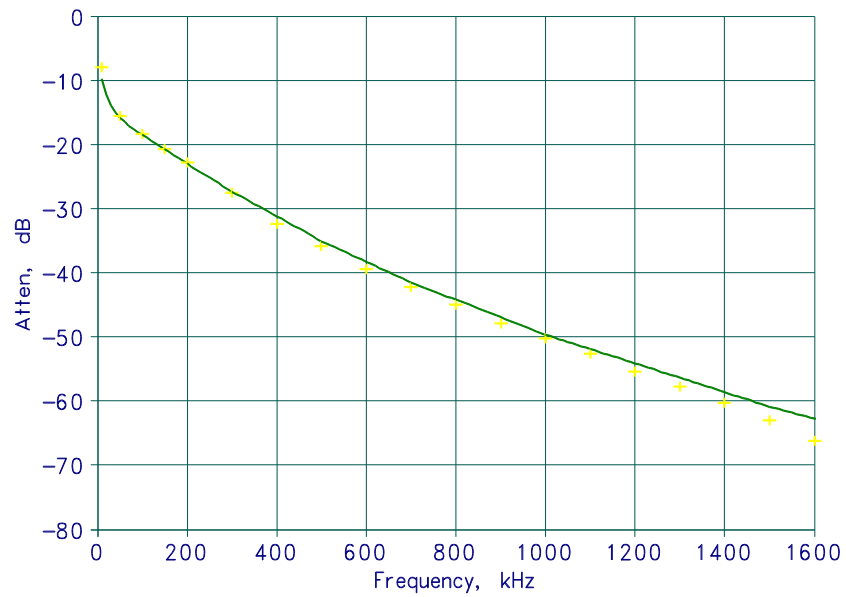



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

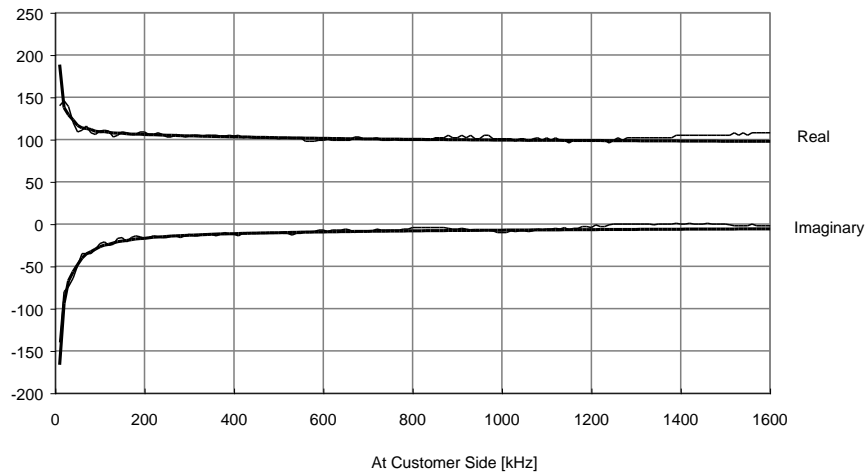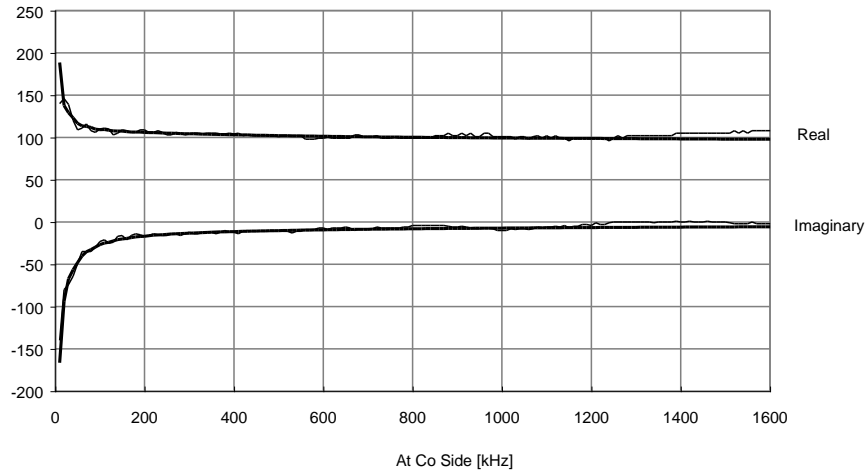

#### 11.1.14 MID-CSA LOOP #4



##### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

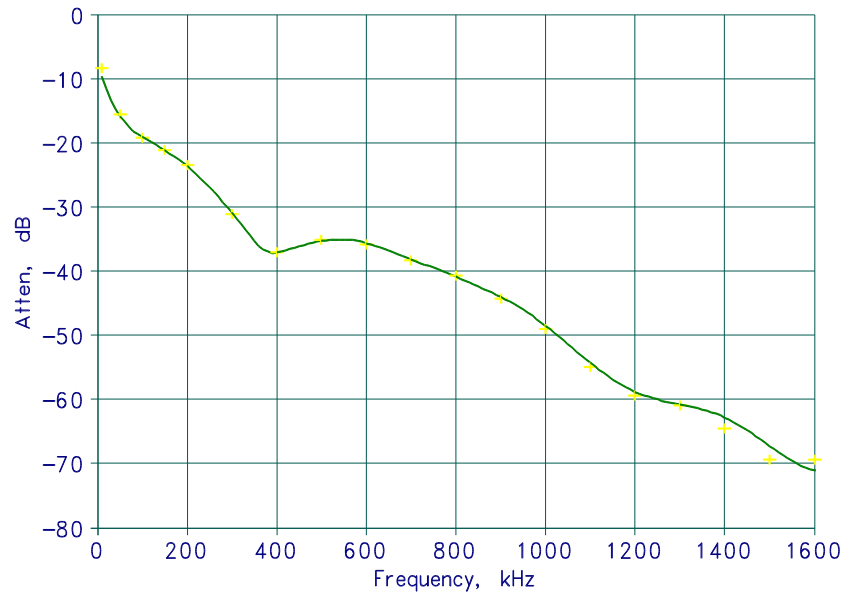

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

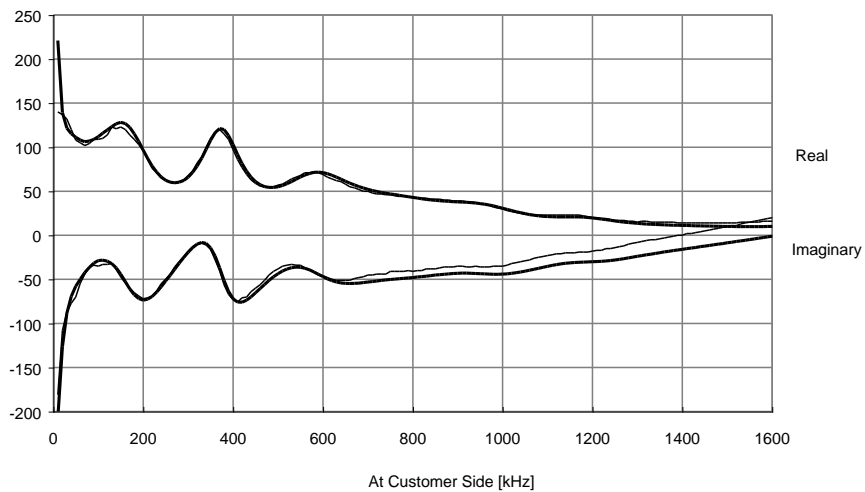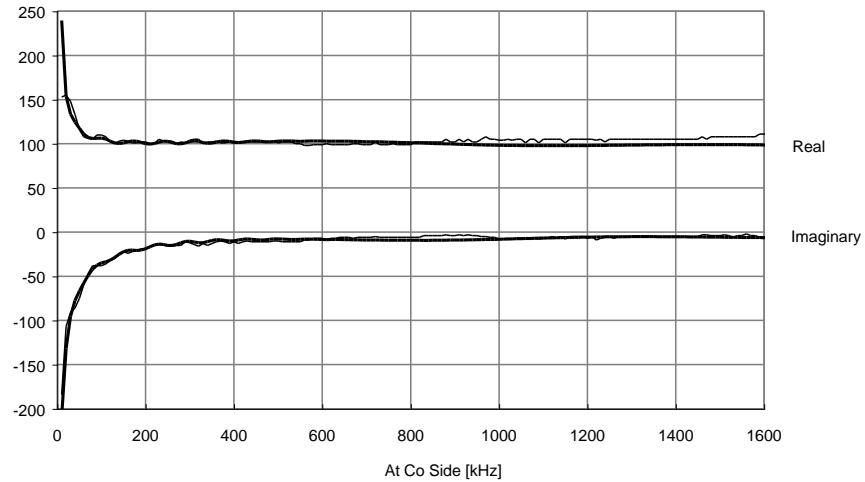

### 11.1.15 MID-CSA LOOP #5



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

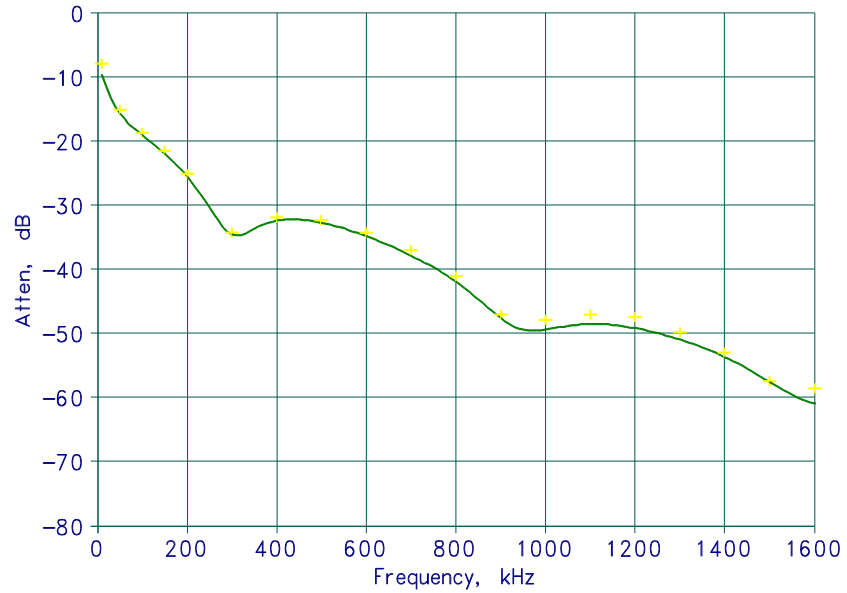

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

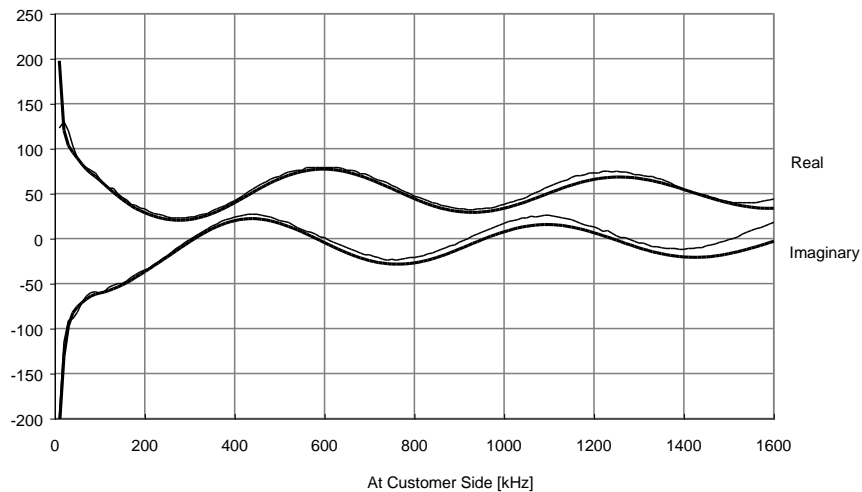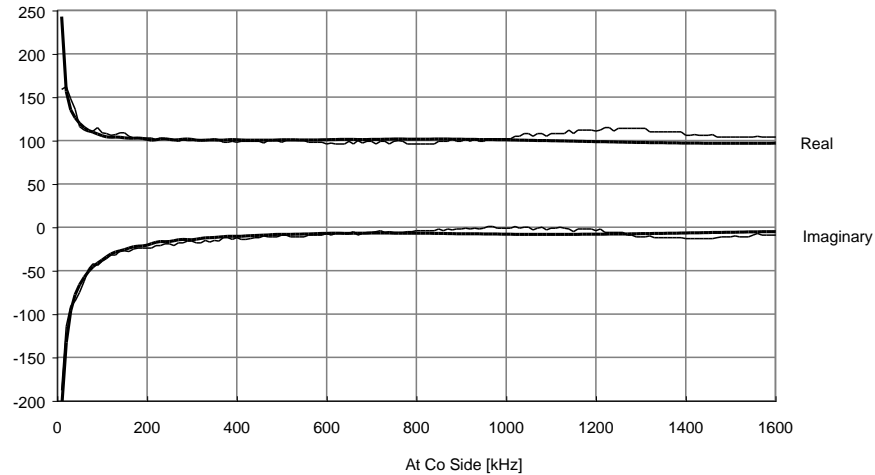

### 11.1.16 MID-CSA LOOP #6



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

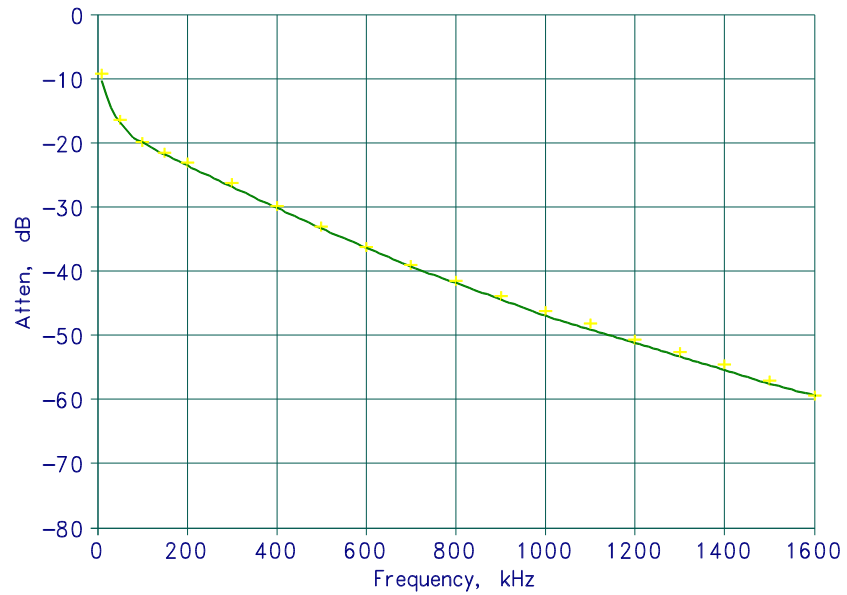

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

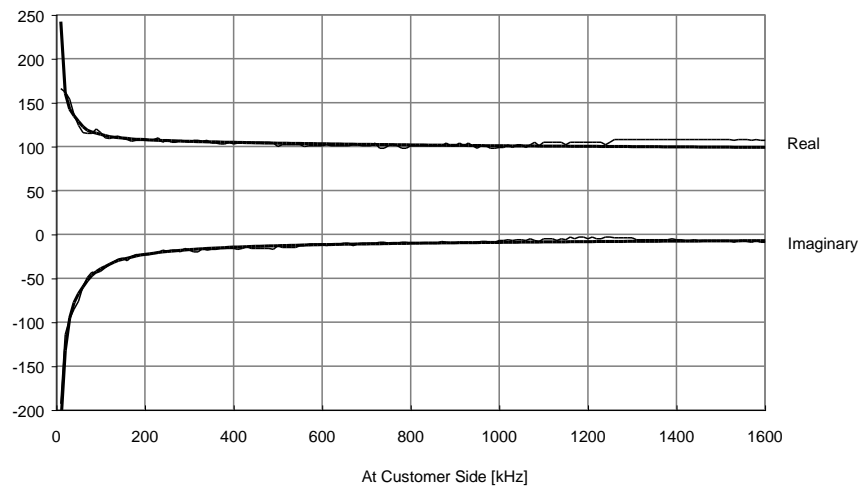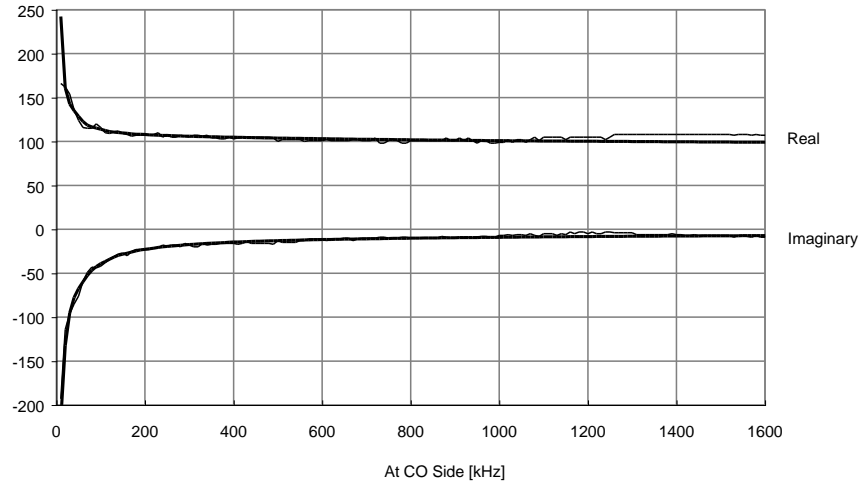


### 11.1.17 ANSI LOOP #2

#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400


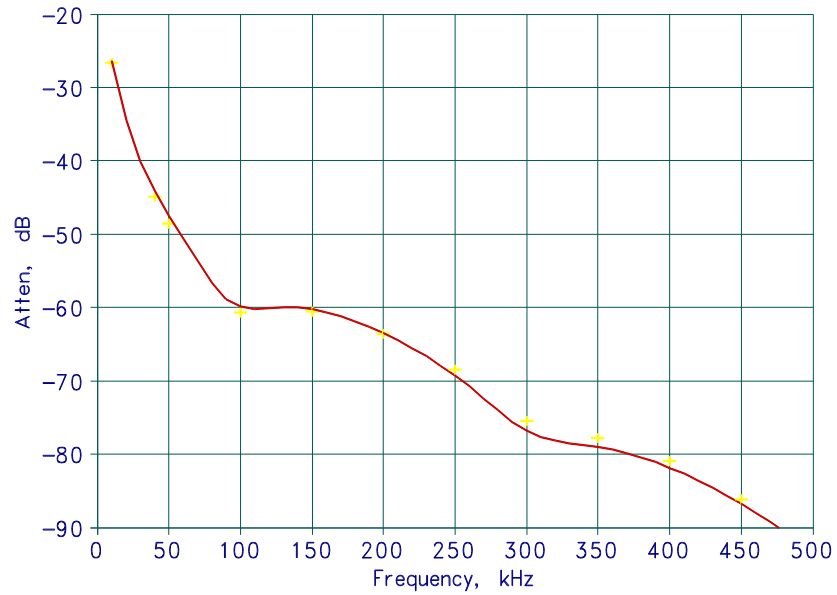







## Impedance

Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

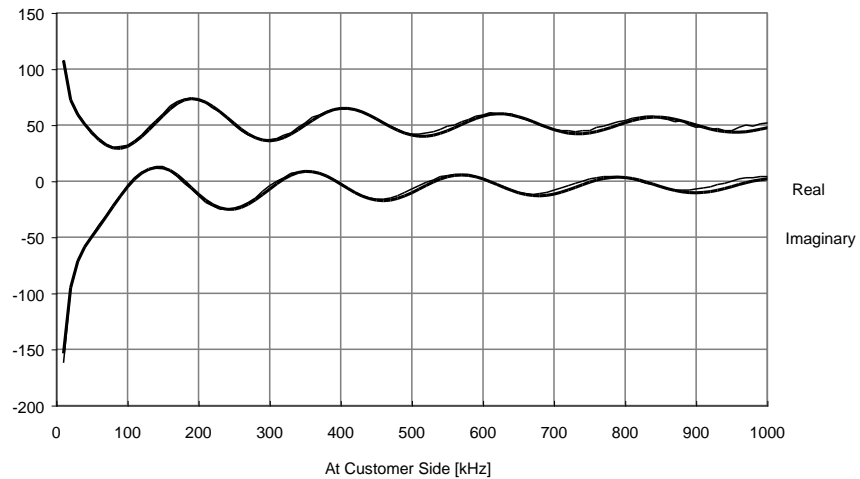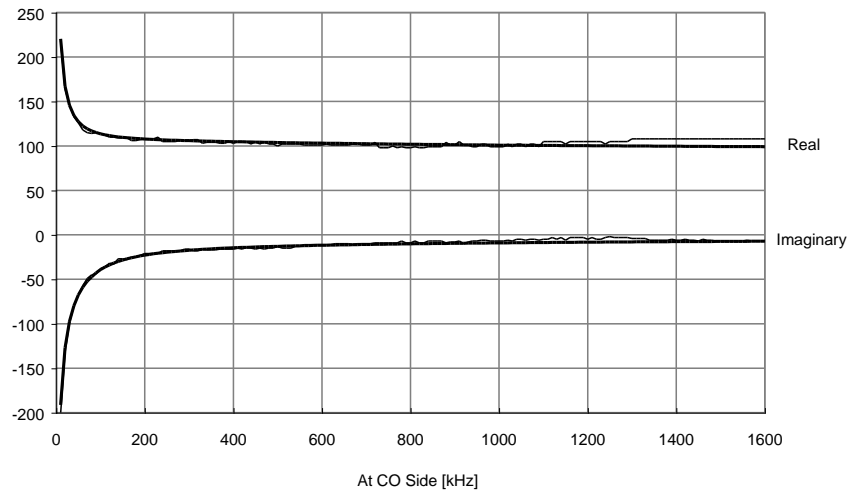



### 11.1.18 ANSI LOOP #3

#### Attenuation

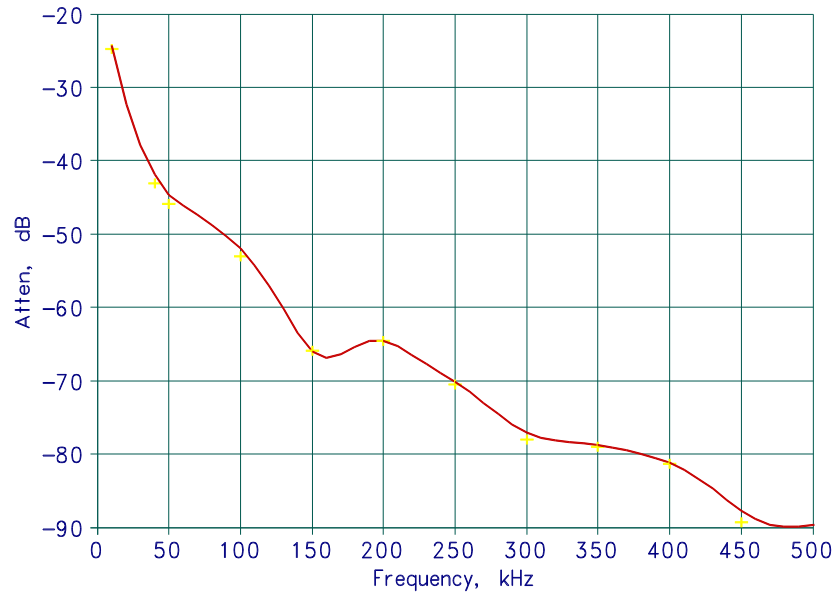


## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

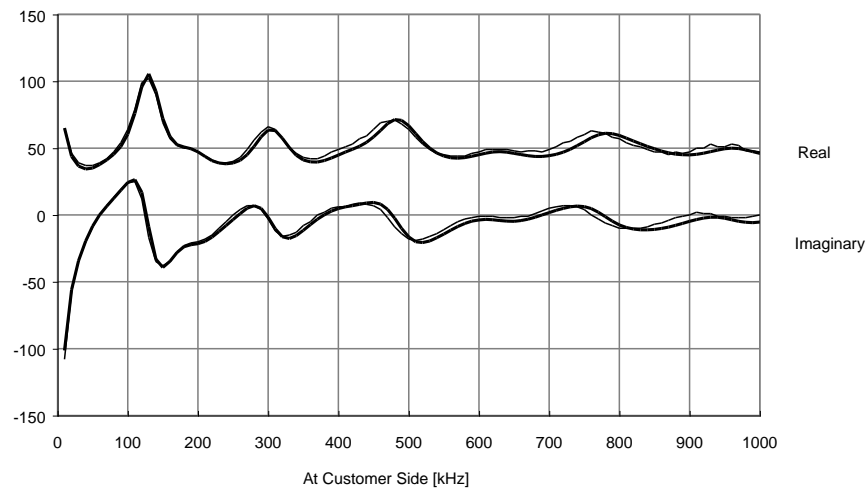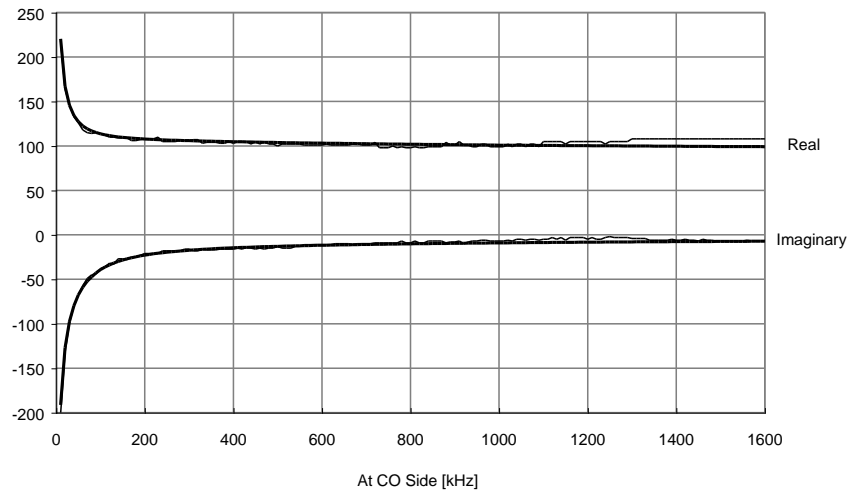

### 11.1.19 ANSI LOOP #4



#### Attenuation

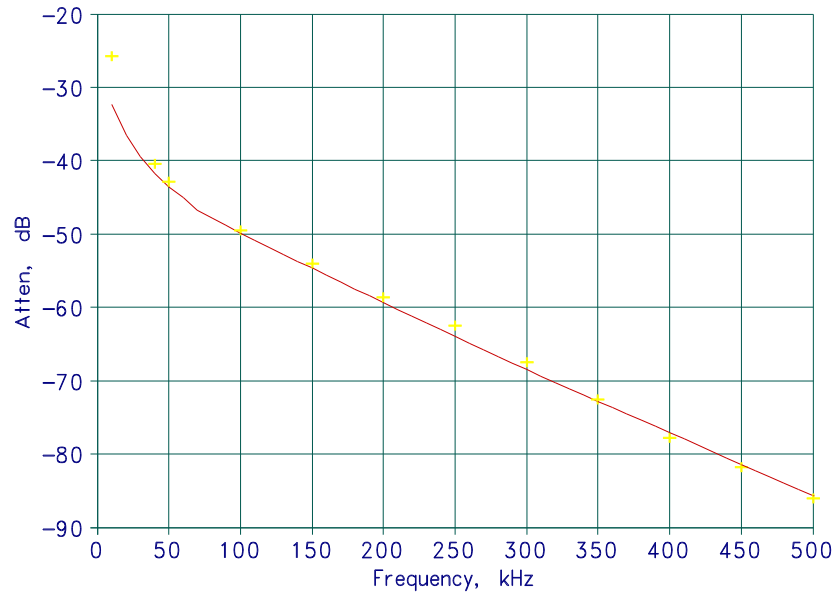



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

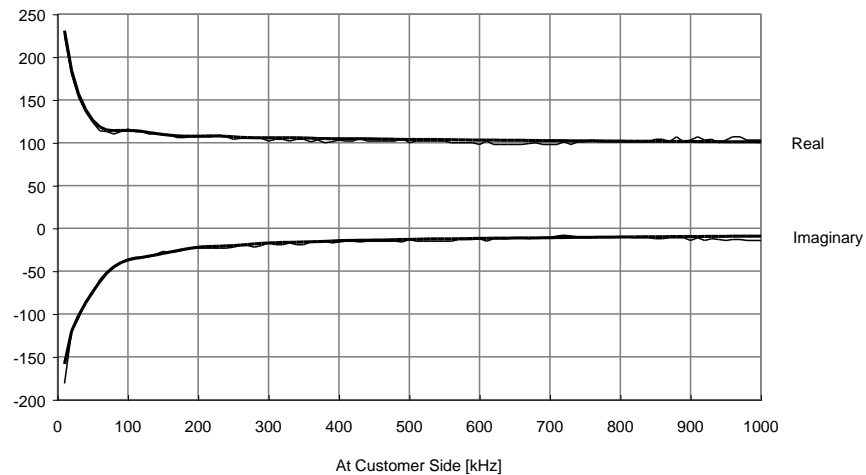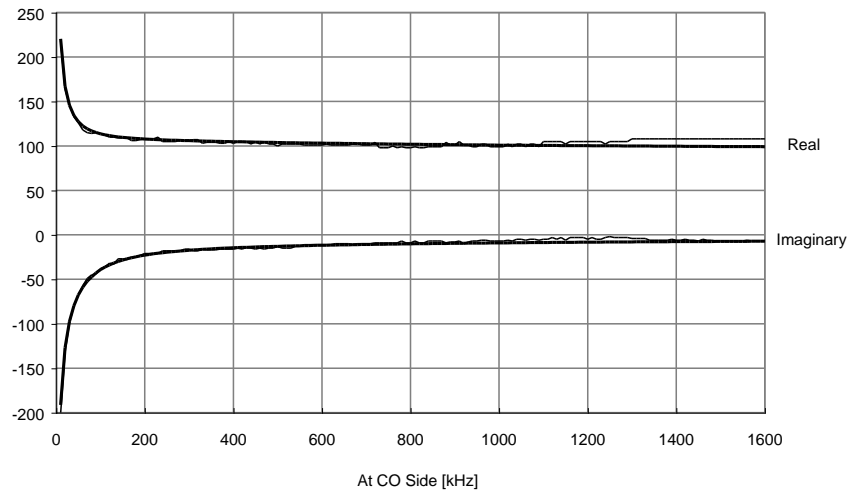

### 11.1.20 ANSI LOOP #5



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

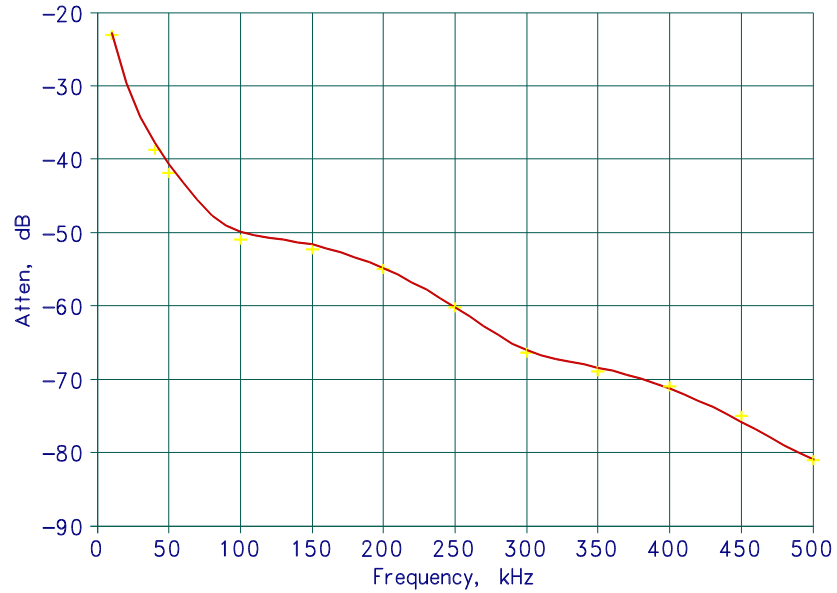

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

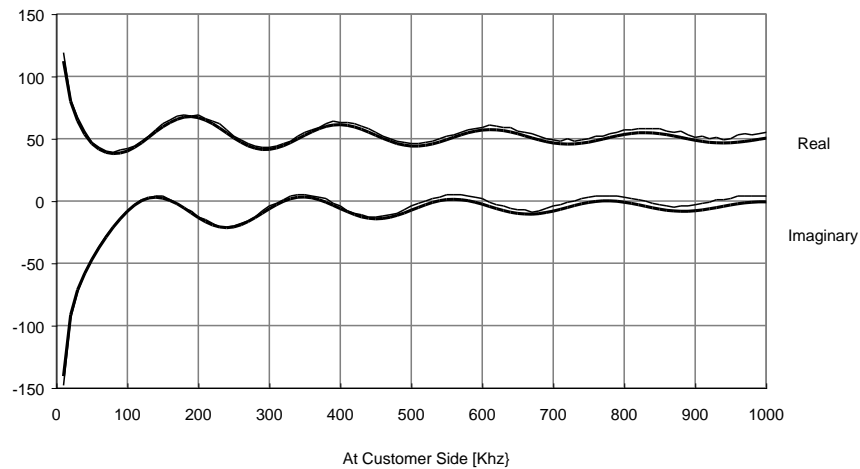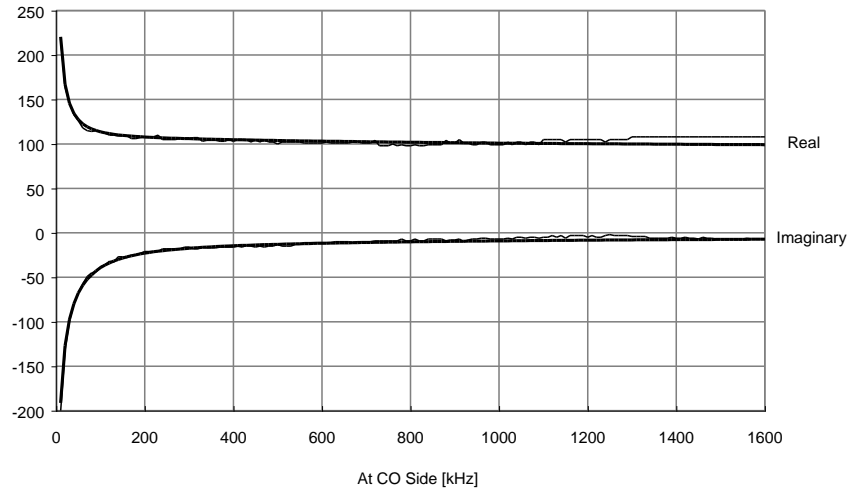

### 11.1.21 ANSI LOOP #6

#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400


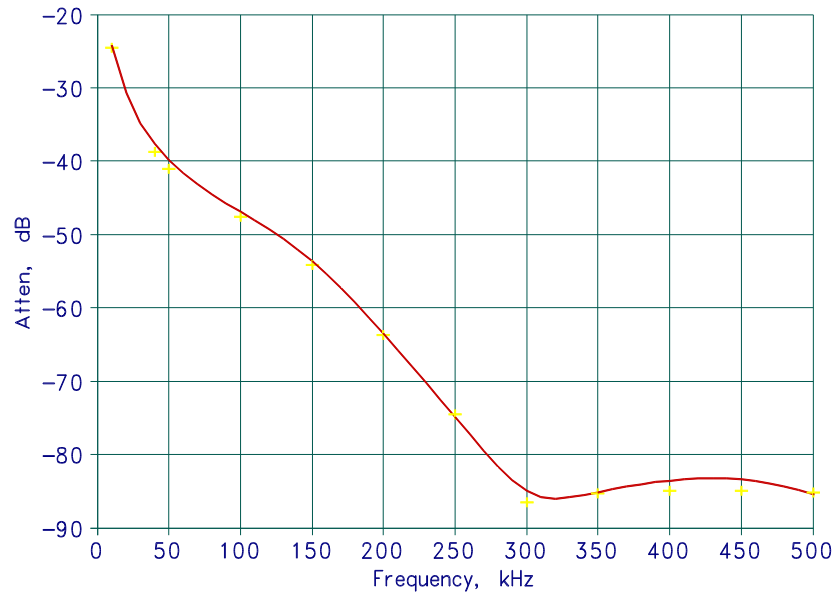






## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

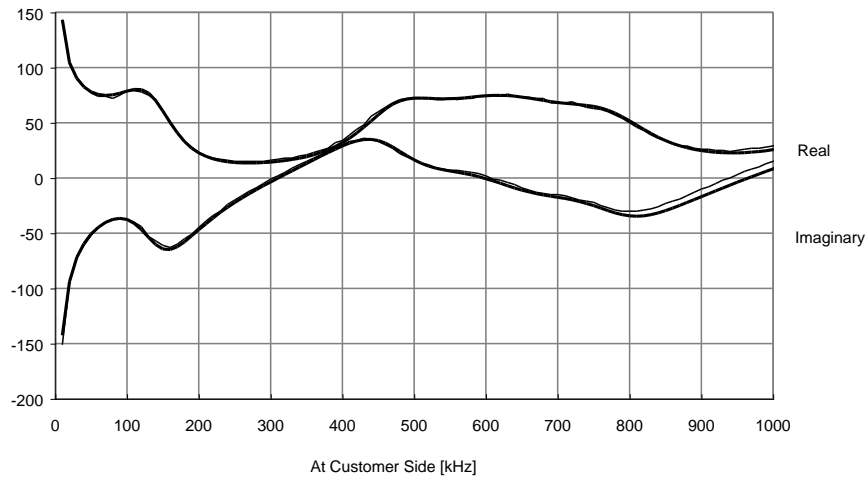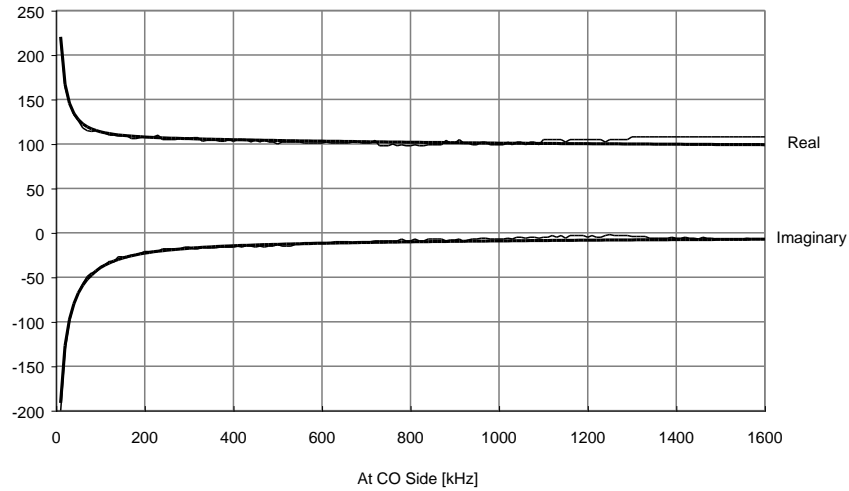


## 11.1.22 ANSI LOOP #7

### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

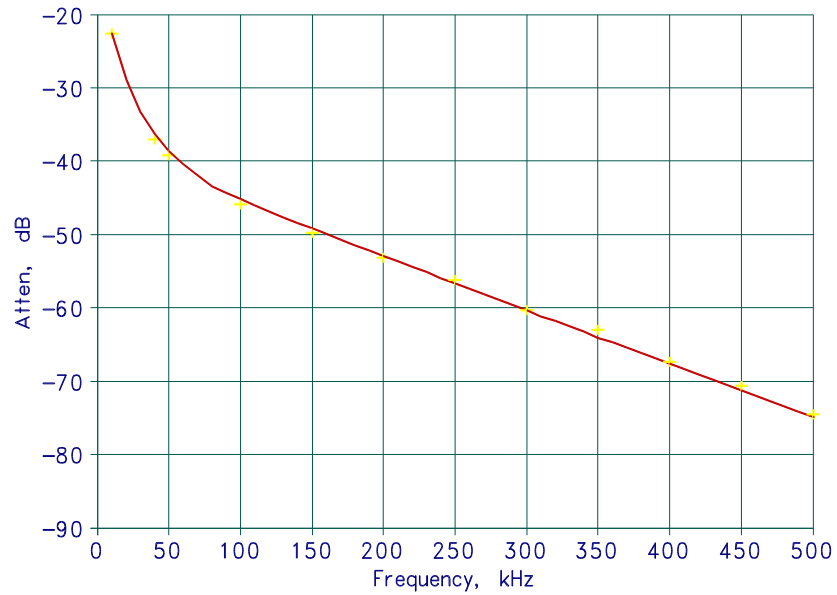



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

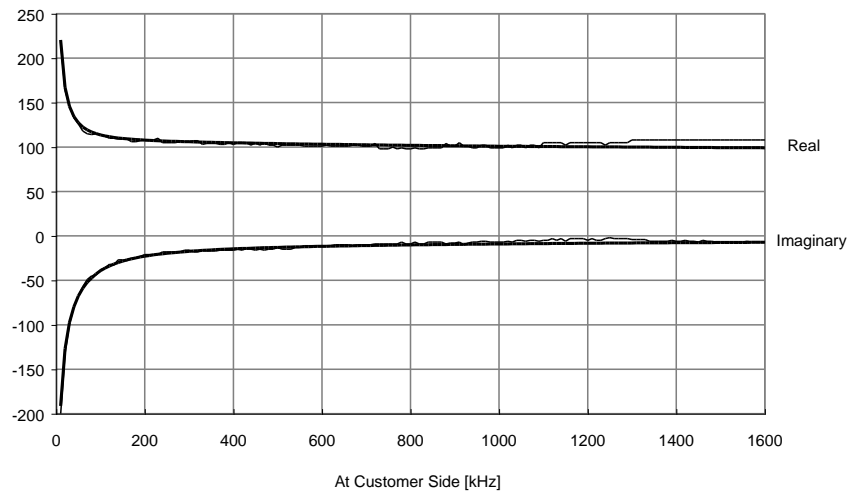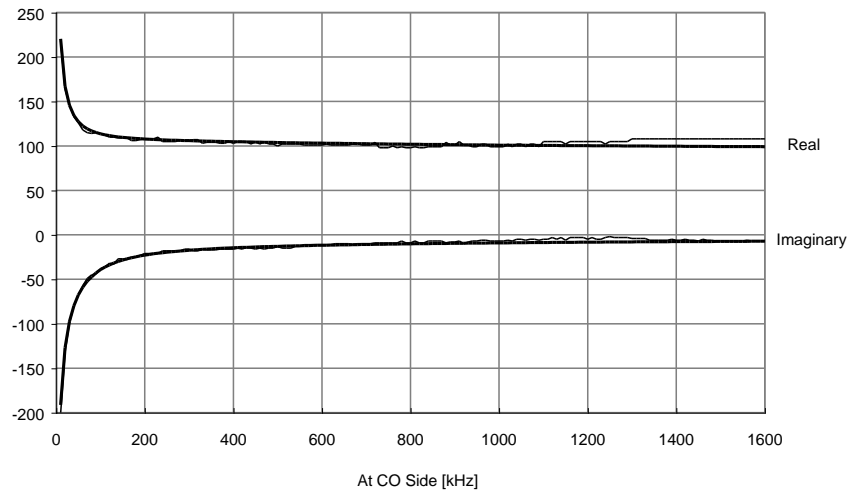

### 11.1.23 ANSI LOOP #8



#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

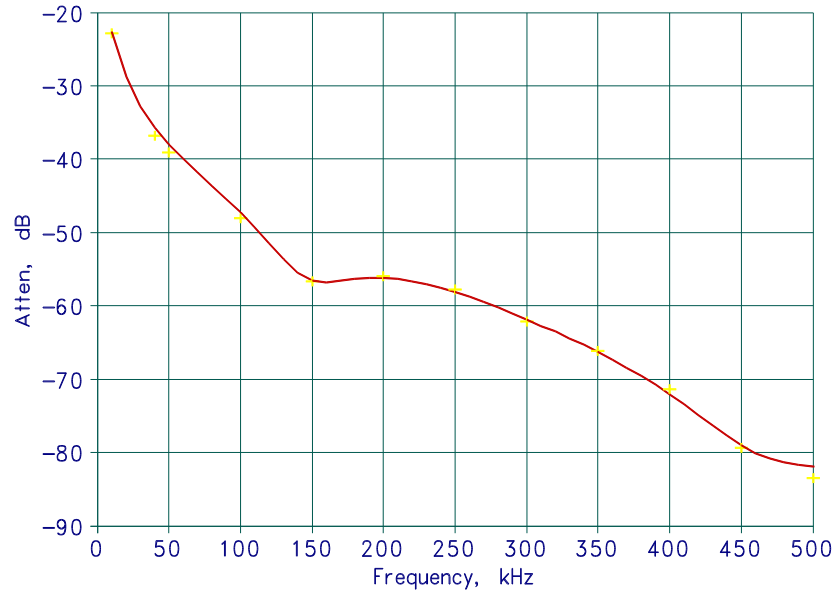


## Impedance

Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

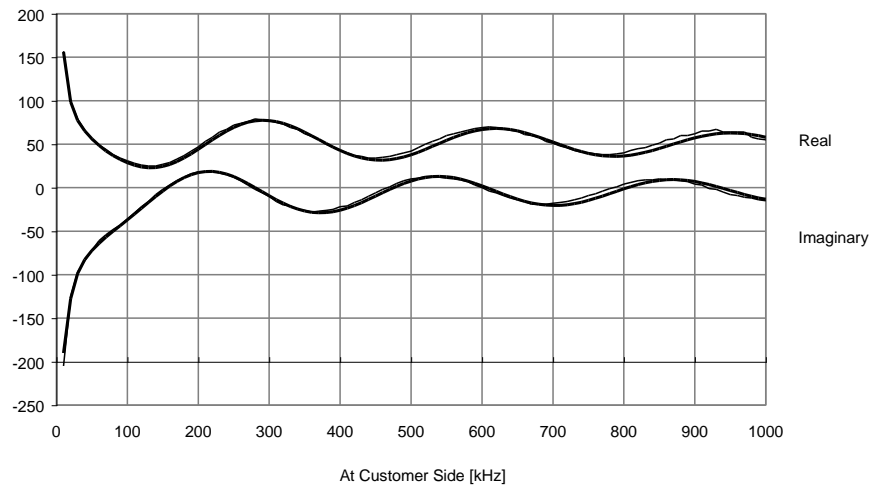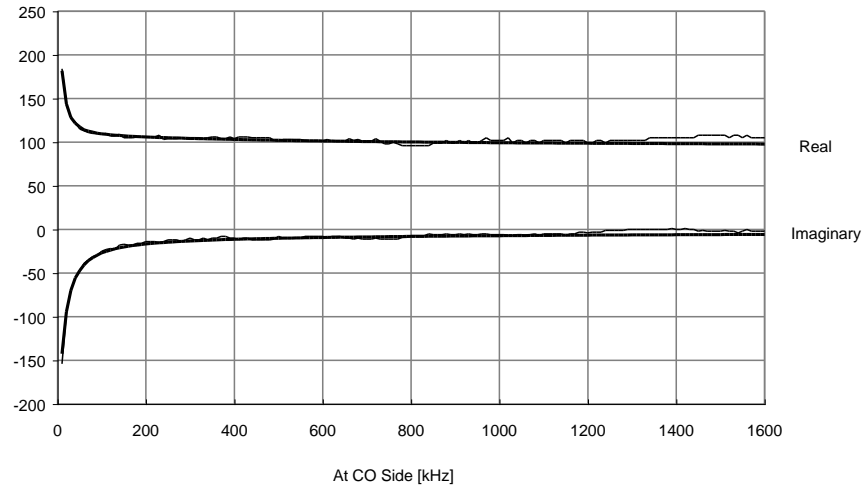



### 11.1.24 ANSI LOOP #9

#### Attenuation

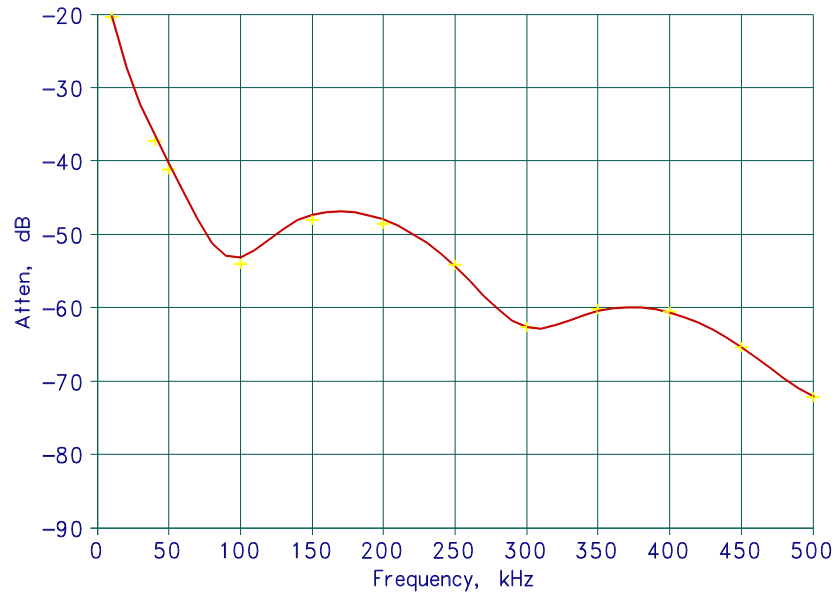

## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

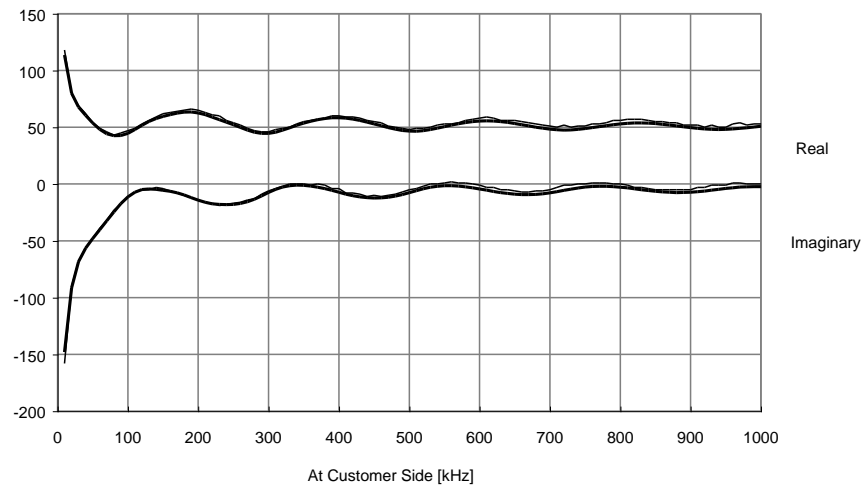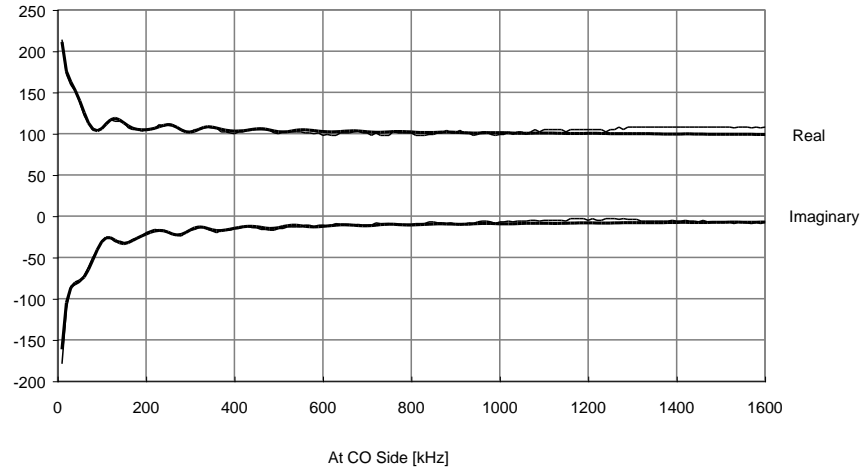


### 11.1.25 ANSI LOOP #11

#### Attenuation

Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400


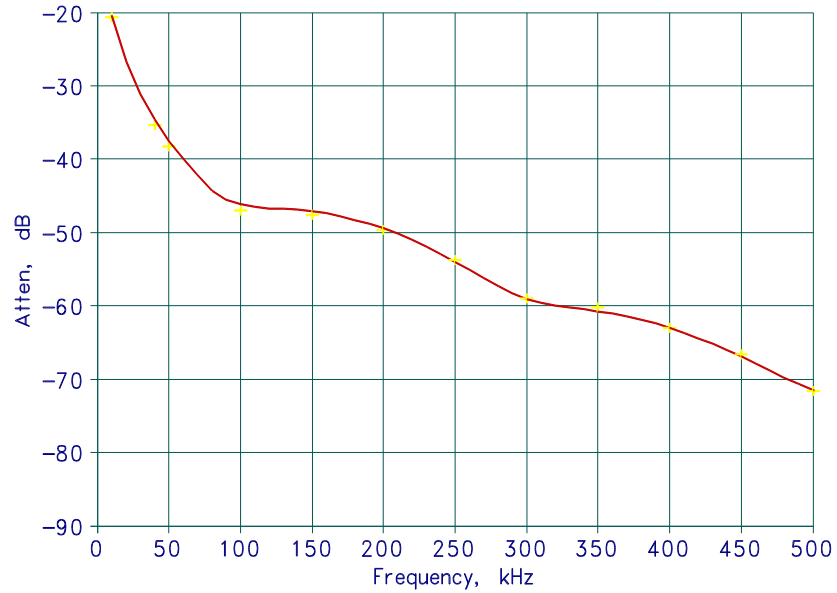






## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

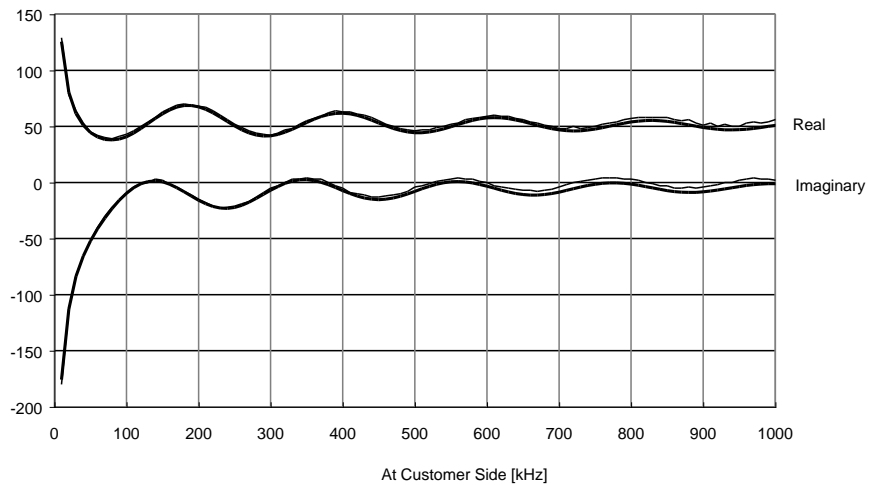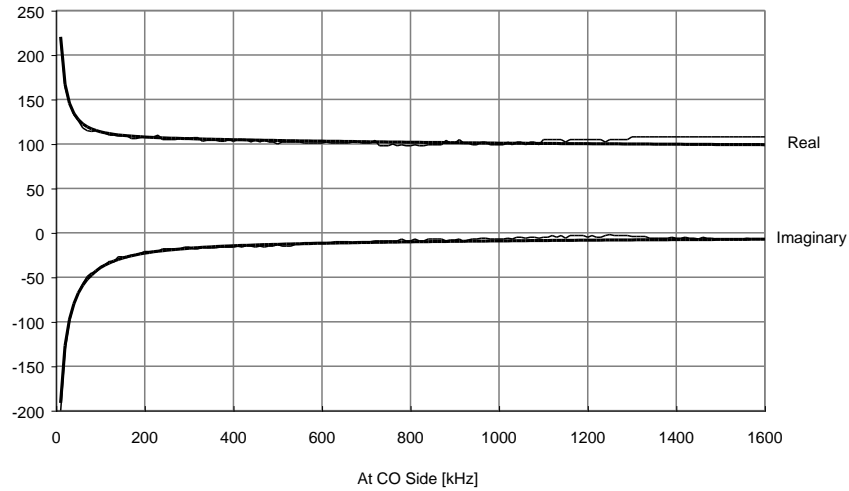


### 11.1.26 ANSI LOOP #12

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

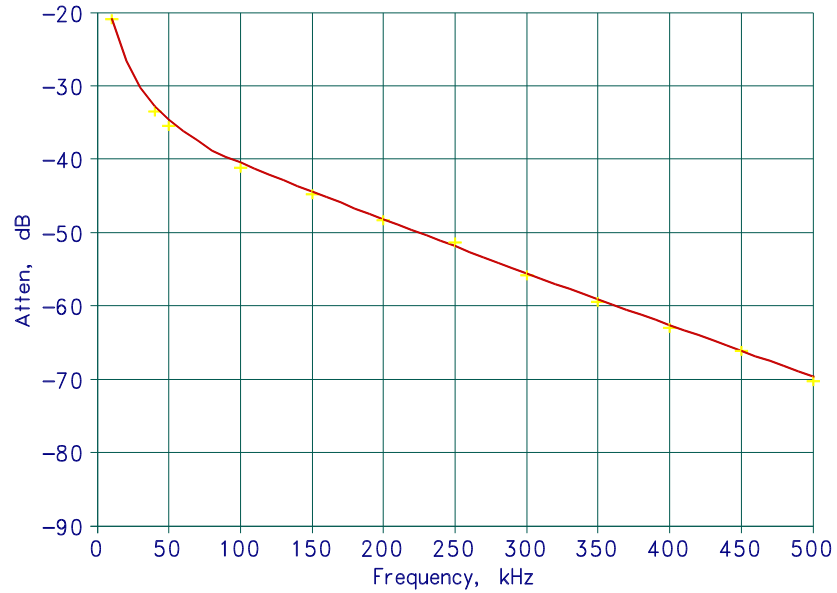



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

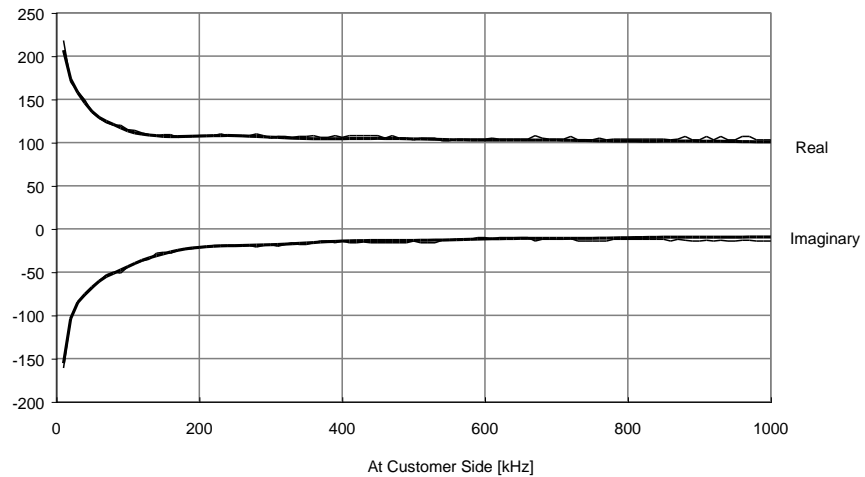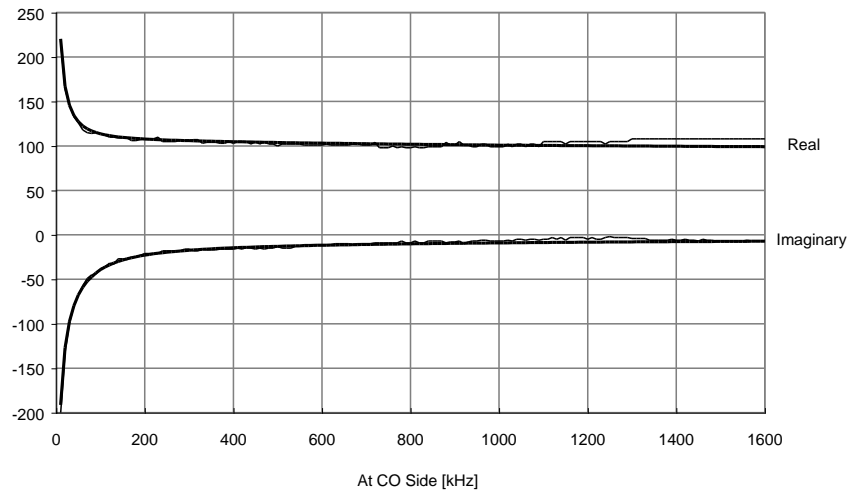

### 11.1.27 ANSI LOOP #13

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

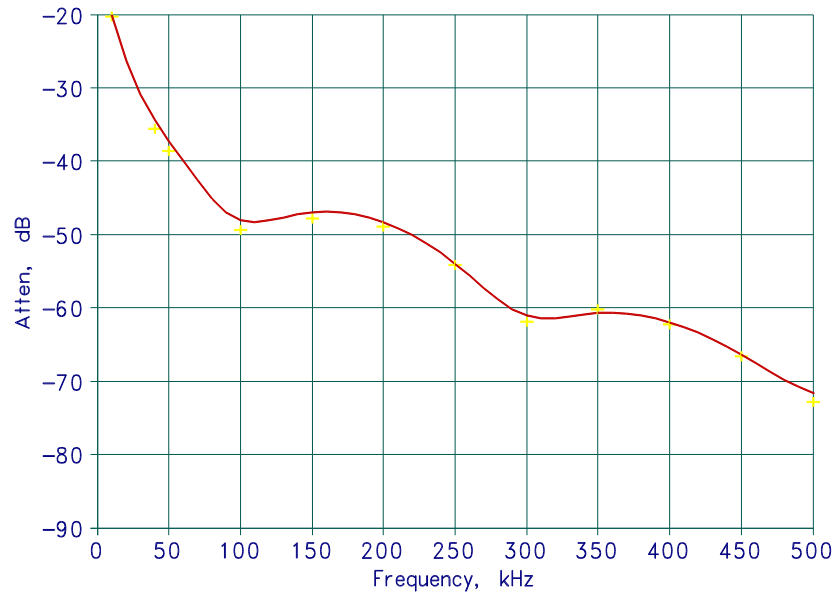



## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

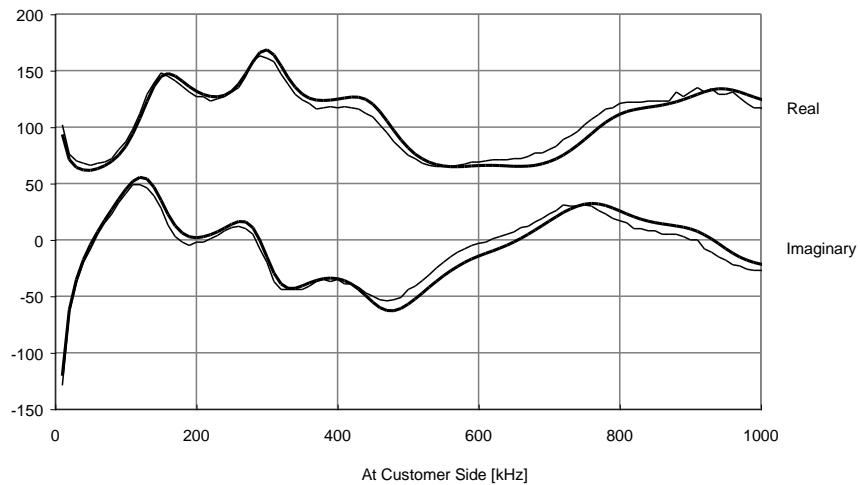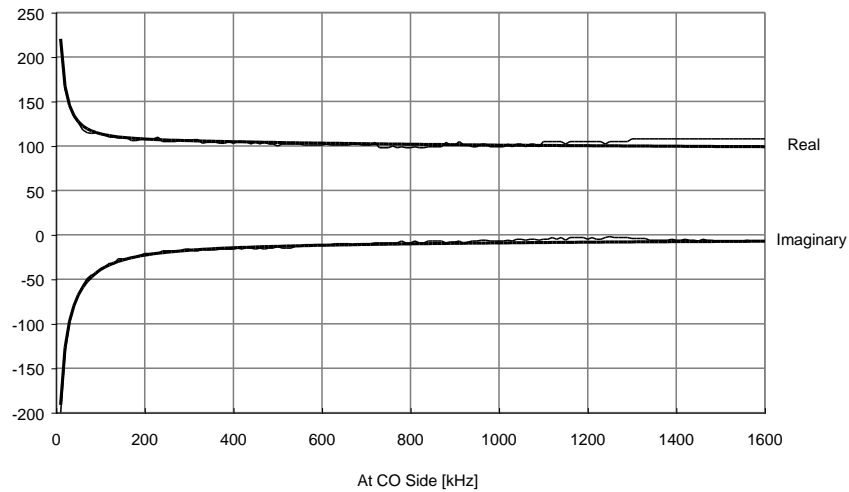

### 11.1.28 ANSI LOOP #15

#### Attenuation



Curve = Calculated Attenuation of Ideal Cable  
+ = Attenuation Measured on DLS 400

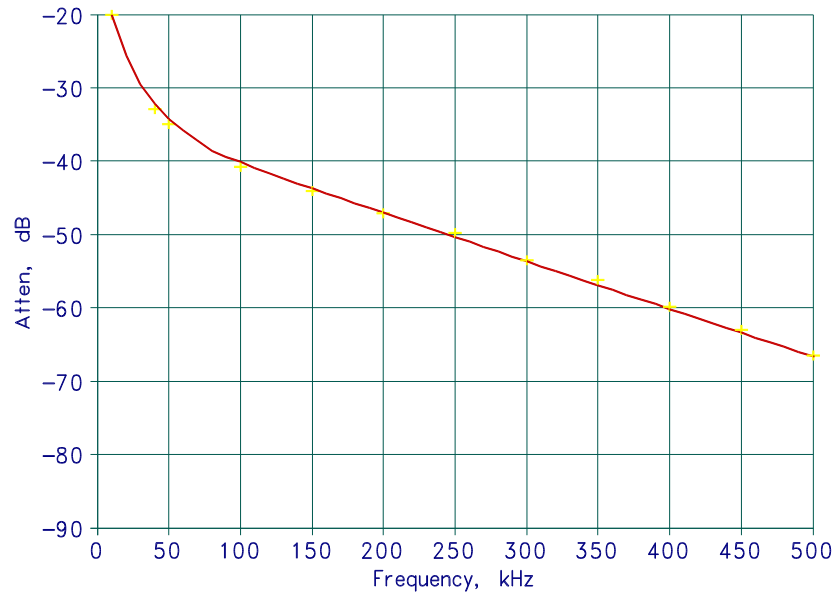




## Impedance


Real and imaginary parts of impedance are shown in Ohms. There are 2 sets of curves on each Impedance graph. The bold line shows the calculated values for ideal cables: the other shows values measured on a DLS 400.

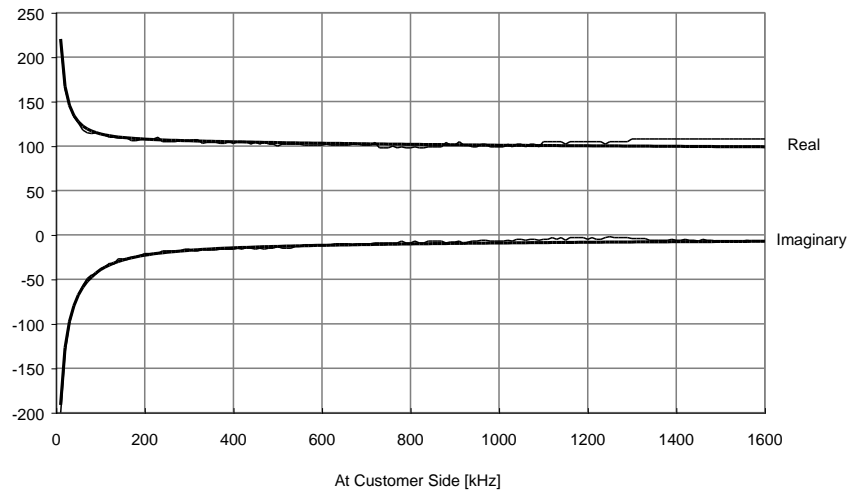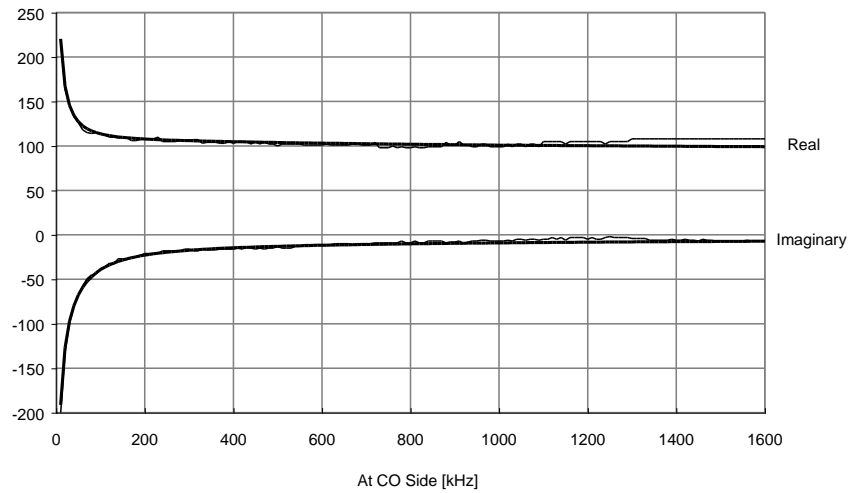





## 12. CHARACTERISTICS OF IMPAIRMENTS

### 12.1 Graphs of the noise shapes produced in Generators A & B:

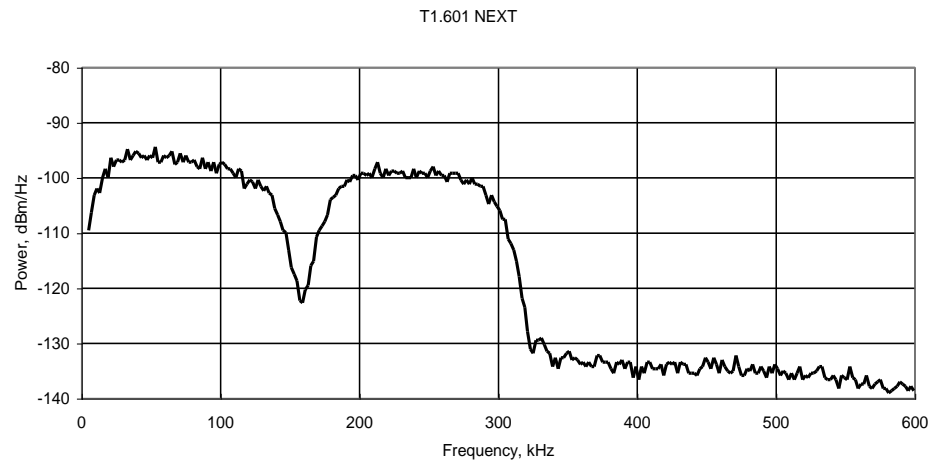


**Figure 13 - T1.601 NEXT**




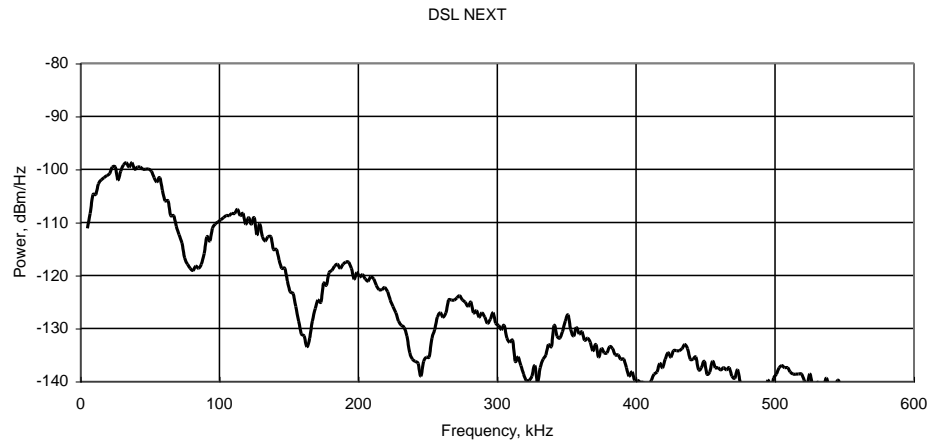

**Figure 14 - DSL NEXT**

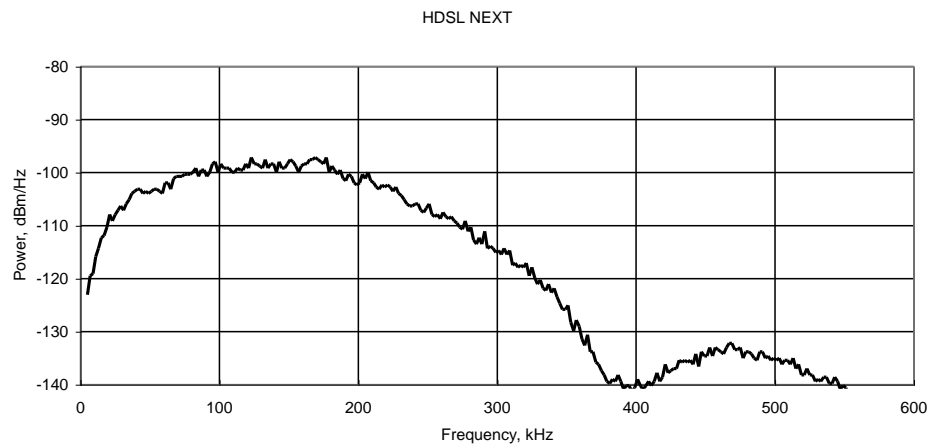


**Figure 15 - HDSL NEXT**




## Characteristics of Impairments



---

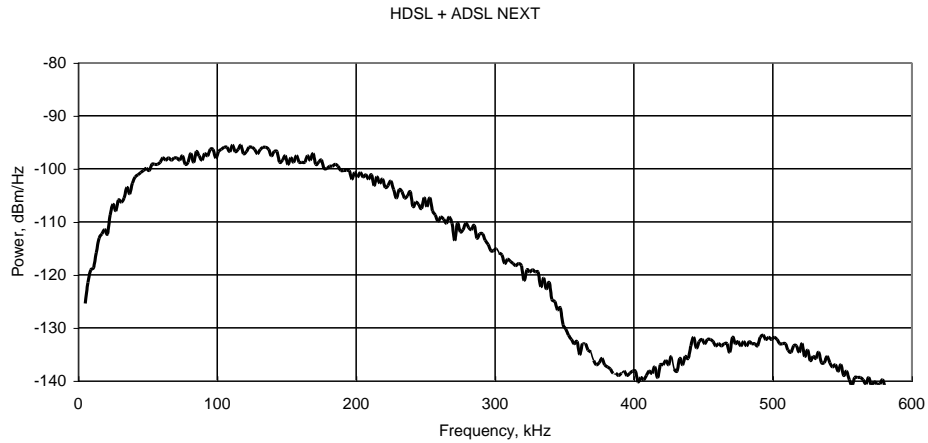


**Figure 16 - HDSL + ADSL NEXT**

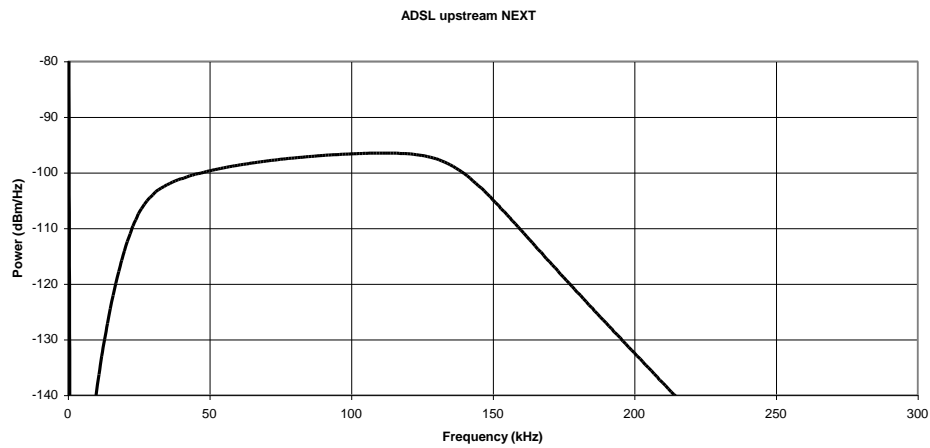


**Figure 17 – T1.413 II EC ADSL upstream NEXT**

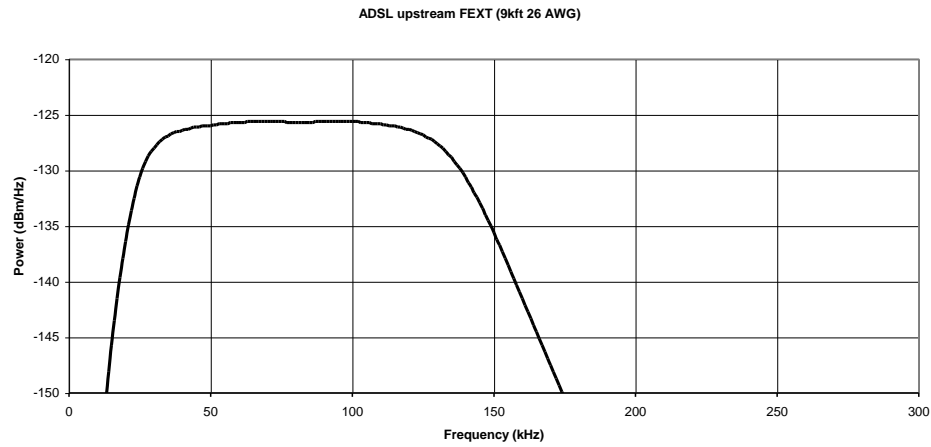

**Figure 18 – T1.413 II EC ADSL upstream FEXT (9 kft 26 AWG)**

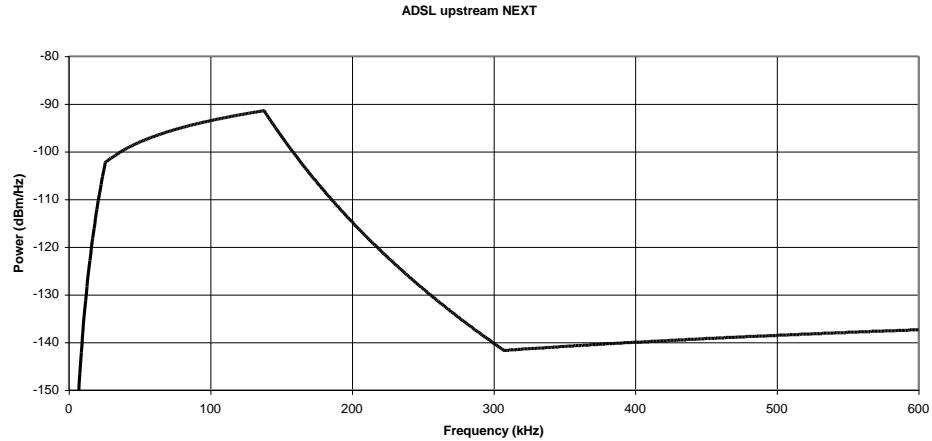


**Figure 19 – T1.413 II FDM ADSL upstream NEXT  
ITU-T NA ADSL Upstream NEXT**





## Characteristics of Impairments

**Figure 20 - ITU-T NA FDM ADSL Downstream FEXT**


FDM ADSL downstream FEXT  
(13.5 kft 26AWG)

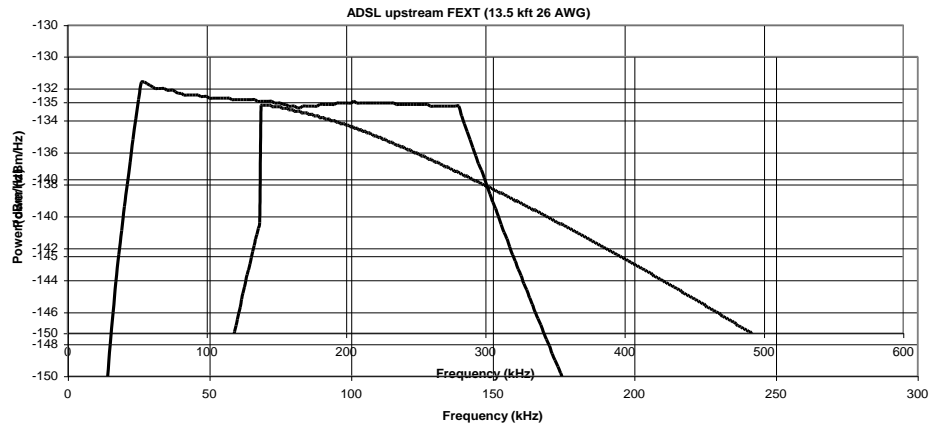


**Figure 21 - ITU-T NA ADSL Upstream FEXT**

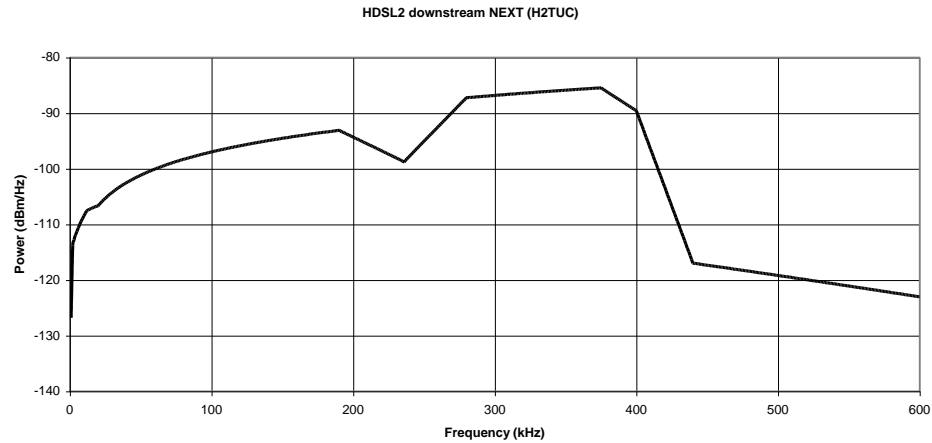


**Figure 22 - HDSL2 downstream NEXT (H2TUC)**

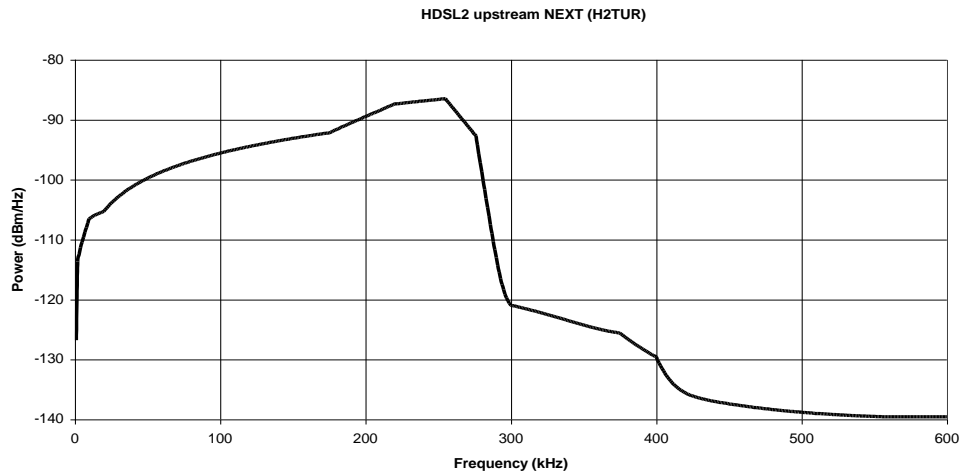


**Figure 23 - HDSL2 upstream NEXT (H2TUR)**





## 12.2 Graphs of the noise shapes produced in Generator C:

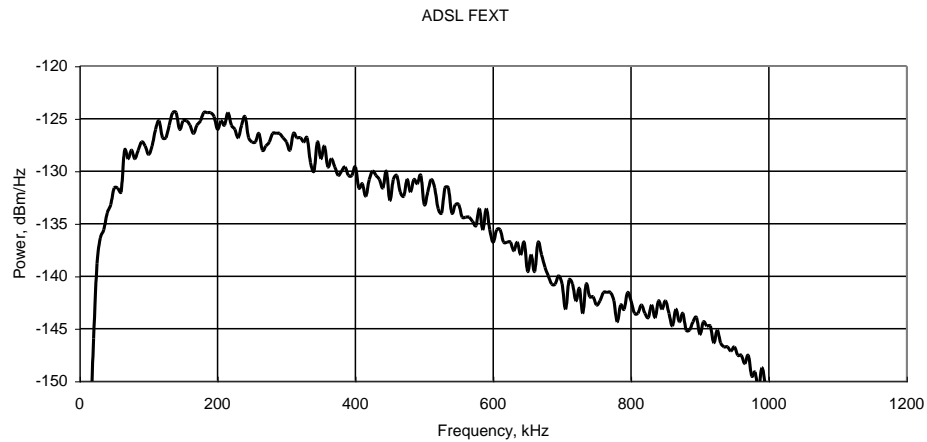


**Figure 24 - ADSL FEXT**

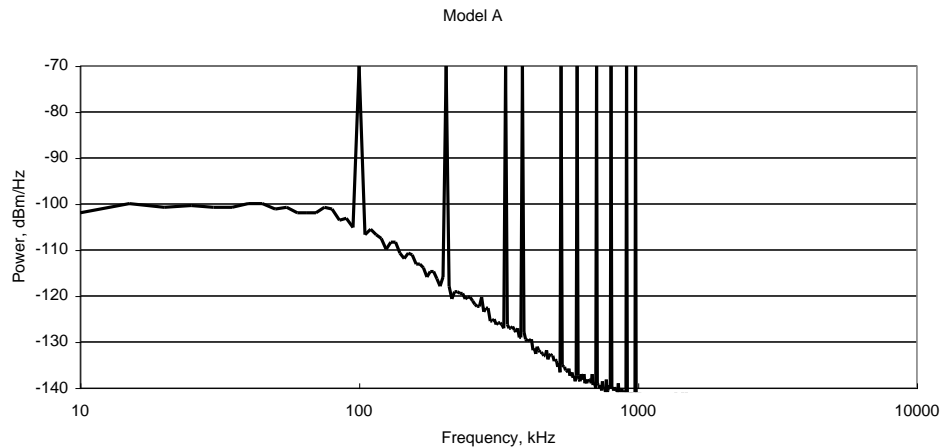


**Figure 25 - Model A**

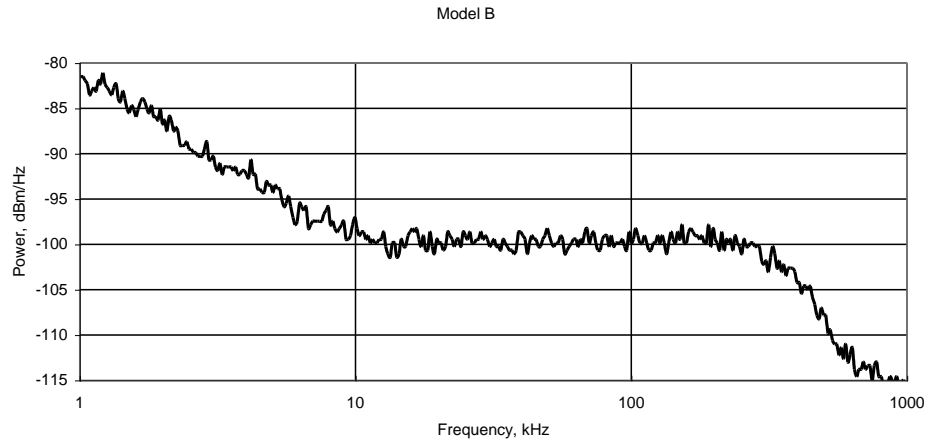

**Figure 26 - Model B**

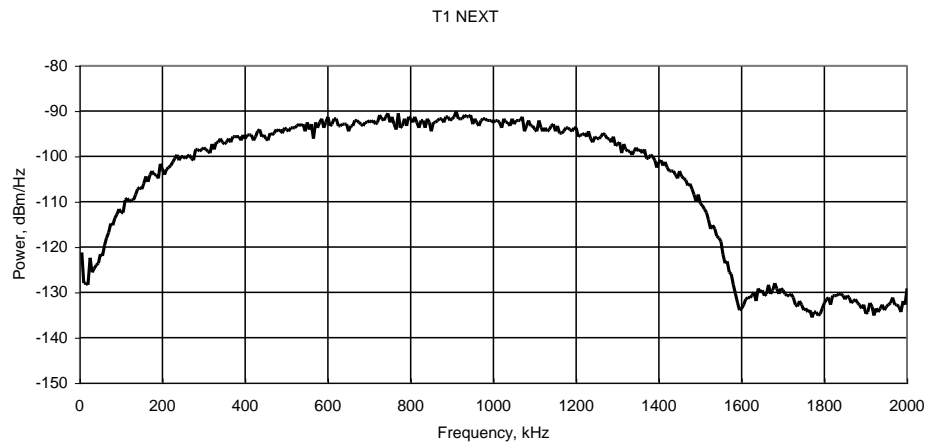


**Figure 27 - T1 NEXT**




## Characteristics of Impairments

---


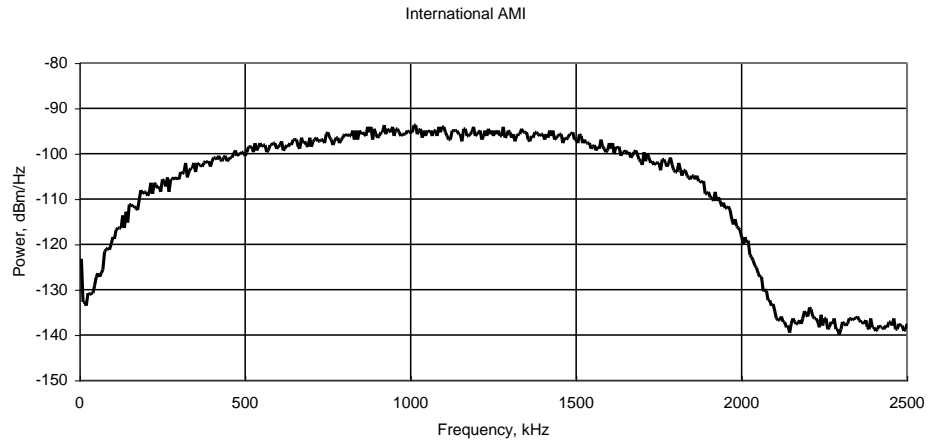


**Figure 28 - International AMI**

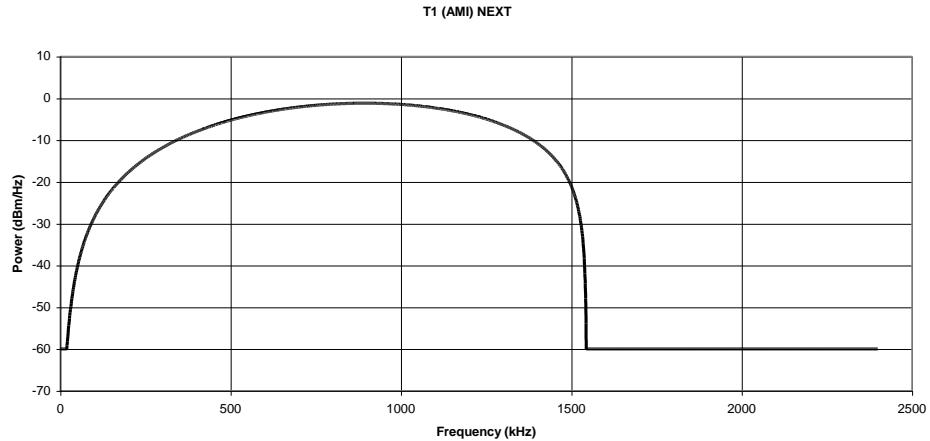


**Figure 29 – T1. 413 II T1 (AMI) NEXT  
ITU-T NA T1 (AMI) NEXT  
HDSL2 T1 (AMI) NEXT**




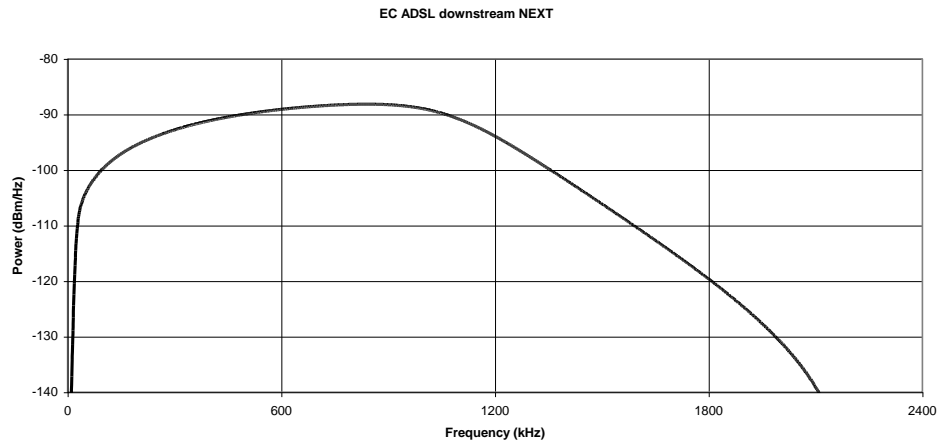

**Figure 30 – T1.413 II EC ADSL downstream NEXT  
HDSL2 EC ADSL downstream NEXT**

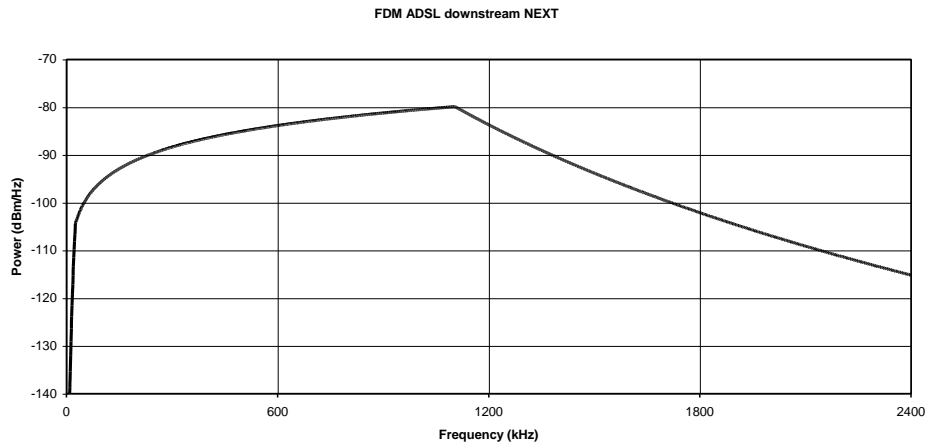


**Figure 31 – T1.413 II FDM ADSL downstream NEXT**




## Characteristics of Impairments

---

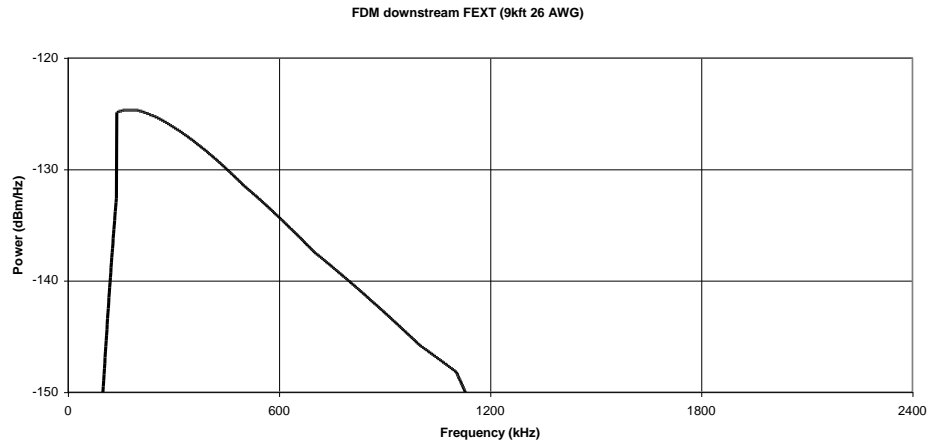

**Figure 32 – T1.413 II FDM downstream FEXT (9kft 26 AWG)**

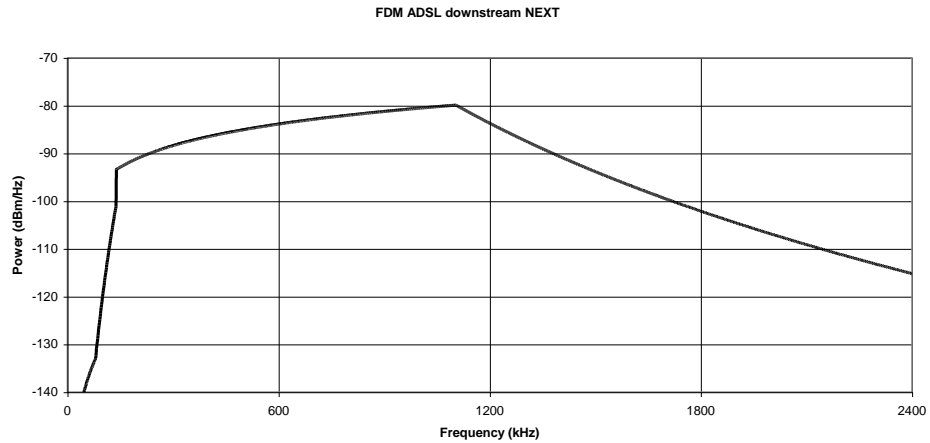

**Figure 33 – ITU-T NA FDM ADSL downstream NEXT  
HDSL2 FDM ADSL downstream NEXT**



---

## 13. REFERENCES

---

- ◆ ANSI T1.601-1991, ISDN Basic Access Interface for use on Metallic Loops for Application on the Network Side of the NT (American National Standards Institute, 11 West 42<sup>nd</sup> Street, New York, NY 10036, USA)
- ◆ ANSI Technical Report on High Bit Rate Digital Subscriber Lines (HDSL) - June 1992 (American National Standards Institute, 11 West 42<sup>nd</sup> Street, New York, NY 10036, USA)
- ◆ ANSI T1.413-1995, Asymmetric Digital Subscriber Line (ADSL) Metallic Interface (American National Standards Institute, 11 West 42<sup>nd</sup> Street, New York, NY 10036, USA)
- ◆ ETSI ETR-80, ISDN Basic Access Digital Transmission System on Metallic Local Lines (European Telecommunication Standards Institute Secretariat 06921 Sophi Antipolis, Cedex, France, Tel:+33 92 94 4200, Fax:+33 93 65 4716)
- ◆ ETSI RTR/TM 03036, High Bit Rate Digital Subscriber Line (HDSL) Transmission on Metallic Local Lines (European Telecommunication Standards Institute Secretariat 06921 Sophi Antipolis, Cedex, France, Tel:+33 92 94 4200, Fax:+33 93 65 4716)
- ◆ FTZ 1TR220, PCM Data Transmission at 64 kbps (FTZ, DBP Telekom, Postfach 100 003, D-64276, Darmstadt, Germany).
- ◆ IEEE 488.1-1987, IEEE Standard Digital Interface for Programmable Instrumentation (The Institute of Electrical and Electronics Engineers, Inc. 345 East 47<sup>th</sup> Street, New York, NY 10017-2394, USA)
- ◆ IEEE 488.2-1992, IEEE Standard Codes, Formats, Protocols, and Common Commands (The Institute of Electrical and Electronics Engineers, Inc. 345 East 47<sup>th</sup> Street, New York, NY 10017-2394, USA)
- ◆ SCPI Standard Commands for Programmable Instruments, available from some interface controller manufacturers (SCPI Consortium, 8380 Hercules Drive, Suite P.S., La Mesa, CA 91942, Phone: (619) 697-8790, Fax: (619) 697-5955)



## *Warranty*

---

### **14. WARRANTY**

---

Consultronics warrants all equipment bearing its nameplate to be free from defects in workmanship and materials, during normal use and service, for a period of twelve (12) months from the date of shipment. In the event that a defect in any such equipment arises within the warranty period it shall be the responsibility of the customer to return the equipment by prepaid transportation to a Consultronics service centre prior to the expiration of the warranty period for the purpose of allowing Consultronics to inspect and repair the equipment (see section 12 for shipping details). If inspection by Consultronics discloses a defect in workmanship or material it shall, at its option, repair or replace the equipment without cost to the customer, and return it to the customer by the least expensive mode of transportation, the cost of which shall be prepaid by Consultronics. In no event shall this warranty apply to equipment which has been modified without the written authorization of Consultronics, or which has been subjected to abuse, neglect, accident or improper application. If inspection by Consultronics discloses that the repairs required to be made on the equipment are not covered by this warranty, the regular repair charges shall apply to any repairs made to the equipment.

If warranty service becomes necessary, please phone or fax Consultronics to obtain a return authorization number and shipping instructions:

Consultronics Ltd. (Head Office)  
160 Drumlin Circle  
Concord, Ontario, Canada  
L4K 3E5  
Telephone: (905) 738-3741  
In North America Only: 1-800-267-7235  
Fax: (905) 738-3712

Consultronics Ltd. (Ottawa Office)  
169 Colonnade Road,  
Nepean, Ontario, Canada  
K2E 7J4  
Telephone: (613) 225-6087  
In North America Only: 1-800-465-1796  
Fax: (613) 225-6315  
Email: [Ottservice@cslo.consultronics.on.ca](mailto:Ottservice@cslo.consultronics.on.ca)



Consultronics (U.S.A. Office)  
1304 Rockbridge Rd. Suite 4  
Stone Mountain GA 30087  
USA  
Telephone: (770) 925-3358  
Fax: (770) 931-4798  
In N.America 1-800-227-3345

Consultronics (Europe Office)  
Unit A  
Omega Enterprise Park  
Electron Way  
Chandlers Ford  
Hampshire, England  
SO5 3SE  
Telephone: 0703 270222  
Fax: 0703 270333

or your local Consultronics representative

This warranty constitutes the only warranty applicable to the equipment sold by Consultronics and no other warranty or condition, statutory or otherwise, express or implied shall be imposed upon Consultronics nor shall any representation made by any person including a representation by a representative or agent of Consultronics be effective to extend the warranty coverage provided herein. In no event (including, but not limited to the negligence of Consultronics, its agents or employees) shall Consultronics be liable for special consequential damages or damages arising from the loss of use of the equipment and on the expiration of the warranty period all liability of Consultronics whatsoever in connection with the equipment shall terminate.



## **15. SHIPPING THE DLS 400**

---

To prepare the DLS 400 for shipment, turn the power off and disconnect all cables, including the power cable, and pack the simulator in the original carton. Do not place any cables or accessories directly against the front panel as this may scratch the surface of the unit. We suggest that you mark all shipments with labels indicating that the contents are fragile.

If sending a unit back to the factory, ensure that the return authorization number given by our customer service department is shown on the outside.

## 16. SPECIFICATIONS

### 16.1 General

The DLS 400 simulates a single twisted-pair cable, and up to 2 optional impairments cards. The user can select the simulated loop and the length of the variable loops using the IEEE 488 or the RS-232 interface. The command language in both cases is based on the Standard Commands for Programmable Interfaces (SCPI) standard.

### 16.2 Simulated loops

BYPASS	CSA #0	MID-CSA #0	ANSI #2
	CSA #1	MID-CSA #1	ANSI #3
VARIABLE 24 AWG	CSA #2	MID-CSA #2	ANSI #4
VAR 24 AWG+TAP	CSA #4	MID-CSA #3	ANSI #5
VARIABLE 26 AWG	CSA #5	MID-CSA #4	ANSI #6
VAR 26 AWG+TAP	CSA #6	MID-CSA #5	ANSI #7
	CSA #7	MID-CSA #6	ANSI #8
	CSA #8		ANSI #9
	EXT-CSA #9		ANSI #11
	EXT-CSA #10		ANSI #12
			ANSI #13
			ANSI #15

#### 16.2.1 Description

Technology:

Cable simulation using networks of discrete R, L & C components.

Cable simulated:

Balanced twisted copper pair.



## ***Specifications***

---

Cable impedance: Complex, varies over frequency with length and gauge.

# of conductors:

2.

Types of cables:

22, 24 & 26 AWG PIC cables as specified in Bell Pub 62310.

D.C. Rating:

up to 300 VDC, between tip and ring, 100 mA.

Bandwidth:

D.C. to 1.5 MHz.

Accuracy:

For the specified bandwidth;  $\nabla 0.5$  dB for all attenuations up to 20 dB, for attenuation from 20 to 70 dB the tolerance is within 5% of design to a maximum of 1.5 dB.

## **16.3 Impairments Card**

The card can be used to test according to the following National and International standards:

ANSI T1.601 ISDN Basic Access Interface

ANSI Technical Report on HDSL

ANSI T1.413, Issue I

ANSI T1.413, Issue II

ANSI Proposed Working Draft for HDSL2 Standard (T1E1.4/98 – 268)

ITU Standard for G. Lite

ETSI TS 102 080 ISDN Standard

ETSI ETR 152 HDSL Standard

ETSI ETR 328 ADSL Standard

It operates in a specially designated slot in the chassis of the DLS 400 Wireline Simulator and consists of seven discrete generation sections. The features associated with one generator operate independently of the others. However, the options within a section can only be activated one at a time. The seven sections are:





White noise generator  
2 x low frequency (500 kHz) NEXT shaped PSD generator  
1 x high frequency (2.0 MHz) NEXT shaped PSD generator  
Multi Tone generator  
Powerline related metallic noise  
Longitudinal noise

The output circuit is balanced with a minimum Thevenin impedance of 4000 ohms over the range 50 Hz to 2.0 MHz.

### **16.3.1 White Noise Generator**

Level: -90.0 to -140.0 dBm/Hz, variable in 0.1 dB steps  
Form: Gaussian amplitude distribution to 5 sigma  
Bandwidth: 50 Hz to 2.0 MHz

### **16.3.2 NEXT Generators A and B**

Level: Levels are varied in 0.1 dB steps over a range from 10 dB below the 1 disturber level to 10 dB above the 49 disturber level. The absolute power associated with each will vary according to the NEXT PSD shape selected. The minimum level of any point on a shape is -130 dBm/Hz.

Power: The total power of each shape is accurate to within +/- 0.5 dBm

Accuracy: Each shape will track the reference shape to within +/- 1.0 dB, down to a level 45 dB below the peak. Each reference may deviate its' null frequencies by +/- 5.0%.



## *Specifications*

---

Shapes: The following shapes are available in Generators A and B:

ANSI T1.601 - 320 kHz bandwidth

ANSI HDSL Technical report - DSL Next

ANSI HDSL Technical report - HDSL Next

ANSI ADSL Technical report - ADSL + HDSL Next

ANSI T1.413, Issue I - ADSL Next

ANSI T1.413, Issue II – ADSL upstream NEXT

ANSI T1.413, Issue II – ADSL upstream FEXT (9kft, 26 AWG)

ANSI Proposed Working Draft for HDSL2 Standard – HDSL2 downstream NEXT (H2TUC)

ANSI Proposed Working Draft for HDSL2 Standard – HDSL2 downstream NEXT (H2TUR)

ITU Standard for G. Lite – FDM ADSL downstream NEXT

ITU Standard for G. Lite – FDM ADSL downstream FEXT (13.5 kft, 26 AWG)

ITU Standard for G. Lite – ADSL upstream FEXT (13.5 kft, 26 AWG)

### **16.3.3 NEXT Generator C**

**Level:** Levels are varied in 0.1 dB steps over a range from 10 dB below the 1 disturber level to 10 dB above the 49 disturber level. The absolute power associated with each will vary according to the NEXT PSD shape selected.  
The minimum level of any point on a shape is -130 dBm/Hz.

**Power:** The total power of each shape is accurate to within +/- 0.5 dBm

**Accuracy:** Each shape will track the reference shape to within +/- 1.0 dB, down to a level 30 dB below the peak. Each reference may deviate its' null frequencies by +/- 5.0%.



Shapes: The following shapes are available in the High Frequency NEXT Generator.

ANSI T1.413, Issue I – ADSL FEXT  
ETSI ETR 328 – Model A  
ETSI ETR 328 – Model B  
North American 1.544 MBps T1  
International 2.048 MBps AMI  
ANSI T1.413, Issue II – T1 (AMI) NEXT  
ANSI T1.413, Issue II – EC ADSL downstream NEXT  
ANSI T1.413, Issue II – FDM downstream FEXT (9kft, 26 ga)  
ITU Standard for G. Lite – EC ADSL downstream NEXT

### **16.3.4 Multi Tone Generator**

This section is used to generate a series of discrete tones. Its main application is to generate either the shaped noise called for in both the ETSI ISDN and HDSL recommendations or the 10 discrete tones called for in the ANSI ADSL Technical recommendation Annex “G”.

Noise: Shaped to either ETSI ISDN, ETSI HDSL or FTZ 1TR 220

Level: -40.0 to +20.0 dB relative to the published reference level

“10 Tone”: As per ANSI ADSL Technical recommendation Annex “G”

Level: -20.0 to +20.0 dB relative to the published reference level.

### **16.3.5 Impulses**

Types: This generator produces 7 different impulses. 4 are standard multi-level (unipolar + & -, bipolar, 3-level) , 2 are complex as per ANSI ADSL Technical recommendation Annex “C”, and one is the ETSI Cook pulse.

Timing: The duration of the 4 multi-level impulses can be varied between 22 and 120 microseconds in 2 microsecond steps.



## ***Specifications***

---

Levels:

Multi-level:	0.5 to 100.0 mVolts, 0.1 mV steps
ANSI:	5.0 to 100.0 mVolts, 0.1 mV steps.
Cook:	-20 to +6 dB relative to the reference, 0.1 dB steps

### **16.3.6 Powerline Related Metallic Noise**

Type:	Dual tones as per ANSI T1.601
Level:	-15.0 to +9.0 dB relative to ANSI reference levels, 0.1 dB steps.

### **16.3.7 Longitudinal Noise**

Type:	Triangular waveform
Frequency:	50 or 60 Hz
Level:	0-60 Volts rms at 60 Hz. 0-50 Volts at 50 Hz, 1 volt steps
Injection:	Balanced transformer at 25-75% of loop length (DLS 400)

### **16.3.8 Externally Generated Signals**

In addition to the generators, this section conditions externally-generated signals, and applies them to the line.

Frequency:	50 Hz to 2.0 MHz at all levels up to -30 dBm. 1 kHz to 2.0 MHz at levels up to -10 dBm.
Input:	50 ohm BNC
Output:	External signals are summed with other noise signals and injected through the standard output circuit.

## **16.4 Physical**

Construction:	Main chassis plus plug-in wireline modules.
Available slots:	27
Noise card slots:	2
Wireline modules:	24
Connectors:	Bantam jacks and 3-pin balanced CF.



## **16.5 IEEE 488 Remote Control:**

The unit can be controlled via an IEEE 488 interface. The unit supports the following functions:

- 1) Listener
- 2) Talker
- 3) Local Lockout
- 4) Serial Poll
- 5) Selective Device Reset
- 6) Bus Reset
- 7) Primary Addressing from 0 to 30

## **16.6 RS-232 Remote Control:**

The unit can be controlled via an RS-232 serial interface. The unit is configured with 9600 bps baud rate, no parity, 8 data bits per character, 1 stop bit and RTS/CTS hardware flow control.

## **16.7 Fuse**

Fuses: Type “T” 2A/250V SLOW BLOW (2 required, 5mmx 20mm).

## **16.8 Included:**

- 1) DLS 400 Chassis
- 2) DLS 400 Control Software
- 3) Manual
- 4) IEEE 488 shielded cable
- 5) RS-232 cable
- 6) Power cord
- 7) 2 fuses



### **16.9 Options**

National Instruments GPIB-PCII / ZZA interface card.

### **16.10 Electrical**

#### **16.10.1 AC Power**

Rated Input Voltage:	100-240VAC(±10%).
Rated Frequency:	50-60Hz.
Rated Power consumption:	140VA max.
Line Fuses:	Type “T” 2A/250V SLOW BLOW (2 required, 5mm x 20mm).

#### **16.10.2 On Simulated Wireline**

300 Volts maximum peak AC +DC voltage between:

Tip and Ring, or

Tip and Ground, or

Ring and Ground.

Maximum Current: 100 mA DC (absolute max of 150 mA)

### **16.11 Environmental**

Operating Temperature:	+10EC to +40EC.
Storage Temperature:	+10EC to +40EC.
Humidity:	90% R.H.(non-condensing) max.



## **16.12 Mechanical**

Weight: 28 kg

Dimensions: 194mm x 452mm x 494mm (H x W x D).

## **16.13 Operating Conditions**

In order for the unit to operate correctly and safely, it must be adequately ventilated. The DLS 400 contains ventilation holes for cooling. Do not install the equipment in any location where the ventilation is blocked. For optimum performance, the equipment must be operated in a location that provides at least 10 mm of clearance from the ventilation holes. Blocking the air circulation around the equipment may cause the equipment to overheat, compromising its reliability.

## **17. SAFETY**

---

### **17.1 Information**

#### **17.1.1 Protective Grounding (Earthing)**

This unit consists of an exposed metal chassis that is connected directly to ground (earth) via a power cord. The symbol used to indicate a protective grounding conductor terminal in the equipment is shown in this section under “symbols”.

#### **17.1.2 Before Operating the Unit**

- Inspect the equipment for any signs of damage, and read this manual thoroughly.
- Become familiar with all safety symbols and instructions in this manual to ensure that the equipment is used and maintained safely.

**WARNING:** To avoid risk of injury or death, ALWAYS observe the following precautions before operating the unit:

- Use only a power supply cord with a protective grounding terminal.
- Connect the power supply cord only to a power outlet equipped with a protective earth contact. Never connect to an extension cord that is not equipped with this feature.
- Do not willfully interrupt the protective earth connection.

**CAUTION:** When lifting or handling the unit do not touch the cooling fan, which is located on the bottom of the chassis towards the front-right front corner. The unit may be lifted by utilizing the space beneath the chassis away from the cooling fan.



### **17.1.3 Supply Power Requirements**

The unit can operate from any single phase AC power source that supplies between 100V and 240V (±10%) at a frequency range of 50 Hz to 60 Hz. For more information, see the specifications section of this manual.

**WARNING:** To avoid electrical shock, do not operate the equipment if it shows any sign of damage to any portion of its exterior surface, such as the outer casting or panels.

### **17.1.4 Main Fuse Type**

The fuse type used is specified in the specifications section of this manual.

### **17.1.5 Connections to a Power Supply**

In accordance with international safety standards, the unit uses a three-wire power supply cord. When connected to an appropriate AC power receptacle, this cord grounds the equipment chassis.

### **17.1.6 Operating Environment**

To prevent potential fire or shock hazard, do not expose the equipment to any source of excessive moisture.

### **17.1.7 Class of Equipment**

The unit consists of an exposed metal chassis that is connected directly to earth via the power supply cord. In accordance with the HARMONIZED EUROPEAN STANDARD EN 61010-1 1993, it is classified as a Safety Class I equipment .

### **17.2 Instructions**

The following safety instructions must be observed whenever the unit is operated, serviced or repaired. Failing to comply with any of these instructions or with any precaution or warning contained in the Operating and Reference Manual is in direct violation of the standards of design, manufacture and intended use of the equipment.

CONSULTRONICS LTD. assumes no liability for the customer's failure to comply with any of these requirements.

#### **17.2.1 Before Operating the Unit**

- Inspect the equipment for any signs of damage, and read the Operating and Reference Manual thoroughly.
- Install the equipment as specified in the relevant section of this manual.
- Ensure that the equipment and any devices or cords connected to it are properly grounded.


#### **17.2.2 Operating the Unit**

- Do not operate the equipment when its covers or panels have been removed.
- Do not interrupt the protective grounding connection. Any such action can lead to a potential shock hazard that could result in serious personal injury.
- Do not operate equipment if an interruption to the protective grounding is suspected. Ensure that the instrument remains inoperative.
- Use only the type of fuse specified.
- Do not use repaired fuses and avoid any situation that could short circuit the fuse.
- Unless absolutely necessary, do not attempt to adjust or perform any maintenance or repair procedure when the equipment is opened and connected to a power source at the same time. Any such procedure should only be performed by qualified service professional.
- Do not attempt any adjustment, maintenance or repair procedure to the equipment if first aid is not accessible.


- Disconnect the power supply cord from the equipment before adding or removing any components.
- Operating the equipment in the presence of flammable gases or fumes is extremely hazardous.
- Do not perform any operating or maintenance procedure that is not described in the Operating and Reference Manual or the Service Manual.
- Some of the equipment's capacitors may be charged even when the equipment is not connected the power source.

### 17.3 Symbols

When any of these symbols appear on the unit, this is their meaning:

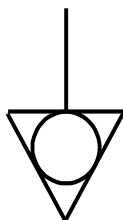

EQUIPOTENTIALITY-FUNCTIONAL  
EARTH TERMINAL

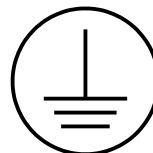

PROTECTIVE GROUNDING  
CONDUCTOR TERMINAL



CAUTION - REFER TO ACCOMPANYING DOCUMENTS

## Appendix A - NTERPRETATION OF LEVEL UNITS

---

This appendix discusses the relation between the simulator setting and the real noise it represents.

In all cases the objective is to choose a setting that corresponds to the reading of a level meter connected to the equipment. Since we know that the noise SOURCE is unchanged, the reading will only change according to the bandwidth and the impedance of the meter (designated the Load Impedance).

In Impairment modules the units used in setting levels are designed to give a compromise between commonly used units and those that are unambiguous.

There are three forms of Units that are used.

- 1) :V/√Hz - Is independent of the Load Impedance and the bandwidth of the measuring device. It therefore requires the most manipulation to be translated into a meter reading.
- 2) dBm/Hz - Is independent of the bandwidth of the meter but not of the impedance. Therefore, when using a setting of x dBm/Hz the Load Impedance must be previously defined.
- 3) dBm - Is related to both Load Impedance and bandwidth. When using a setting of x dBm the Load Impedance and the bandwidth must both have been previously defined.

Following is a set of examples on how to convert a unit to dBm, the most common readout of level meters.

- 1) :V/√Hz to dBm

For this example we will assume that the load impedance is 135 Ω and the bandwidth is 3 kHz.

Assume that the setting is 10 :V/√Hz :

$$\begin{aligned} V * V &= (:V/ \sqrt{\text{Hz}}) * (:V/ \sqrt{\text{Hz}}) * \text{Bandwidth} \\ &= (10\text{E-}6) * (10\text{E-}6) * 3000 \\ &= 3.00\text{E-}7 \end{aligned}$$

$$\begin{aligned}P(\text{load}) &= V * V / R \text{ watts} \\&= (3.00\text{E-}7) / 135 \text{ watts} \\&= 2.22\text{E-}9 \text{ watts}\end{aligned}$$

$$\begin{aligned}P(\text{ref}) &= 1\text{E-}3 \text{ watts} \\ \text{dBm} &= 10 * \text{LOG} [P(\text{load})/P(\text{ref})] \text{ dBm} \\&= 10 * \text{LOG} [(2.22\text{E-}9)/(1\text{E-}3)] \text{ dBm} \\&= -56.5 \text{ dBm}\end{aligned}$$

2)        dBm/Hz to dBm

Here we will assume that the bandwidth is 3000 Hz and the setting is -70 dBm/Hz.

$$\begin{aligned}\text{dBm} &= \text{dBm/Hz} + 10 * \text{LOG} (\text{bandwidth}) \text{ dBm} \\&= -70.0 + 10 * \text{LOG} (3000) \text{ dBm} \\&= -70.0 + 34.8 \text{ dBm} \\&= -35.2 \text{ dBm}\end{aligned}$$

Notes:

A) To change a level in :V/  $\sqrt{\text{Hz}}$  by a certain number of dB use the following formula:  
(Assume x is the amount to change the :V/  $\sqrt{\text{Hz}}$  setting by, and the dB change required is -6 dB.)

$$\begin{aligned}1) \quad x &= 10^{**} (y / 20) \\2) \quad &= 10^{**} (-6 / 20) \\3) \quad &= 0.50\end{aligned}$$

Therefore the original setting in :V/  $\sqrt{\text{Hz}}$  should be multiplied by 0.50 to give a change of -6 dB.

B) To change a level in dBm/Hz by a certain number of dB simply change the dBm/Hz setting by the required amount. An examination of the formula on the previous section will bear this out.

## ***Appendix A***

---

### **LOADING**

As can be seen from the above discussion the choice of loads plays a large part in the level that the meter will read.

One of 3 loads are used when calibrating Consultronics Impairments (Noise) generators. In all cases any wirelines in place are set to zero length. They are 50 Ohms, 67.5 Ohms, and one 135  $\Sigma$  resistor in parallel with one complex impedance as described in appendix 5.

These impairments are calibrated using a 50 Ohms load:

Crosstalk Noises

ADSL FEXT, ADSL NEXT, ADSL MODEL A, ADSL MODEL B, T1, E1 AMI, ADSL+HDSL

White Noise

Impulses

Complex Impulse A and B (used in ANSI ADSL testing)

These impairments are calibrated using a 67.5 Ohms load:

Crosstalk Noises

DSL, HDSL

Shaped Noises

ISDN (ETSI), HDSL (ETSI), FTZ

Impulses

3-LEVEL, COOK PULSE

and these are calibrated using a load of 135 Ohms in parallel with an ANSI Load. See appendix 5 for a description of the complex ANSI load.

Crosstalk Noises

T1.601

Dual Tones

Notes:

Consultronics has consistently used 50 Ohms when calibrating ADSL Model A and Model B noises, recommended for testing systems operating in a 2048 kbps environment. We

understand that this is a misinterpretation of the spec on our part. This leads to DLS 400(E) and NSA 400 units generating 6 dB too much for these two impairments only.

You are advised that if you are following an ANSI or ETSI recommendation that calls for calibrated noises of -49.4 dBm of model A noise, or -43.0 dB of model B noise, you should set the DLS 400, DLS 400E or NSA 400 to -55.4 or -49.0 dBm respectively.

## **Appendix B - DLS 200 MODE**

---

In February 1997 Consultronics released an enhancement to the DLS 400 that affects both the loops and the impairments generator. The effect of this addition is to allow users to obtain test results using a DLS 400 that are very close to test results using a DLS 200 and DLS 200H.

Before this, customers found that, for example, testing HDSL modems with a DLS 200H gave performance results that were up to 3 dB better than when the same equipment was tested using a DLS 400, with resulting confusion. The enhancement enables users to test using a “DLS 200 Compatible” mode if they wish. Of course the original “DLS 400” mode is still available so that you can obtain the same test results that you always got in the past using a DLS 400.

The enhancement can be retro-fitted if desired, to all DLS 400’s, and is standard on present production. This manual describes the DLS 400 with the enhancement included. The full enhancement involves changes to both the loops and the impairments generator.

DLS 400 mode is the default mode, so a user taking no special action will be using the original impairments and loops.



## Appendix C - MEASUREMENTS


### 1. Measurement of Wireline Simulators.

Data for the characteristics of 19, 22, 24 and 26 AWG lines were obtained from Bell System Technical Reference PUB 62310. This provides information on the line's attenuation FOR AN INFINITELY LONG LINE. Data for other wirelines are generally specified in terms of resistance, impedance, capacitance and conductance per unit length of line as it varies with frequency. This is easily converted into characteristics of an infinitely long line.

When measuring the response of a simulated line, it is of finite length, may be made up of several different gauges of wire and is usually terminated in a real load. There are several common ways to measure the amplitude response of electronic systems. Referring to the figure these are:

- 1) The amplitude of the TRANSFER FUNCTION from BB to CC.
- 2) Some Engineers include the source resistors in the system and measure from AA to CC.
- 3) Yet others measure using method 2, subtract 6dB from the attenuation and quote the result. This is called the INSERTION LOSS of the system.

For wireline measurement, method 3, the insertion loss method is standard.

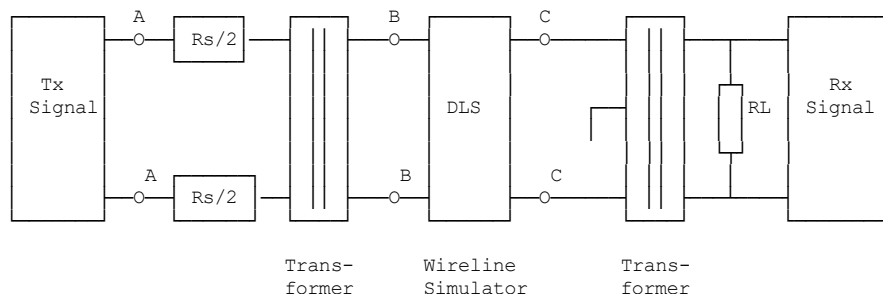

Attenuation of a wireline simulator is correct when used with balanced, metallic (differential mode) signals which are injected and received by transformers. See the figure above. The

## ***Appendix C***

---

transformers may be included with the Transmit (Tx) Signal generator and Receive (Rx) Signal device. The centre tap of the receive transformer need not be grounded, but may be if no other point to the between the transformers is grounded.

**THE USE OF UNBALANCED SIGNALS THROUGH THE DLS WILL USUALLY GIVE INCORRECT MEASUREMENTS.**

### **2. Common Errors**


- a) Coupling between input and output via the two transformers. When trying to measure attenuations of 60 dB or so, approximately 1/1000 of the input voltage, or 1/1000000 of the input power is present on the output. It is very easy for transformers--or even wires--placed close to each other to couple together far more than this. Take care to keep inputs and outputs separate.
- b) The use of a high impedance measuring device with no load from tip to ring at the receive end. This results in reflections due to a bad mismatch at the end of the line, and leads to very peculiar response curves.
- c) Ground injected directly onto the tip or ring of the wireline simulator. This almost always leads to a very noisy spectrum, with high background noise levels and often harmonically related spectrum 'spikes'.

## Appendix D - NOISE GENERATOR CONNECTIONS

The theory behind connecting up the impairments generator to the wireline is simple, but sometimes leads to confusion. When testing access equipment, the tests generally consist of:


- 1 A pair of modems, the equipment under test.
- 2 A wireline or wireline simulator, over which the modems communicate.
- 3 One, or sometimes two, impairments (noise) generators, which impair the transmission conditions on the wireline, and make it more difficult for the modems to train up and communicate.
- 4 A pair of error rate testers (test sets), which send data to and receive data from the modems. These may also perform call set up and termination, and always have some method of determining the quality of the received data. In many cases they are Consultronics Lynx testers.

This is shown here, diagrammatically, assuming one noise generator is used:

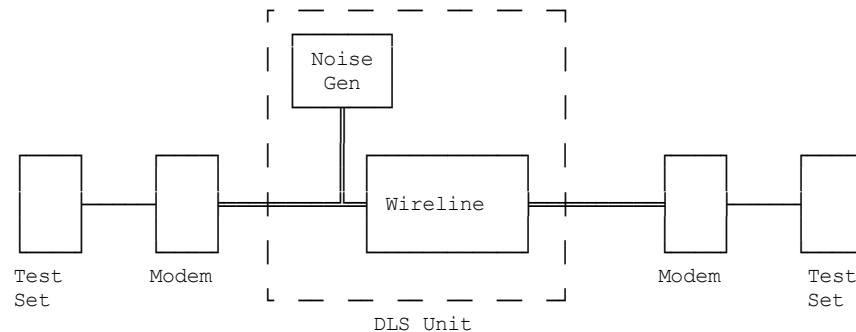

## ***Appendix D***


---

Simulators such as the Consultronics DLS 400(E), DLS 200 and DLS 100A can all contain both the wireline simulation and the noise generator, and is the equipment enclosed in the dotted lines. You do not have to worry about connecting wireline simulator and noise generator together because this is already done inside the unit. External to the unit, you must connect up the modems using a balanced interface. This balanced line is shown diagrammatically, both inside and outside the unit by the  lines. You just connect up using twisted pair wire—or better, screened twisted pair—from the modems to the DLS unit. It is best to keep the connecting wire short, since then it picks up less noise, and does not give unwanted reflections. Screened twisted pair is better because it picks up less noise, and there is less chance of unwanted crosstalk.


Note that when the noise generator is applied to the line it must not disturb the signals already on the line. Otherwise communication between the modems would be altered. For this reason, the noise generator has a high output impedance. Some people like to look at it as a current generator rather than a voltage generator. All present Consultronics generators have an output impedance of 4 kOhms or more.

Depending on the simulator type, connectors on the DLS may be an RJ-45 jack, a Siemens CF connector (which will also take banana plugs) a bantam jack, a terminal strip, or some combination of these. Note that the bantam jack goes under several names, such as mini-bantam, mini 310, bantam telco jack. For the DLS 400, there are bantam jacks front and back and CF connectors on the front. On side A of the unit, all 3 of these connectors are equivalent, and internally connected. You may connect to any or all of them. The same is true for side B. Of course, if you connect to two of them, this joins the two plugs electrically together.

Sometimes you may want to connect the noise generator from, say, an NSA 400 to a wireline simulator such as a DLS 400, if it is not equipped with its own impairments generator. This is easy. Connect the DLS 400, modems, and error rate testers together in the usual way. At the side of the DLS 400 where you want added impairments, plug in one end of your connecting wire to one of the spare connectors on the DLS 400. It is either a bantam jack or a CF connector. Plug the other end in to the NSA 400. The diagram shows the connections together with connections internal to the NSA.

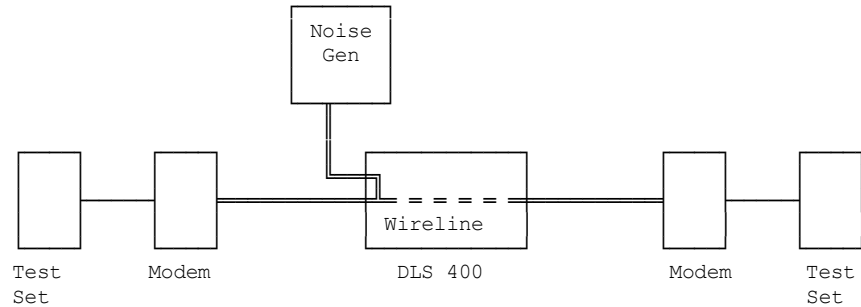

As an alternative, you could use the extra parallel connectors on the NSA to connect the line to the impairments generator like this:

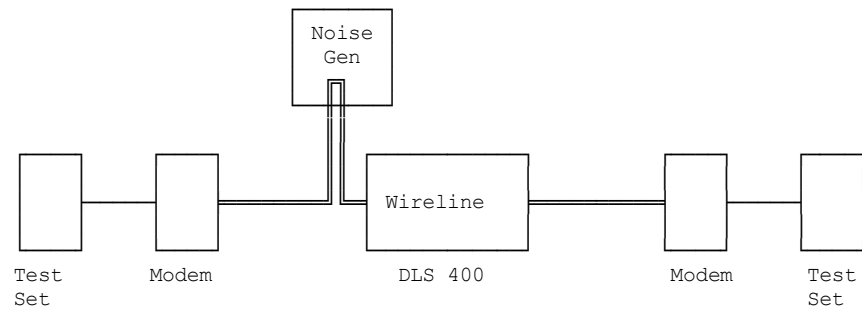


The diagram shows a DLS 400 as the wireline simulator, but it could equally well be a DLS 90, or any other Consultronics line simulator, or even real cable!

The various types of jacks and plugs referred to above are shown in the diagrams below.


## Appendix D

---

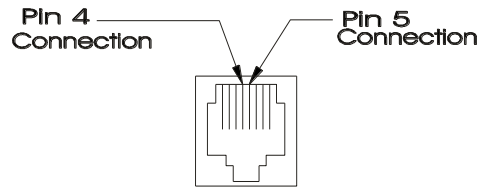

For the RJ-45 connectors, pins 4 and 5, the centre 2 pins are the ones which carry the signal. If you wish, you can use an RJ-11 plug.

A CF plug looks like the diagram at the right. There are 3 prongs spaced unevenly, as shown. You can use banana plugs if the correctly spaced CF connector is not available.

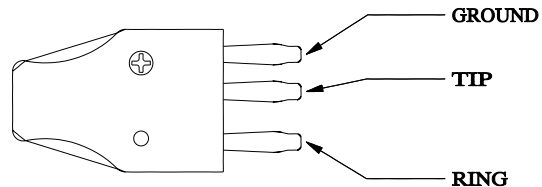


The bantam plug looks like the diagram shown on the right. Its corresponding jack on the front of the DLS 400, as seen on the front panel, is a hole, roughly 1.75" in diameter.



The NSA has 4 connectors on it, all wired in parallel. These are one RJ-45, one CF connector, and 2 bantam jacks. You plug in one end of your connecting wire-pair to one of the terminals on the DLS 400 at the side where you want to inject noise. The other end goes into a connector on the NSA 400. Then you use a second twisted pair wire to connect from one of the other terminals on the NSA 400 to the modem. The diagram below shows the connections, together with the connection internal to the NSA 400.

## Appendix E - COMMONLY ASKED QUESTIONS

- Q) How much will an impairments module affect the signals travelling along the wireline?
- A) It depends on the loop, the frequency, and the impedance of the modems being tested. For frequencies above 100 kHz, and with a Receiver / Transmitter that provides 135 Ohms, connecting the impairments generator reduces the signal at the receiver by 0.14 dB.
- Q) How can I disconnect the Impairments module completely from the simulated loop?
- A) Turn off all impairments.
- Q) What loads do you use to calibrate impairments.
- A) For ISDN and HDSL specified noises, we generally set the DLS to a loop length of 0, and provide a 67.5  $\Sigma$  load at the terminal where the generator is located. Then we measure the voltage. For two types of impairments specified by ANSI, (Crosstalk Noise type ANSI FULL BW, and Powerline Noise type ANSI) we use 135  $\Sigma$  in parallel with the ANSI load specified shown below:

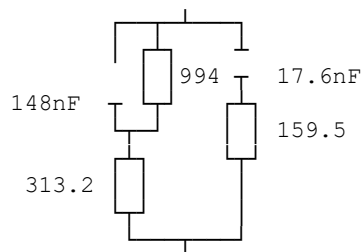

For ADSL impairments, which are specified on a 100 Ohm scale, we use a 50 Ohm resistor instead of the 67.5 Ohm resistor.

## *Appendix E*

---

- Q) How does wideband noise in dBm/Hz relate to total noise in dBm?  
A) See appendix 1.
- Q) Does the loop selected affect the noise level output by the Impairments module?  
A) Yes. Since impairments are injected from a 4.05 k $\Sigma$  impedance, the power injected on to the loop depends heavily on that impedance. Different loops have different impedances.
- Q) Why is the noise not at the calibrated level when injected on to a simulated line?  
A) No real loop provides the same load as the one used for calibrating the module, with the possible exception of the ANSI special load, and one of the ANSI loops.
- Q) Why do I have to use a balanced meter to measure noise levels from the DLS ?  
(What happens if I just use the meter that I already have?)  
A) The Transmitter/Receivers under test provide a balanced load, so we should measure them the same way. Most meters ground one connection. This upsets the simulation at the higher frequencies. Even if the meter is floating , it may be that capacitance to ground from one lead is more than the other, and this can lead to wrong answers.



---

## INDEX

\*PSC, 75  
ADSL A, 34  
ADSL B, 34  
ADSL FEXT, 34, 41, 170  
ADSL NEXT, 40, 170  
AMI, 34, 41, 63, 148, 170  
Common Command, 46, 52, 53, 73, 151  
Communication, 74, 75  
Crosstalk Generator A, 61  
Data format, 52  
Device Clear, 48, 75  
Downloadable Shapes, 69  
DSL NEXT, 33, 40, 141  
ESB, 48, 49, 50, 73, 76, 77, 78, 80  
ESER, 73, 74  
ESR, 7, 50, 51, 52, 73, 74, 76, 78, 79  
ETSI, 1, 31, 32, 33, 35, 41, 43, 44, 67, 151, 159, 170, 171  
ETSI BASIC, 35  
ETSI HDSL, 35, 41, 159  
Fuse, 5, 8, 45, 161, 165  
Fuses, 161, 162  
Grounding, 164  
HDSL NEXT, 33, 40, 141  
HDSL+ADSL, 33, 40, 61  
IEEE, 1, 3, 5, 6, 8, 10, 13, 20, 46, 47, 48, 49, 50, 51, 52, 53, 73, 75, 78, 79, 82, 151, 155, 161  
IFC, 48  
Installation, 10  
Interface Clear, 48  
ISDN, 20, 31, 32, 43, 151, 156, 159, 170, 179  
LED, 4, 7, 8, 49, 51, 74, 81, 82  
Longitudinal Noise, 31, 32, 33, 39, 43, 67, 160  
MAV, 48, 49, 50, 76, 77, 78, 80, 82  
Metallic Noise, 31, 39, 42, 66, 160  
Model A, 33, 41, 63, 150, 170  
Model B, 33, 147, 170  
MSS, 76, 77, 78  
Panel, 4, 5, 10, 11  
Powerline, 42, 66, 157, 160, 179  
Protective Grounding, 164  
Query, 73, 74, 75, 76, 77, 79  
Quiet, 68  
Remote LED, 4  
Reset, 75, 161  
RQS, 76, 77, 78  
Safety, 165  
Serial Poll, 78, 161  
Shaped Noise Generator, 41, 63, 64  
SRER, 76  
SRQ, 46, 47, 48, 49, 50, 74, 76, 78, 80, 82  
Standards, 151  
Status Byte, 48, 49, 73, 76, 78  
STB, 50, 73, 76, 78, 80  
Symbols, 167  
Synchronization, 74, 75, 77, 80  
T1.601, 31, 33, 36, 40, 61, 140, 151, 156, 158, 160, 170  
T1E1, 31  
Warranty, 2  
White Noise Generator, 41, 64, 157  
Wireline, 1, 8, 156, 160, 162, 173, 175, 177